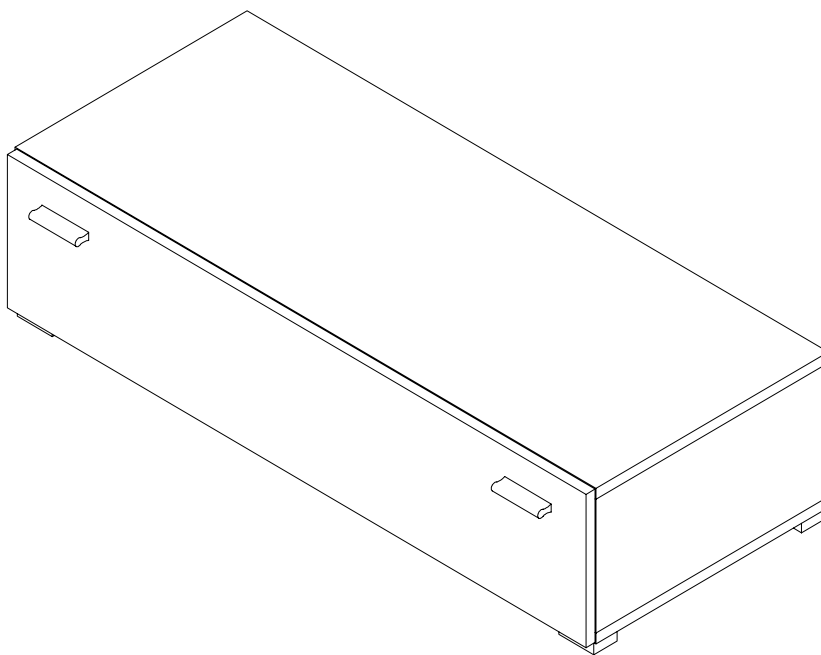 




"HAPPY / ROUND" Unterteil 100cm



Montageanleitung



Handleiding voor de montage



Montaj talimati



Istruzioni di montaggio



Montážní návod



Instrucțiuni de montaj



Assembly instructions



Instrukcja montazu



Инструкция по сборке



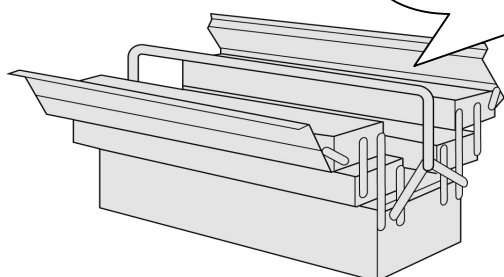 
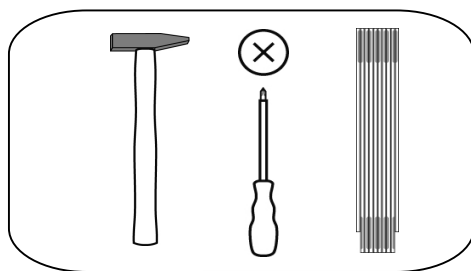 
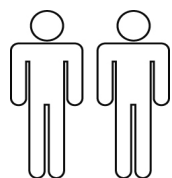
Notice de montage



Szerelési útmutató



Návod na montáž



Name • Nom • Nome • Naam • Nazwa • Jméno • Názov • Név • Denumire • Isim • Название

HAPPY / ROUND

Typ • Type • Tip • Típus • Тіро • Тип

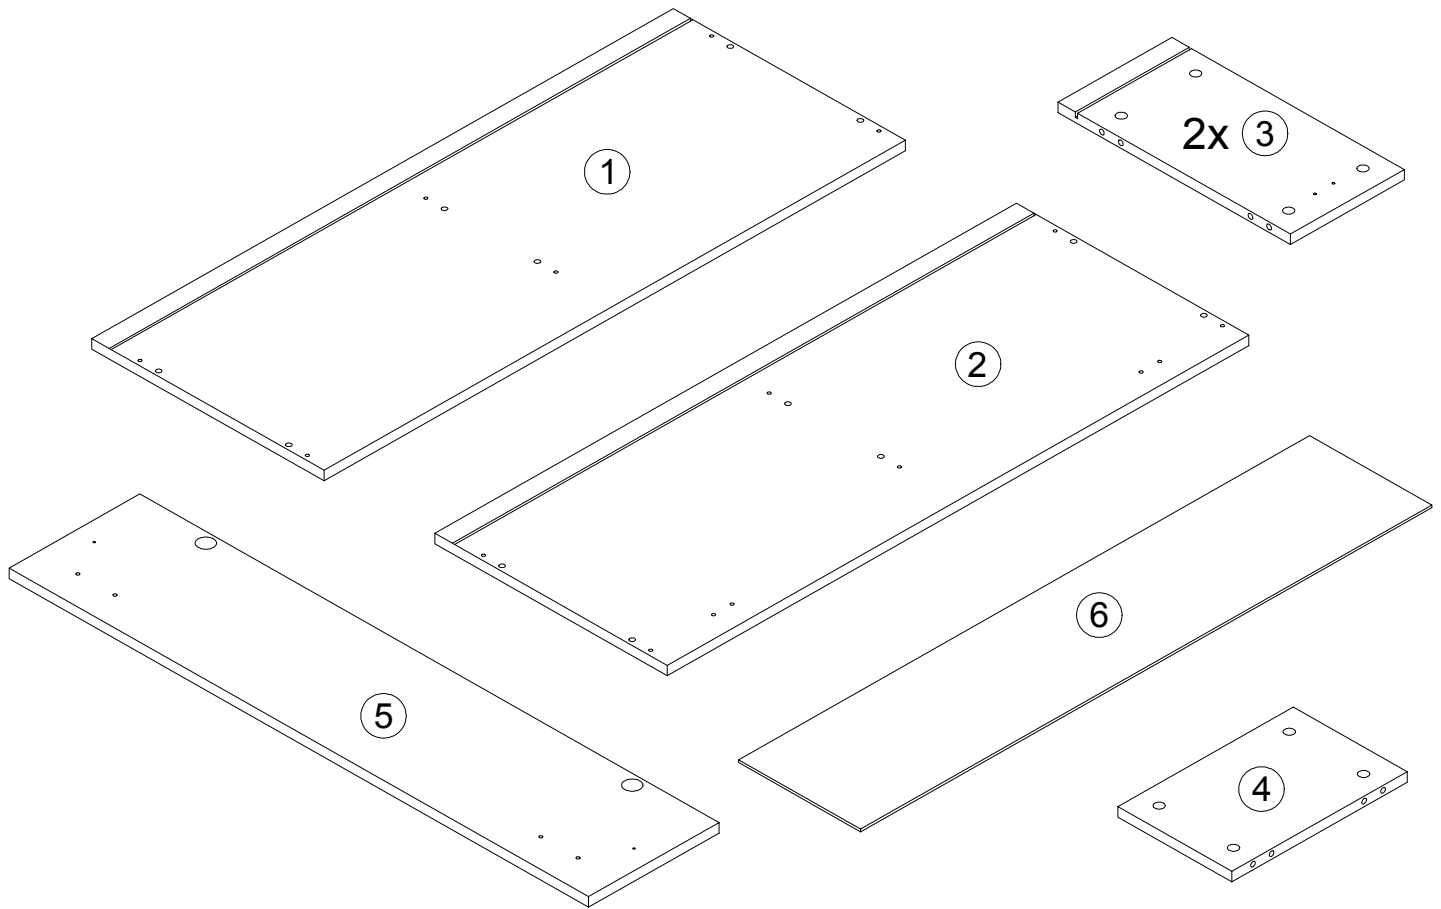 
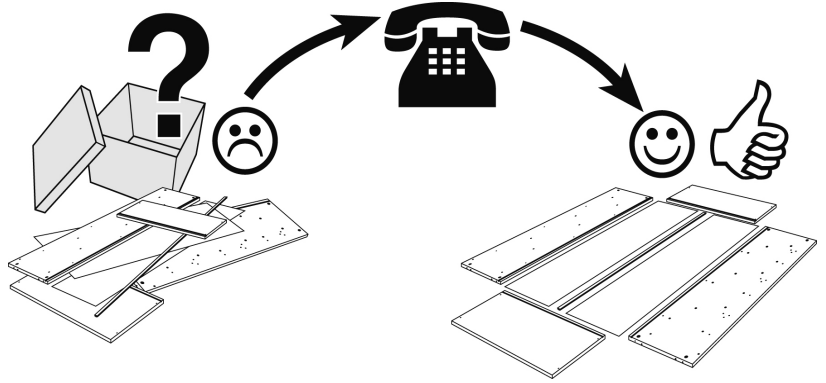 
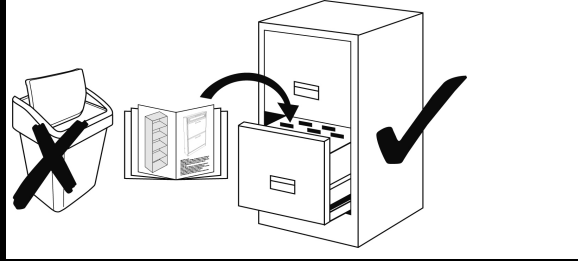 
TV-Unterteil 100cm

 
 
 
 
 
 
 
 


 


 
 
Nr. • No. • N° • Номер • Č • Sz

770 551 / 769 481 // 665 675 / 636 941



Walnuss-Schwarz / Weiß-Weiß / Weiß-Schwarz



A1 	B1 	C1  8x30	E10  2 mm	F16  Kr.0 mm	K15  60x40x23	L1 	M5  BA 64mm
12	12	12	2	2	5	4	2
N1  4,0 x 30	N2  2,7 x 20	P2  3,5 x 13	P10  3,5 x 13 kl. Kopf	P14  3,5 x 22	S1 	W4 	
6	3	4	8	10	12	2	

