



Lotus

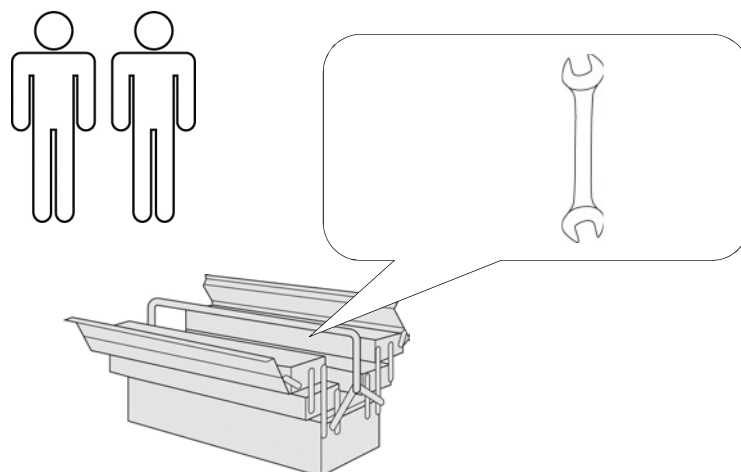

- | | |
|-----------------------------|----------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (NL) Handleiding voor de montage |
| (CZ) Montážní návod | (IT) Istruzioni di montaggio |
| (RO) Instrucțiuni de montaj | (RU) инструкция по сборке |
| (PL) Instrukcja montażu | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (TR) Montaj talimati |

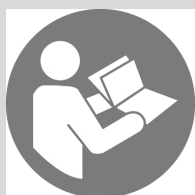

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название



Lotus DB

Nr. • No. • N° • Номер • Č • Sz

SH55

Typ • Type • Tip • Típus • Tipo
Тип

OHNE

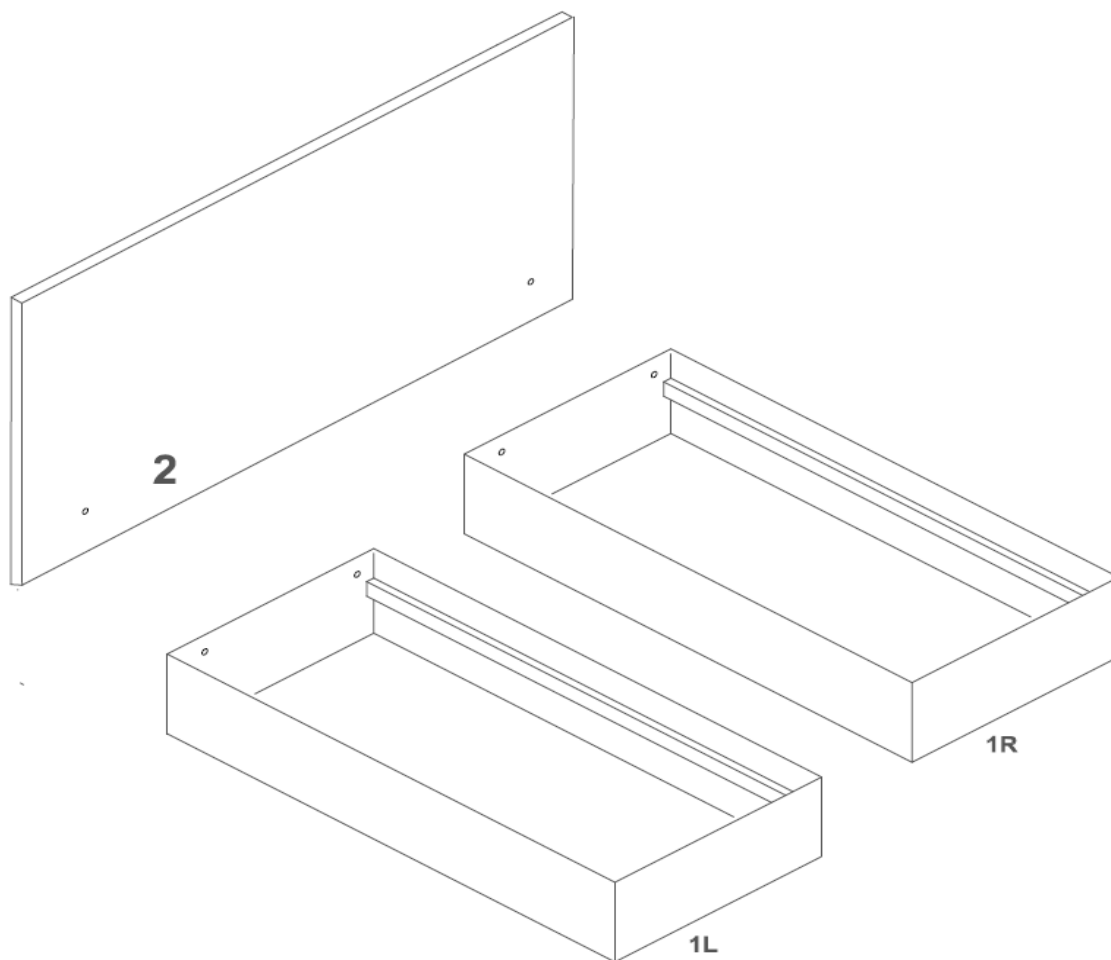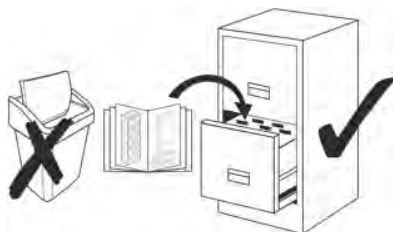

A	B	C	D	E	F	G	H
1x 6x45	1x M6	1x M6	1x M6	4x	4x 8x60	4x M8	4x M8

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название



Lotus DB

Nr. • No. • N° • Номер • Č • Sz

SH55


Typ • Type • Tip • Típus • Tipo
Тип


LARO

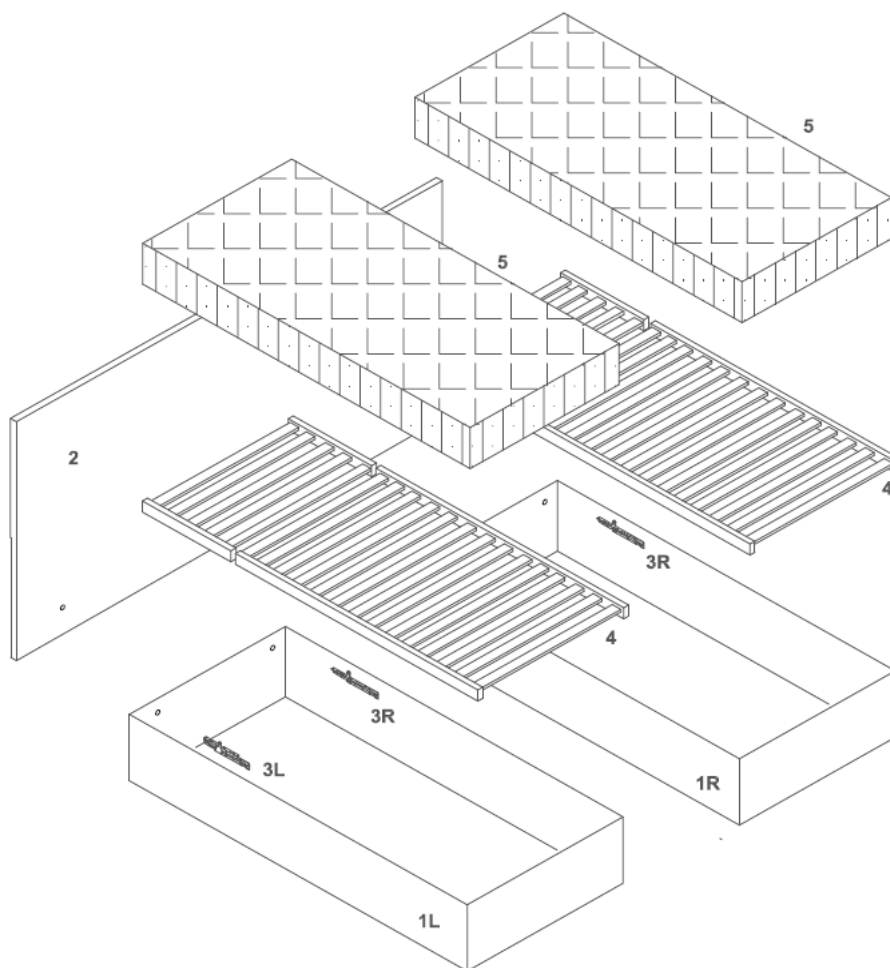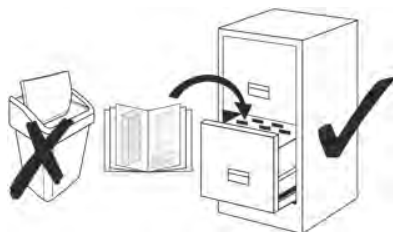


A	B	C	D	E	F	G	H
1x 6x45	1x M6	1x M6	1x M6	4x	4x 8x60	4x M8	4x M8

 


A	B	C	D	E
				
1 x 6x45	1 x M6	1 x M6	1 x M6	4 x

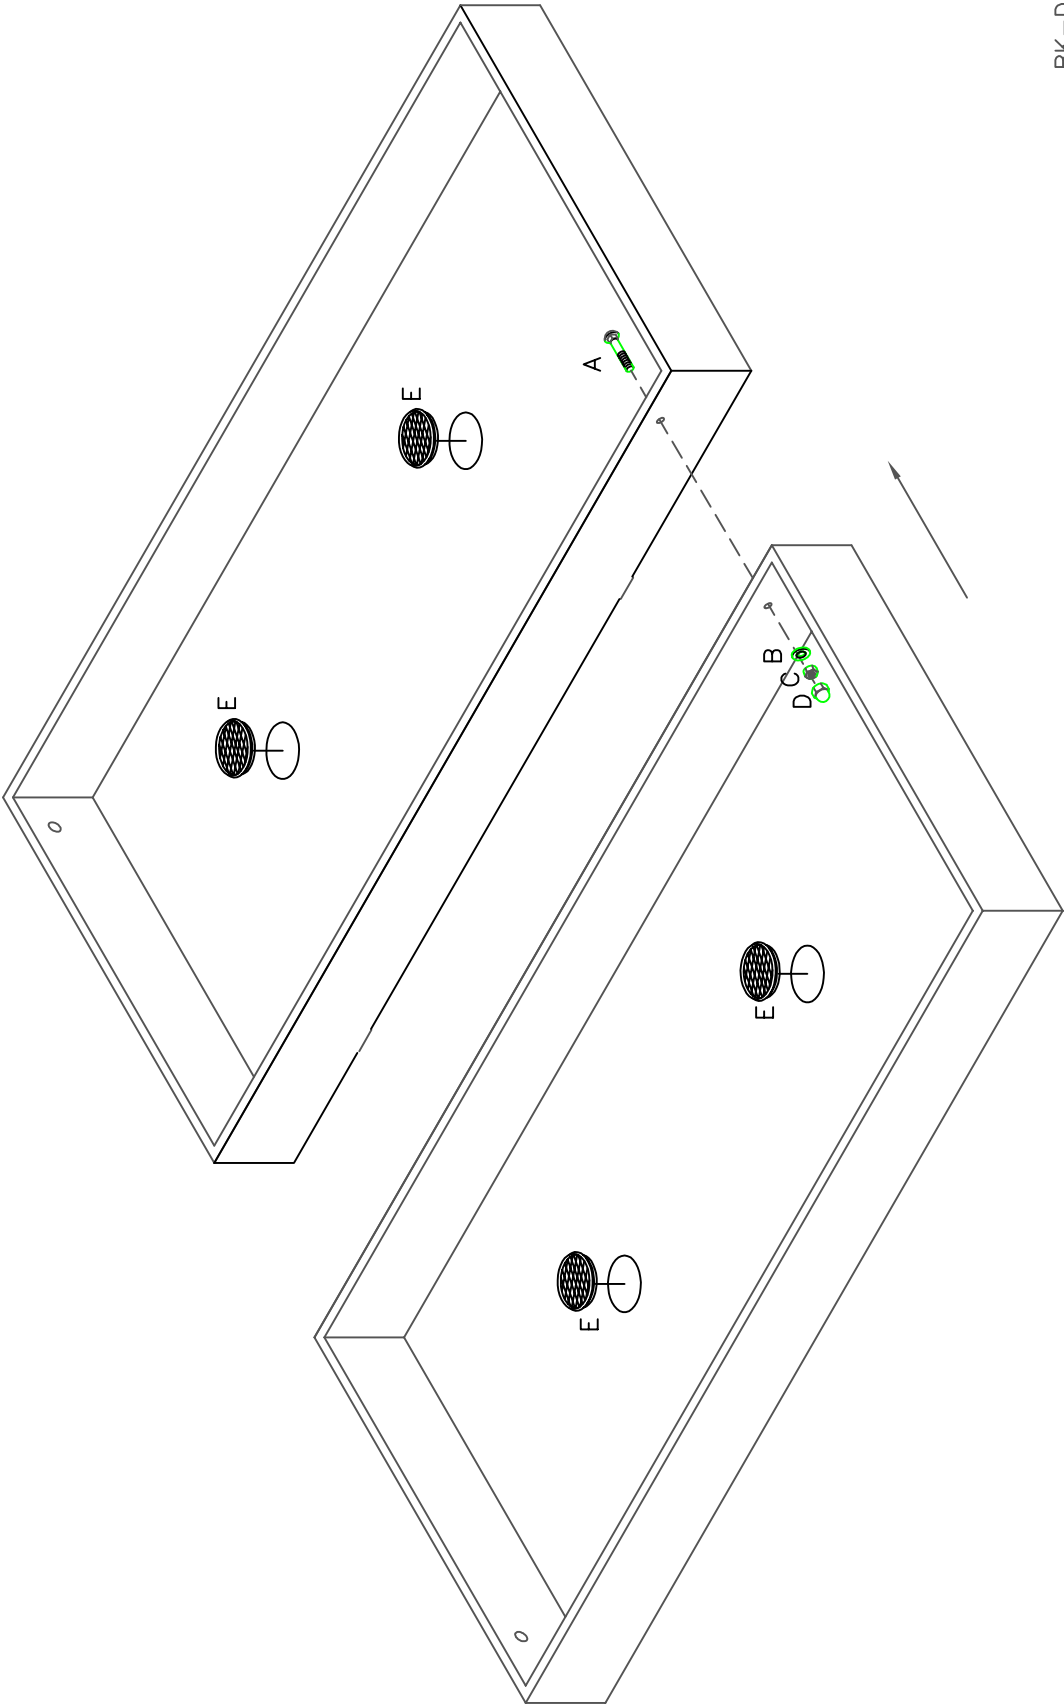

 

F		4x 8x60
G		4x M8
H		4x M8

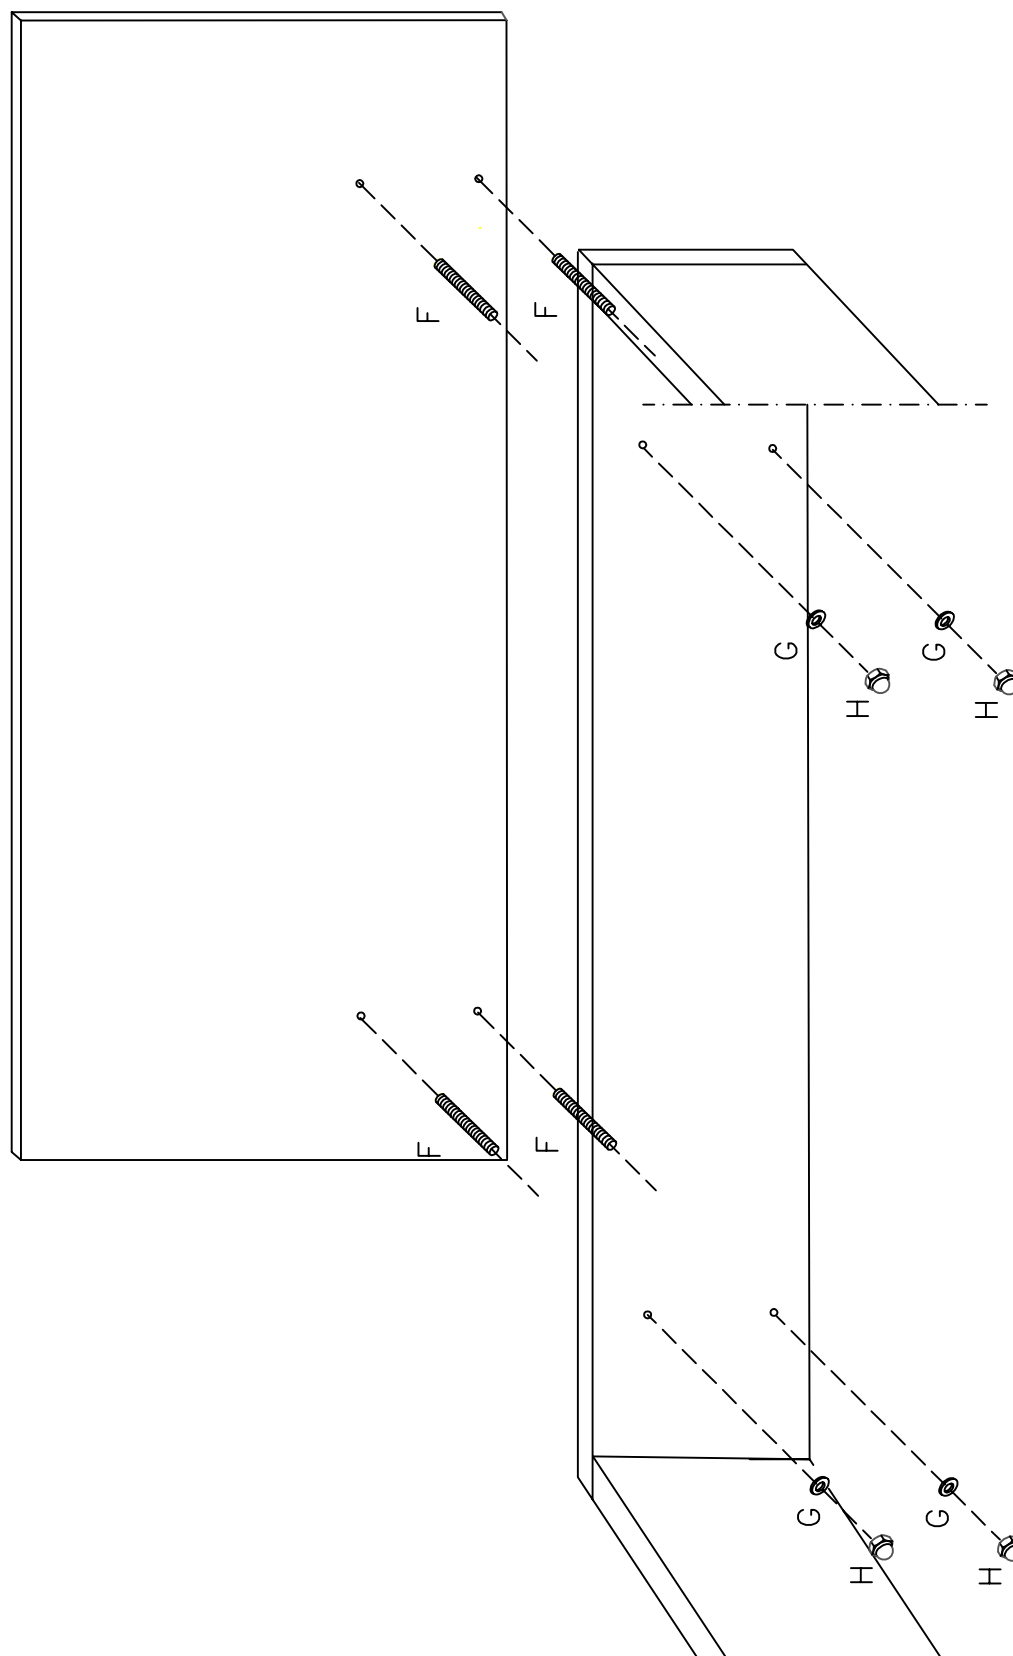

KT_4xGEW_8x60