 




GÖTEBORG 180 R

GÖTEBORG 180 R

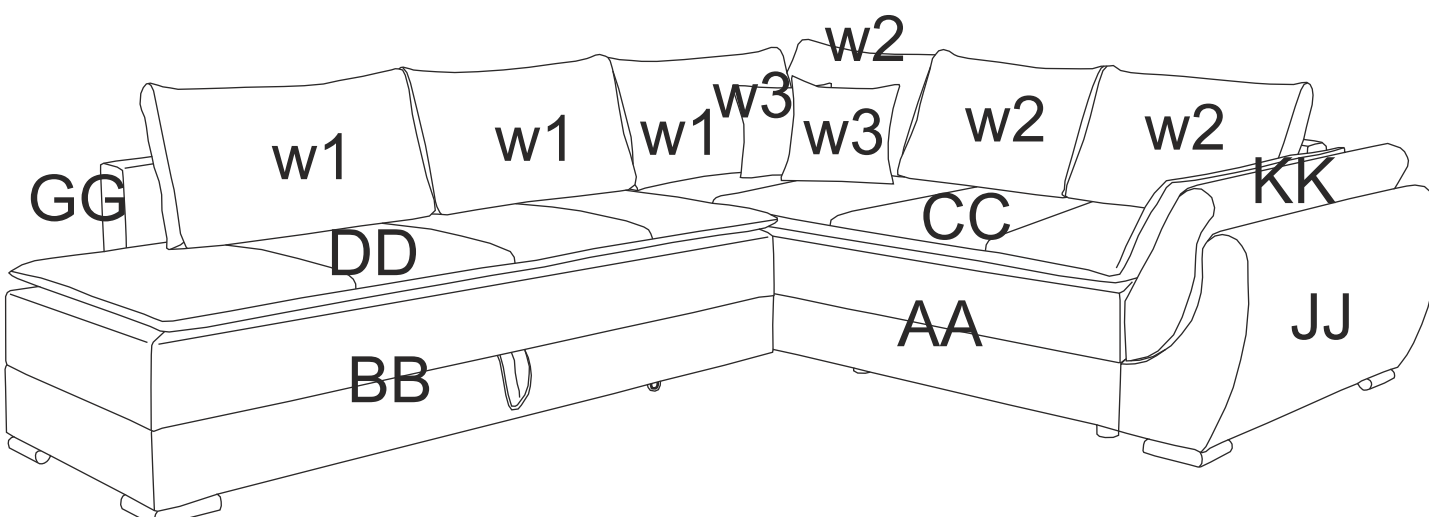 


- (DE) Montageanleitung
- (PL) Instrukcja montażu
- (NL) Handleiding voor de montage
- (GB) Assembly instructions
- (TR) Montaj talimatı
- (RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio
- (FR) Notice de montage
- (RO) Instrucțiuni de asamblare
- (SK) Montážny návod
- (CZ) Montážní návod
- (HU) Szerelési útmutató



Name - Nazwa - Naam - Name - Isim - название
Nome - Nom - Numele - Meno - Jméno - Neve

GÖTEBORG 180 R

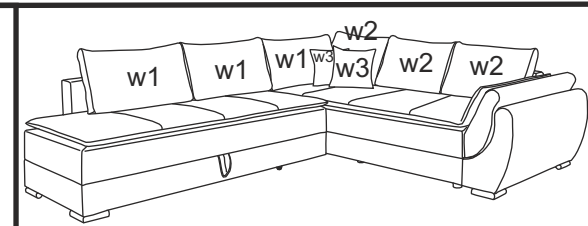


3x	4x	8x	3x	1x	2x	12x
28x (4x20)	19x (M6x30)	2x (M6x45)	6x (M8x60)	8x (M8x70)	4x (M8x80)	8x Ø6
22x Ø8	18x Ø8	16x M8	1x	5x	3x	3x
2x			1x	1x		





Service - Servis - Dienstverlening - Servis - Serwis - Сервисная служба - Servizio - Service
Serviciu - Služby - Szolgáltatás

COLLI 1	COLLI 2
 3x w1	 3x w2 2x w3
COLLI 3	COLLI 4


Ver. 11.08.22

     GÖTEBORG 180 R

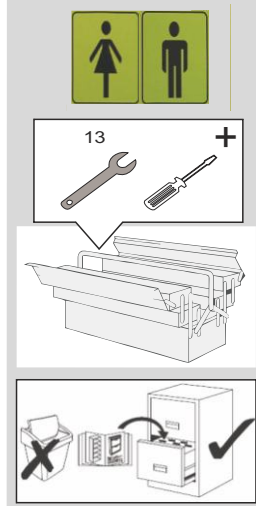


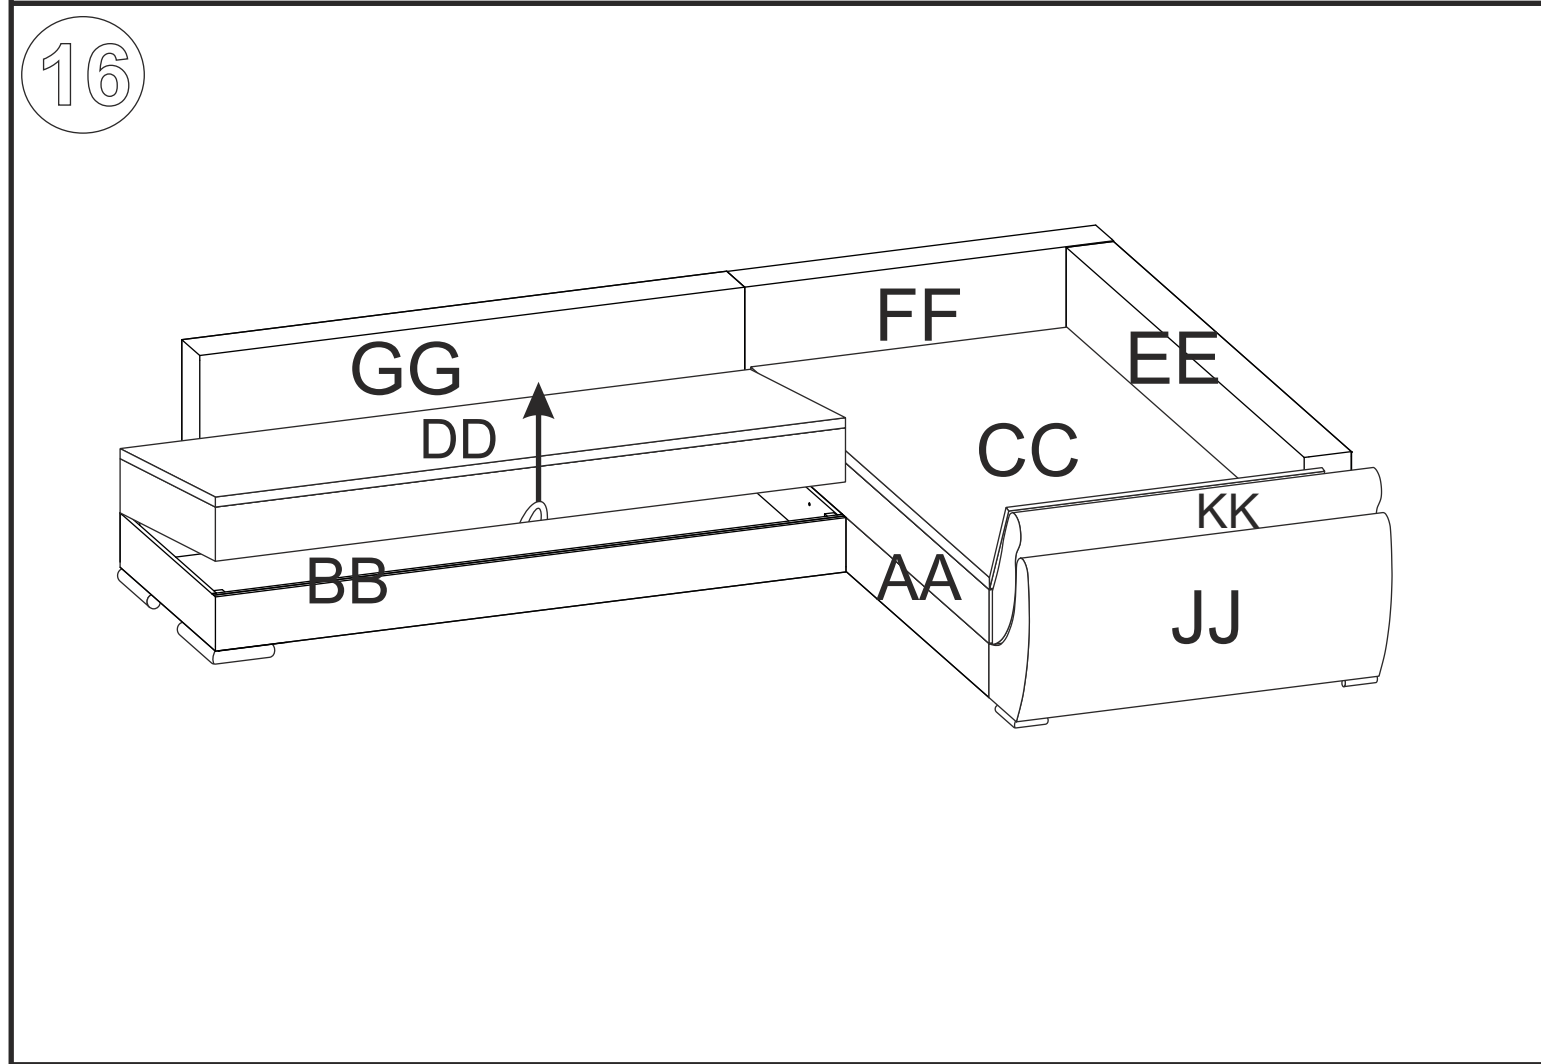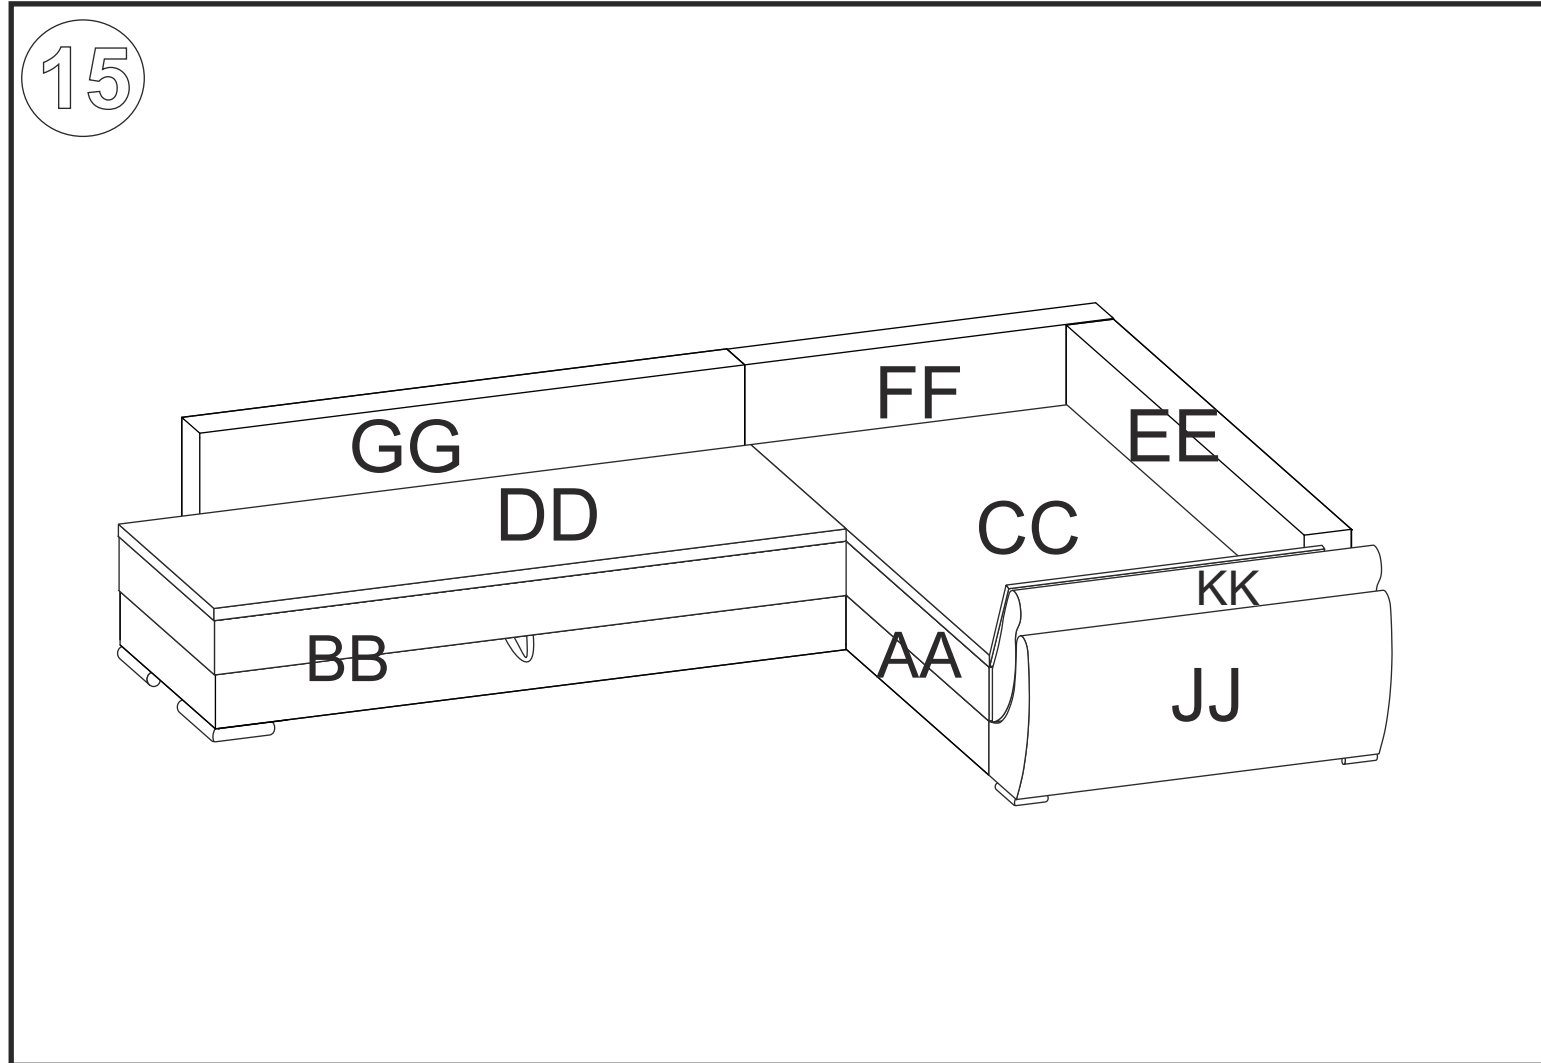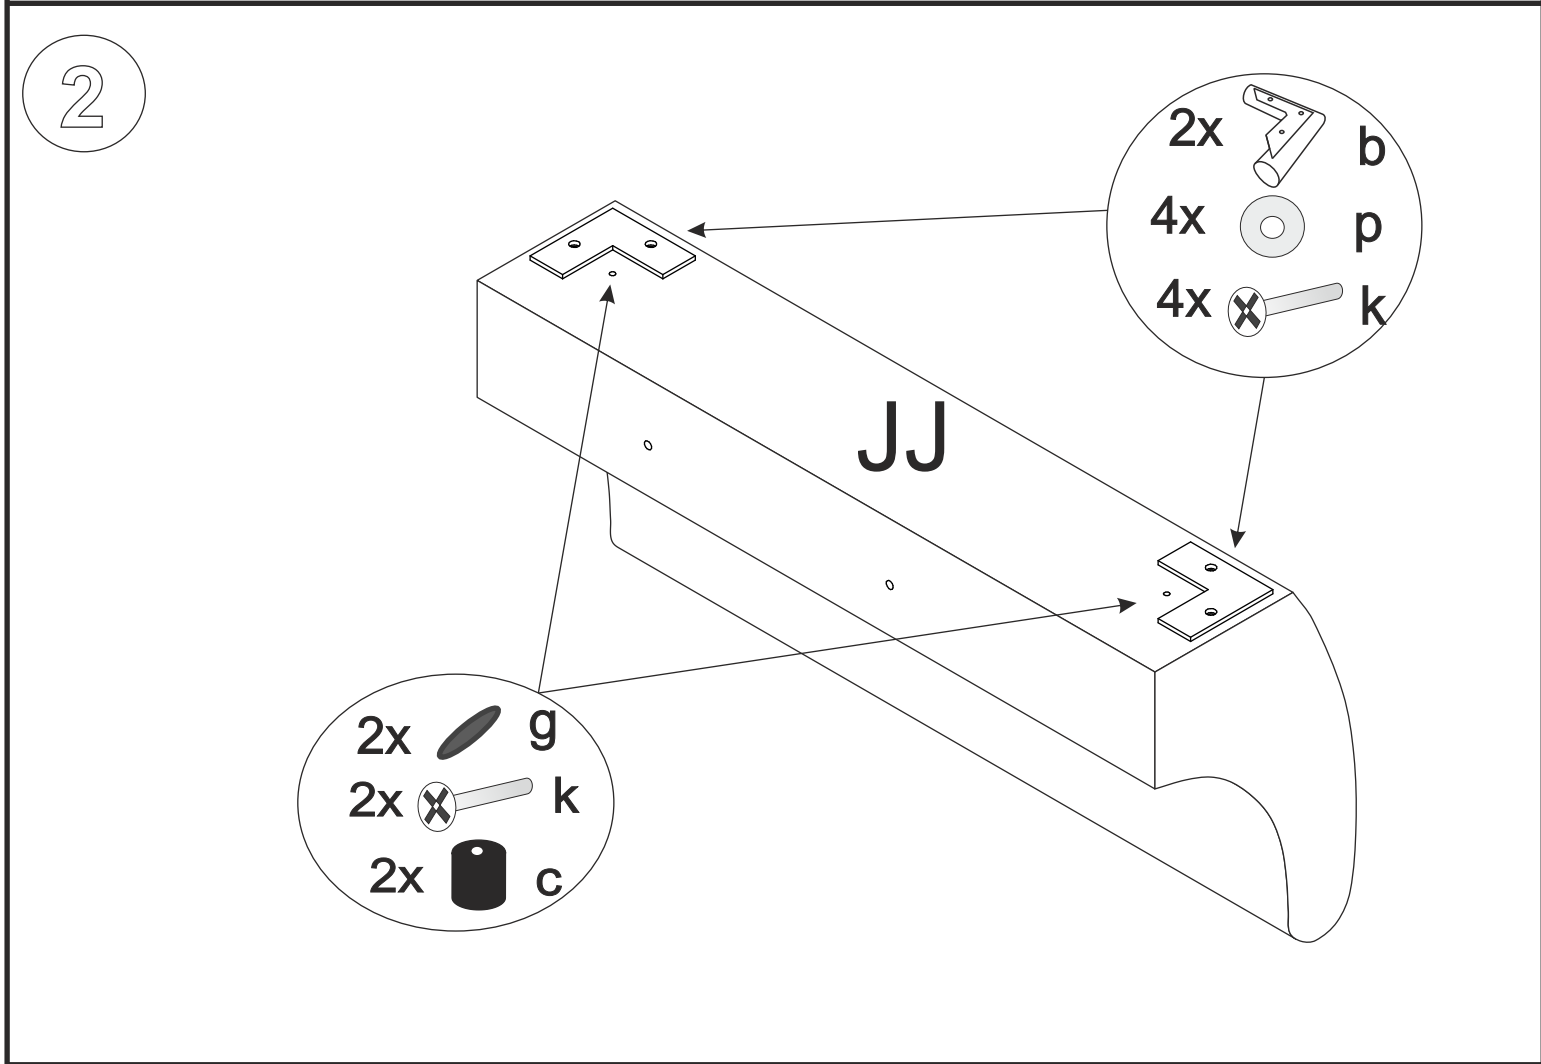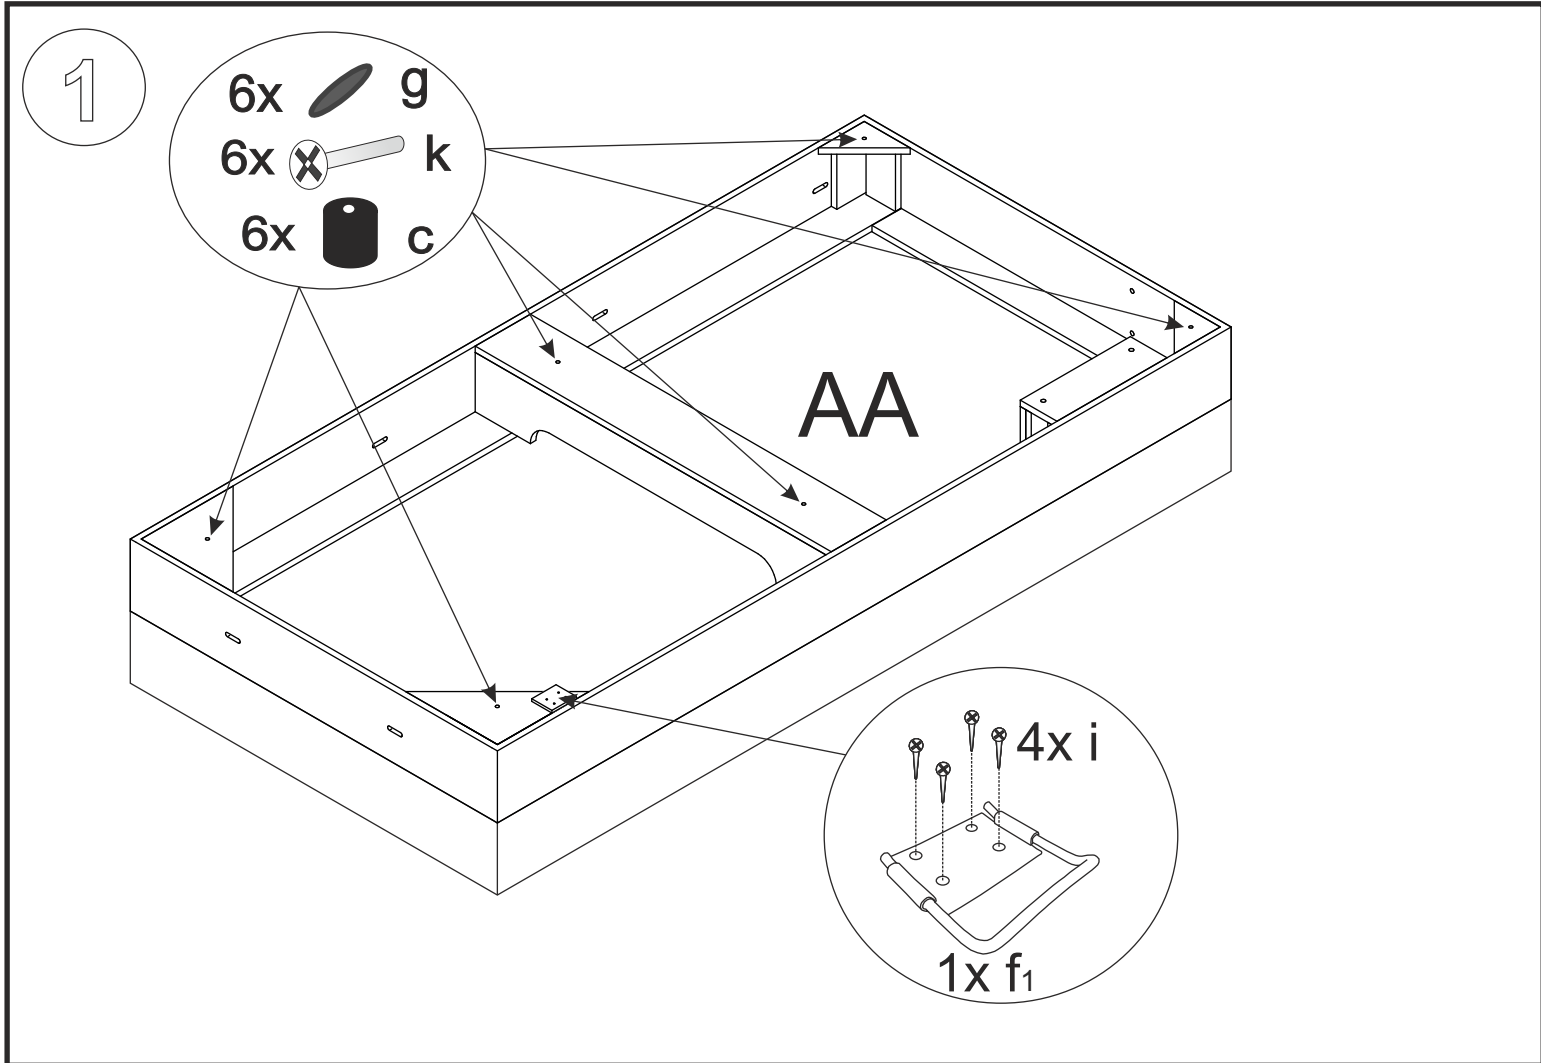


13

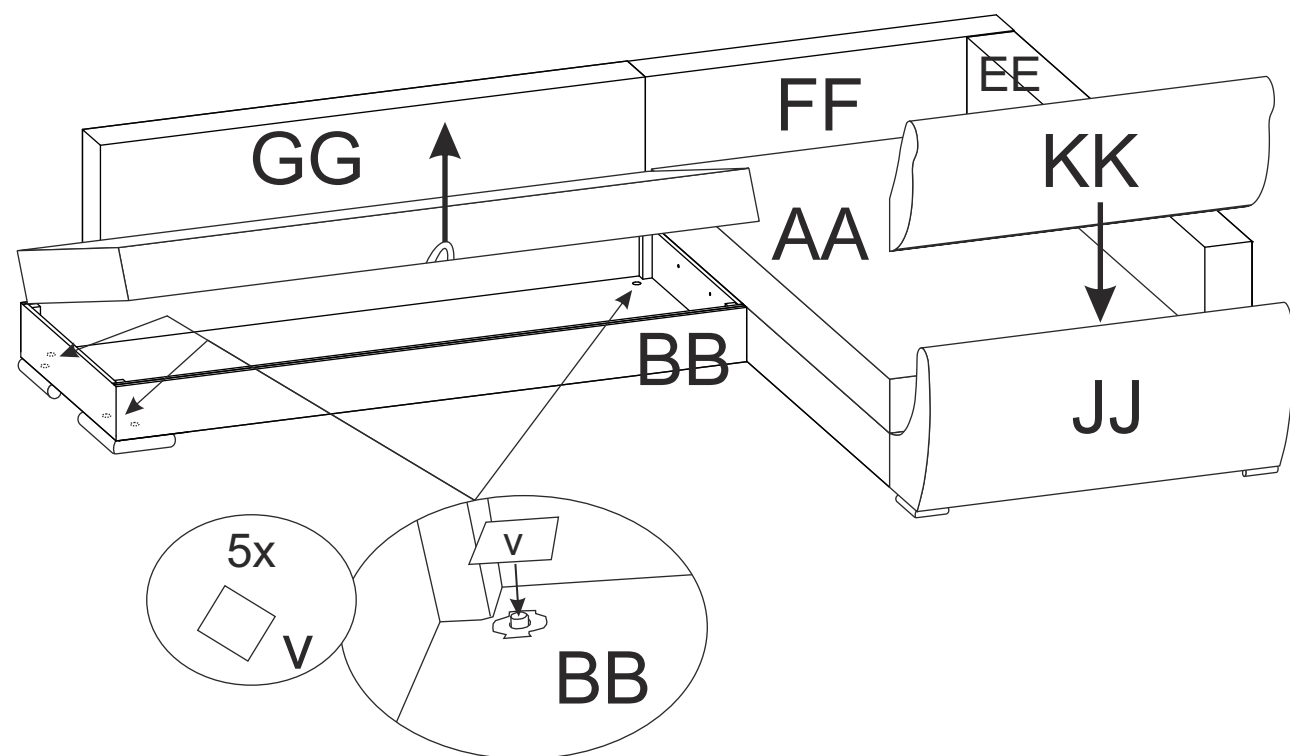 


14




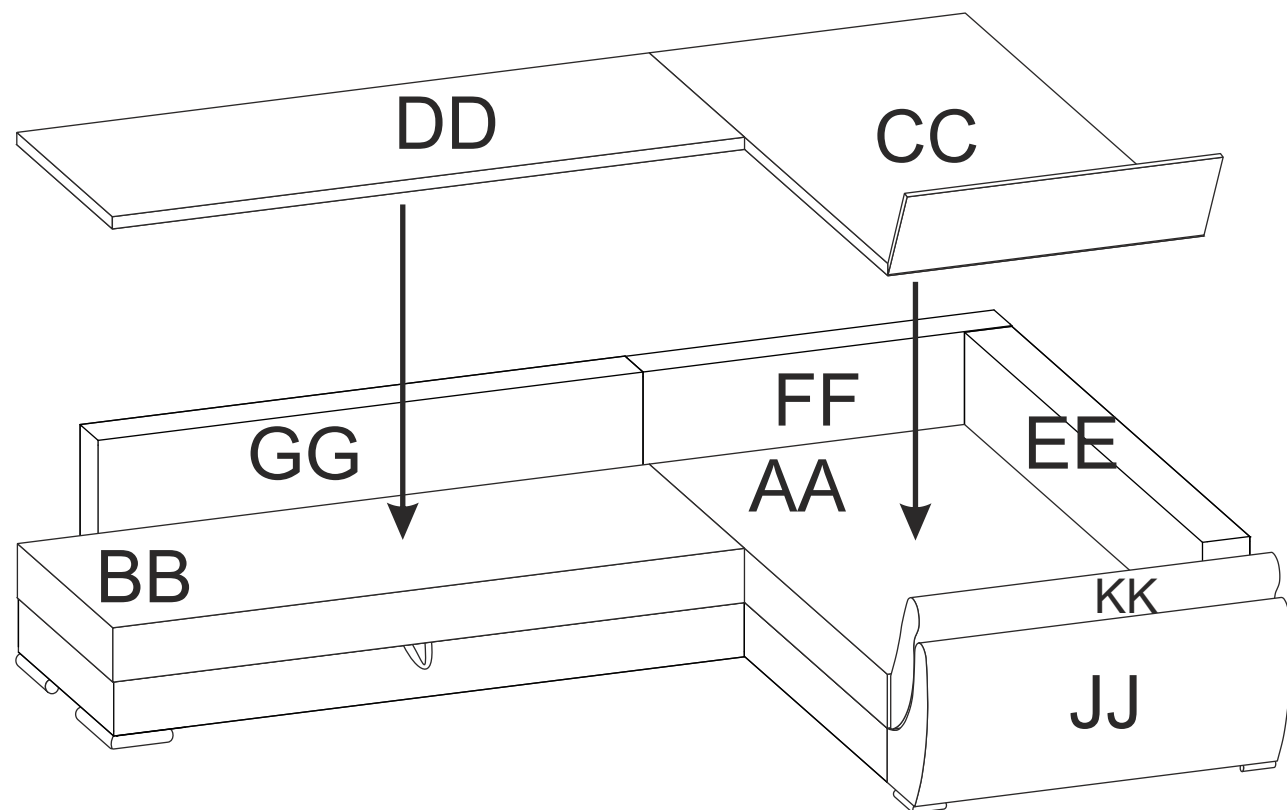 


3

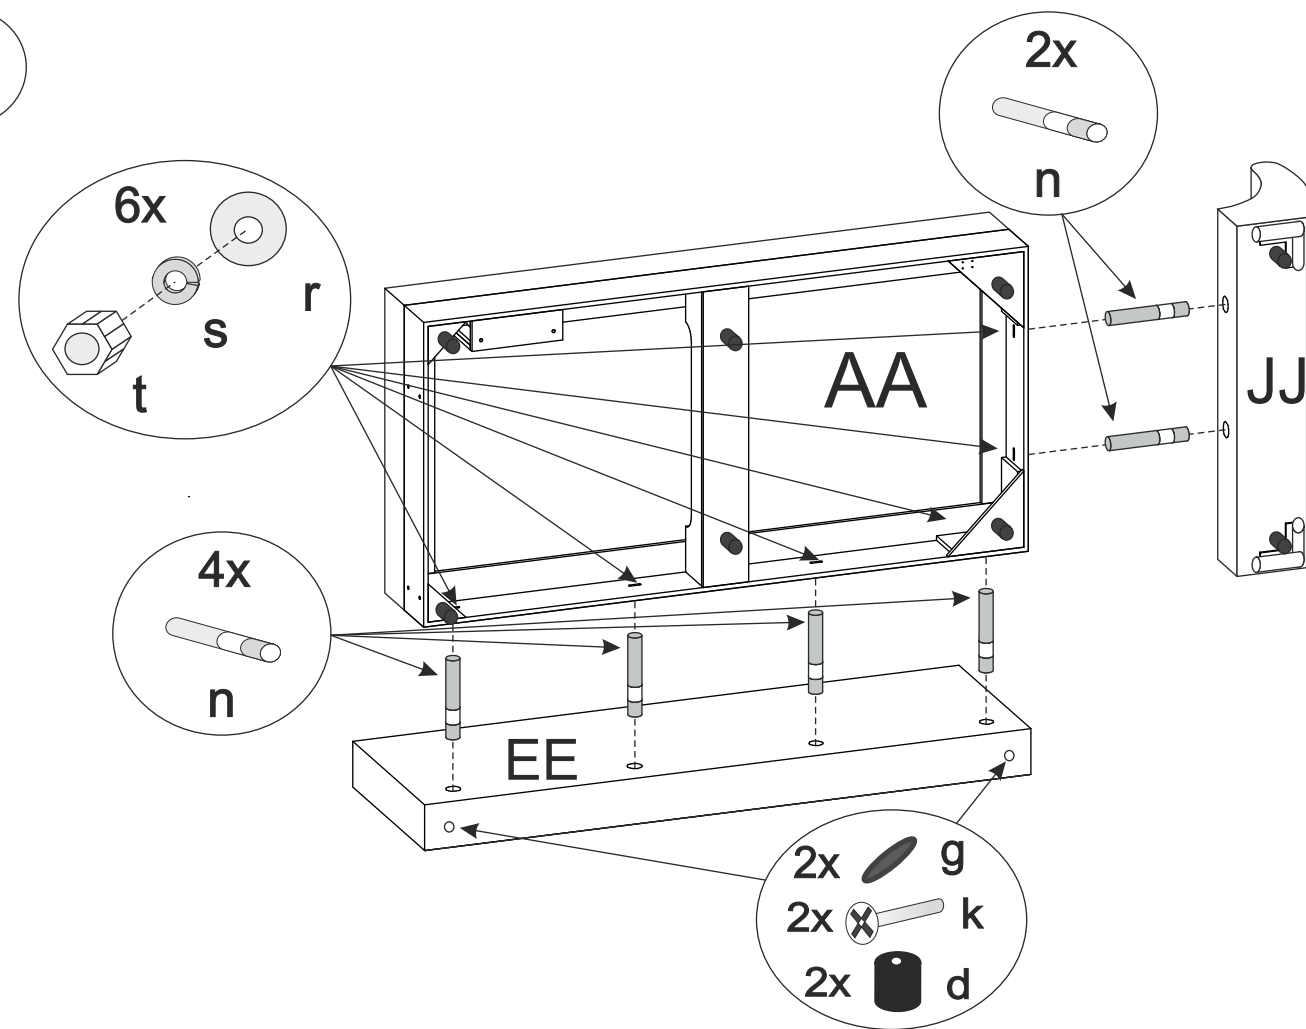 


4

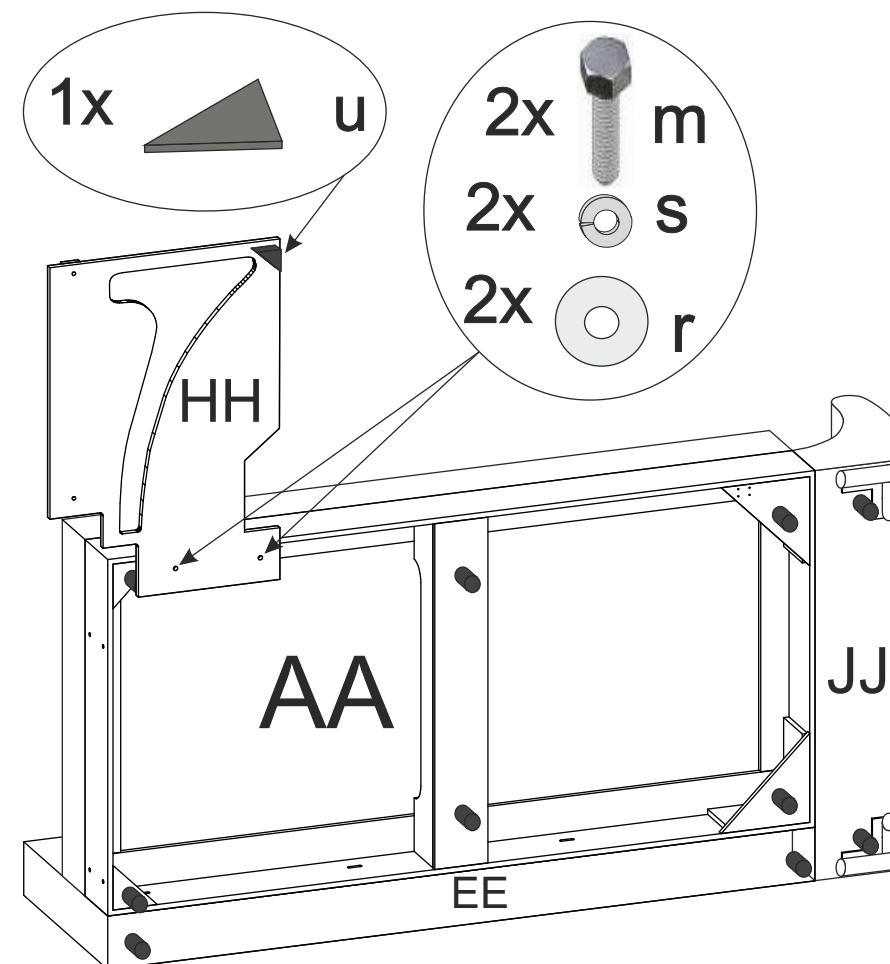 


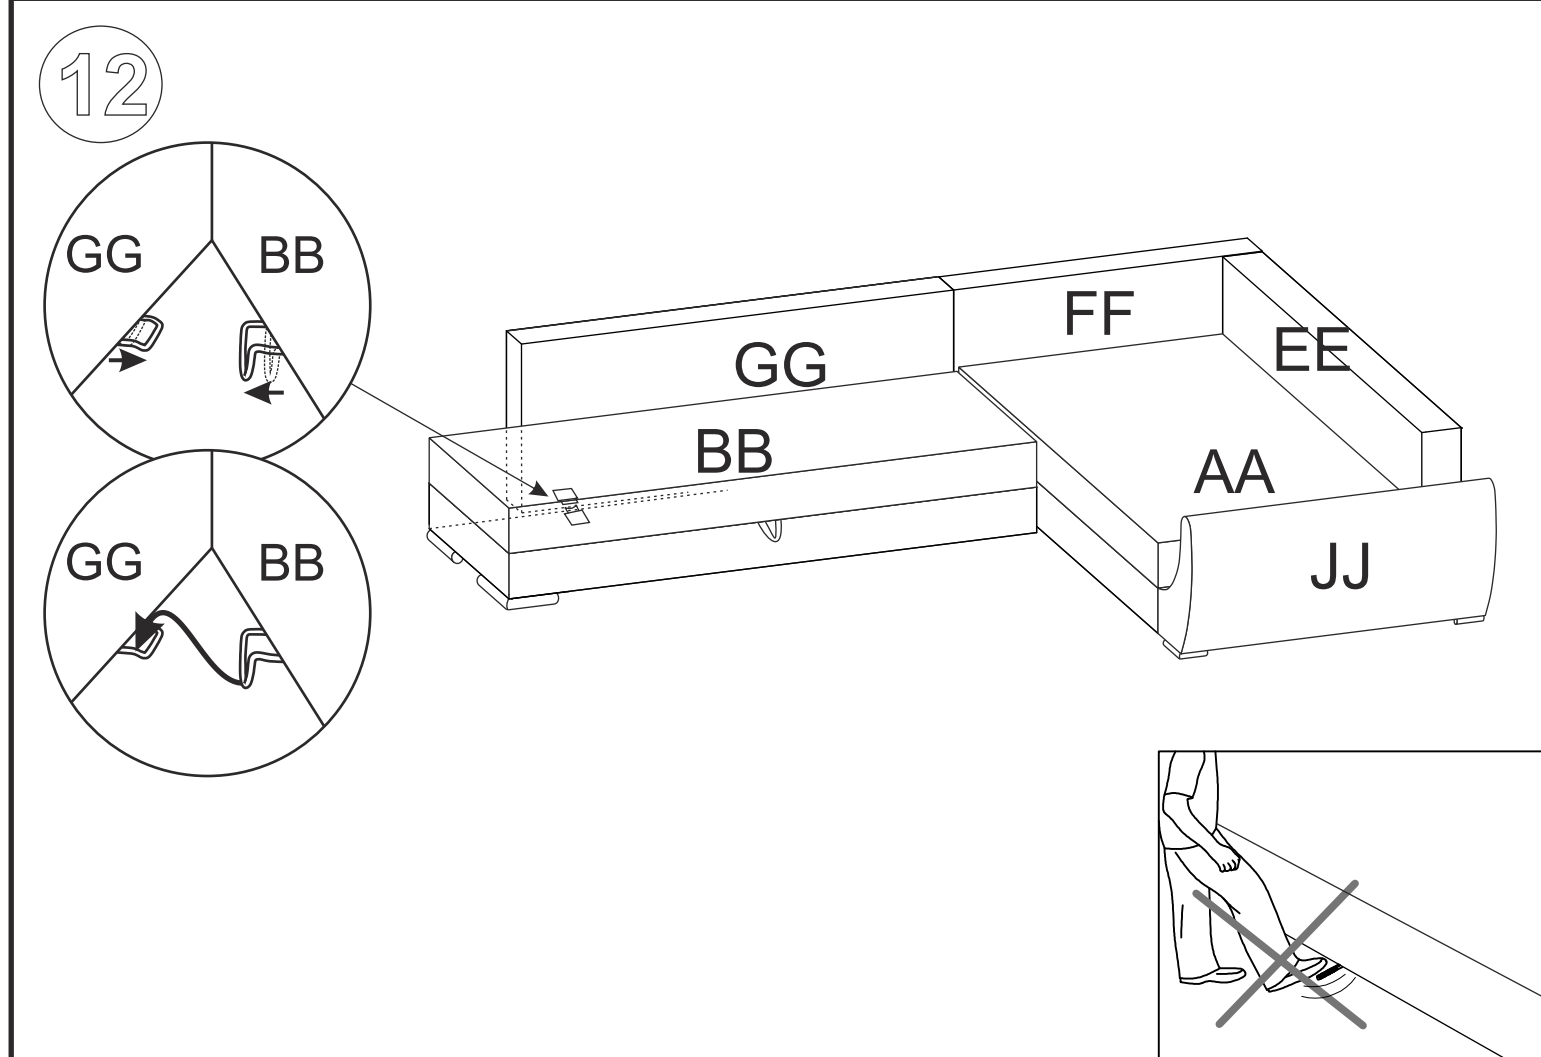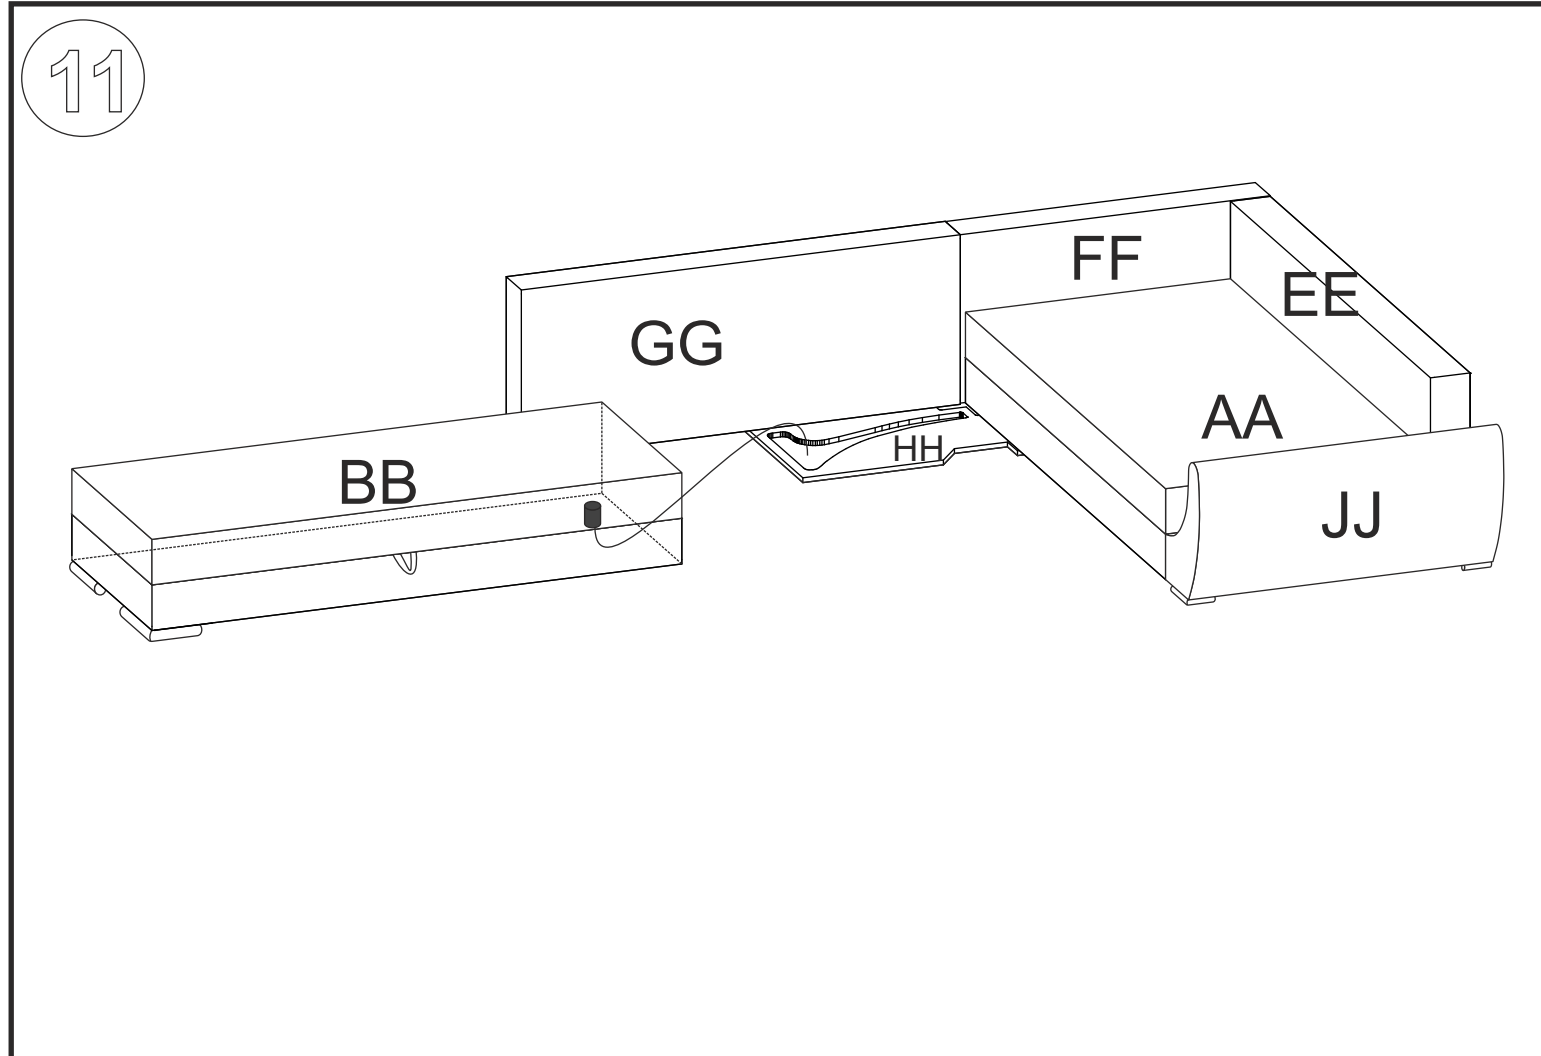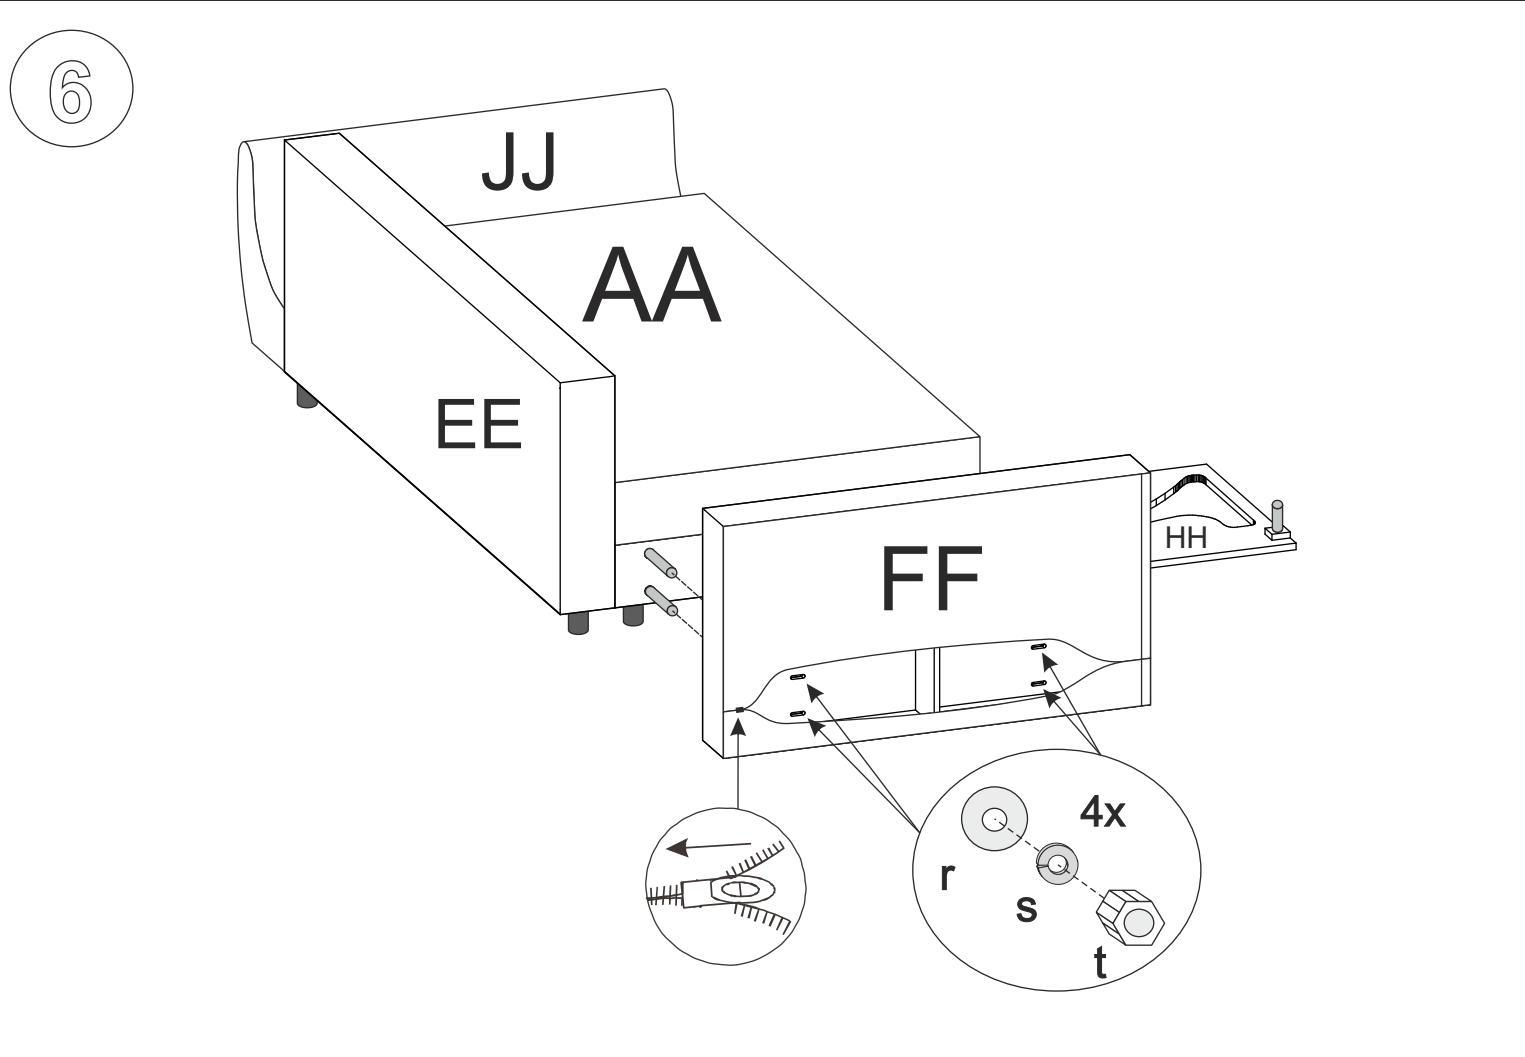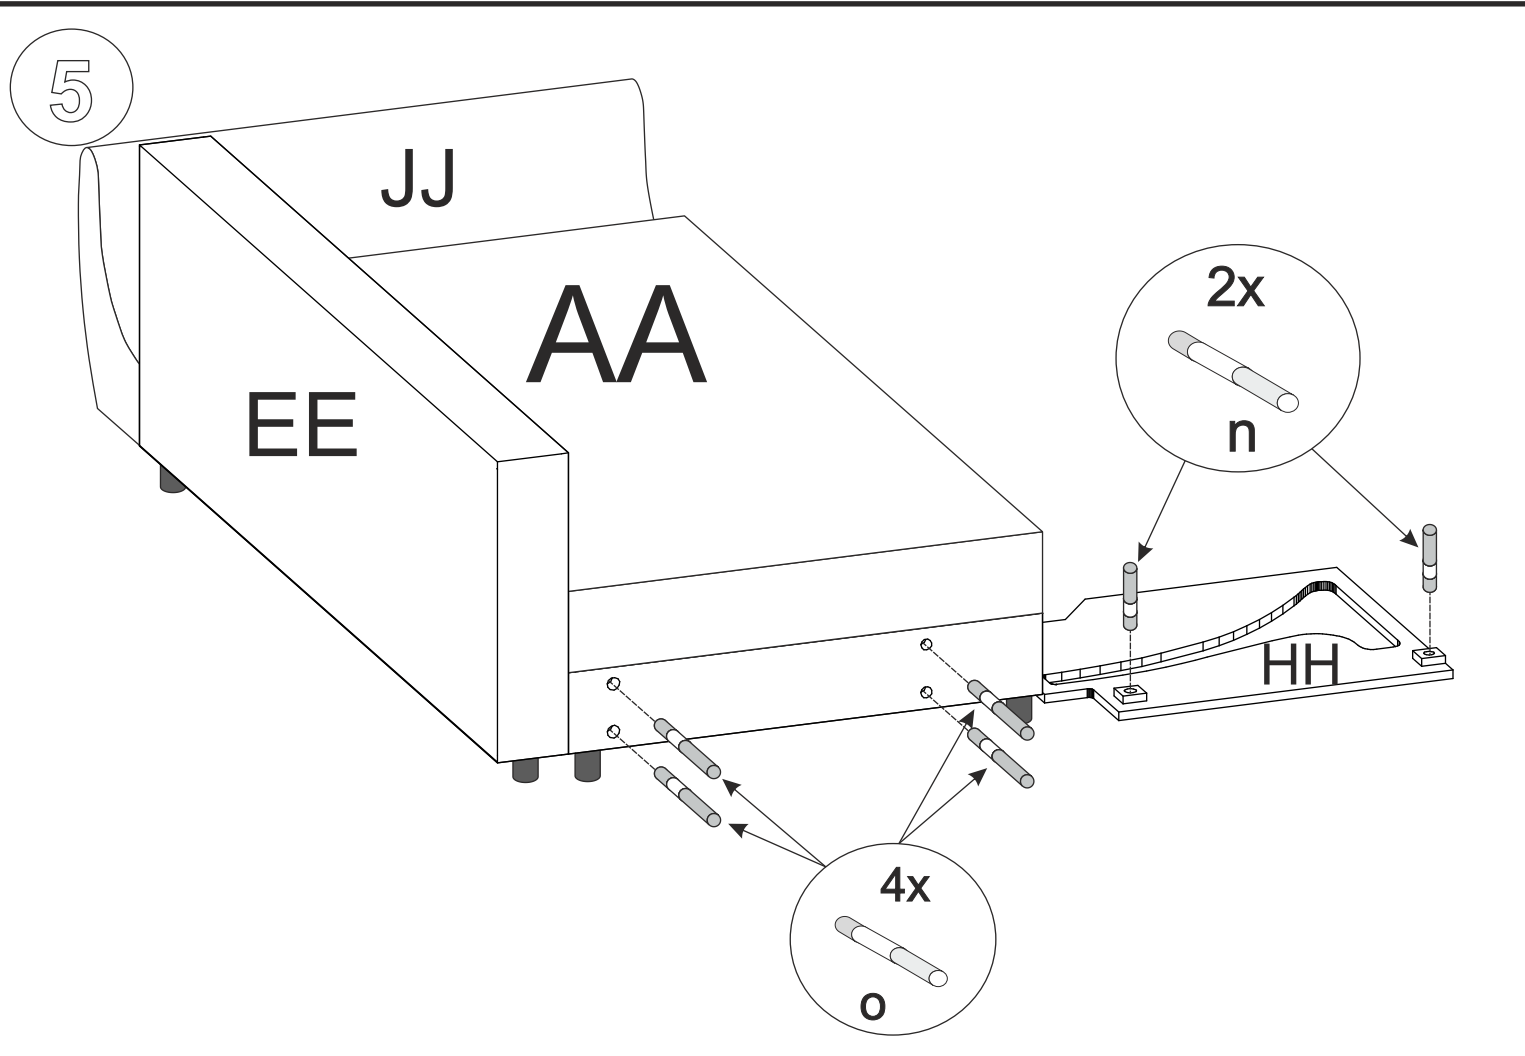    

7

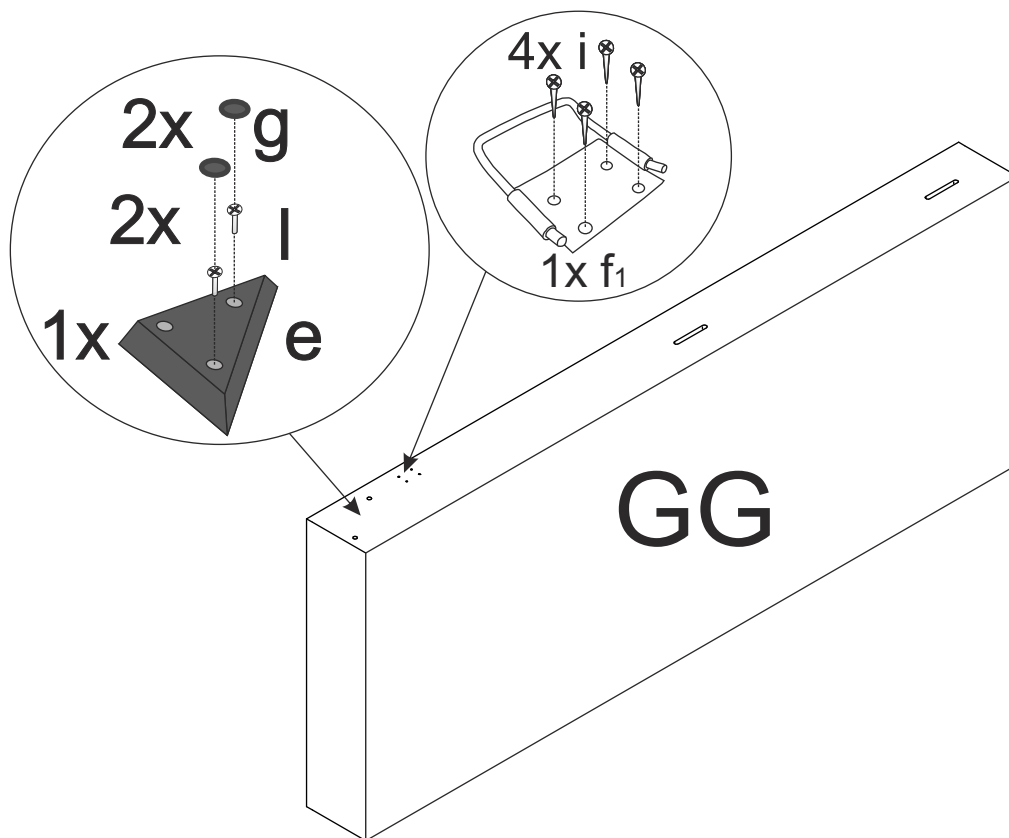 

8

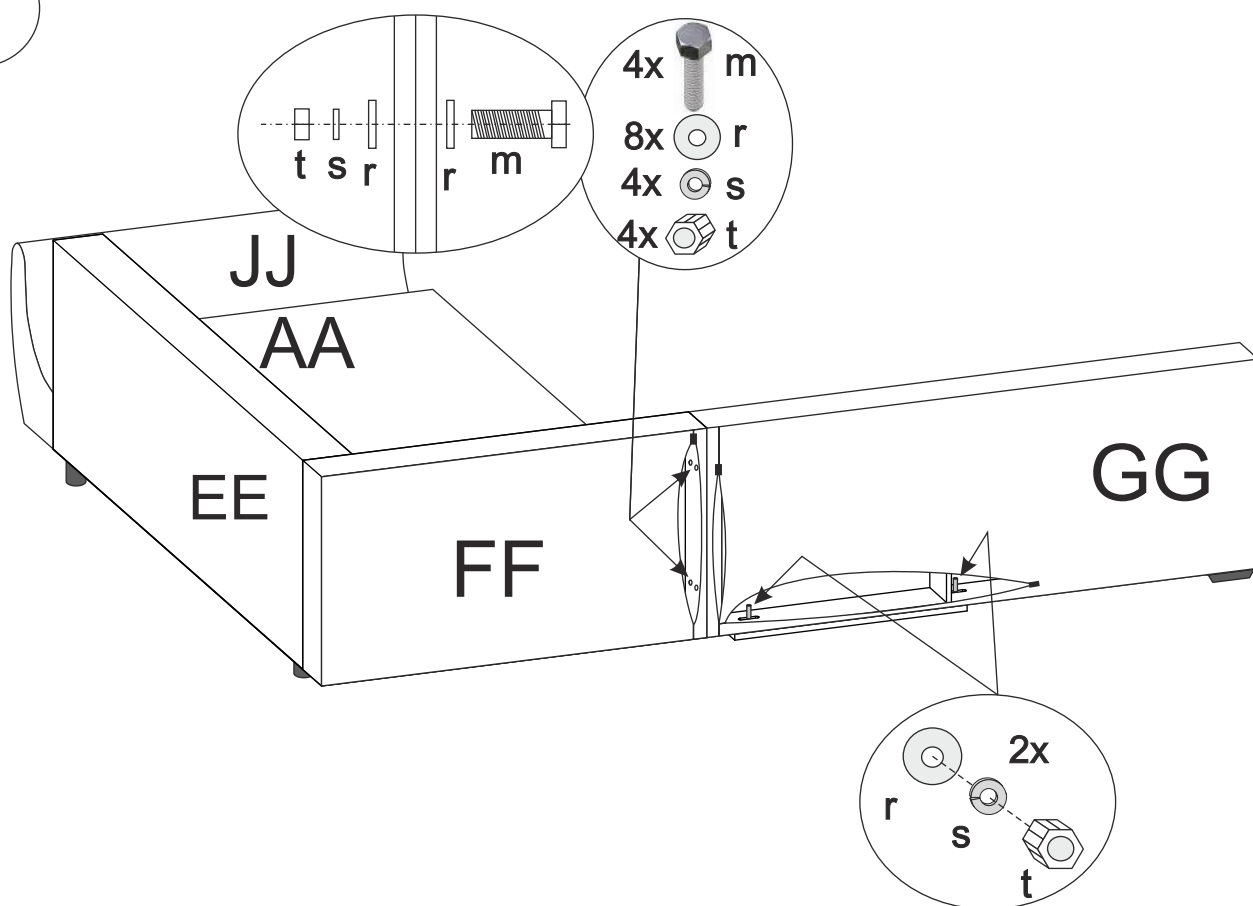 

9

BB

1x  k
1x  d

2x  b
4x  p
4x  k

 
 
 
10

BB

12x  i
3x  a

4x i
1x f₂

4x i
1x f₂

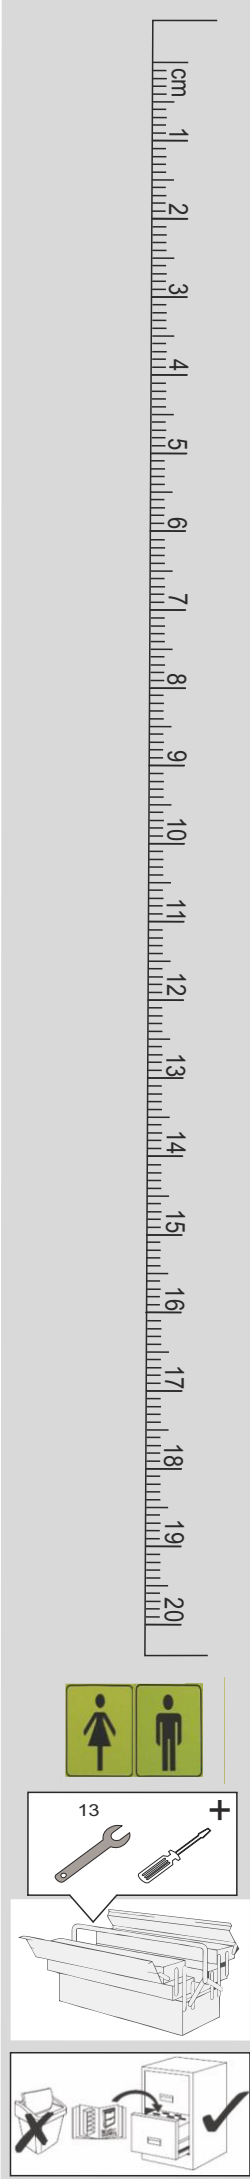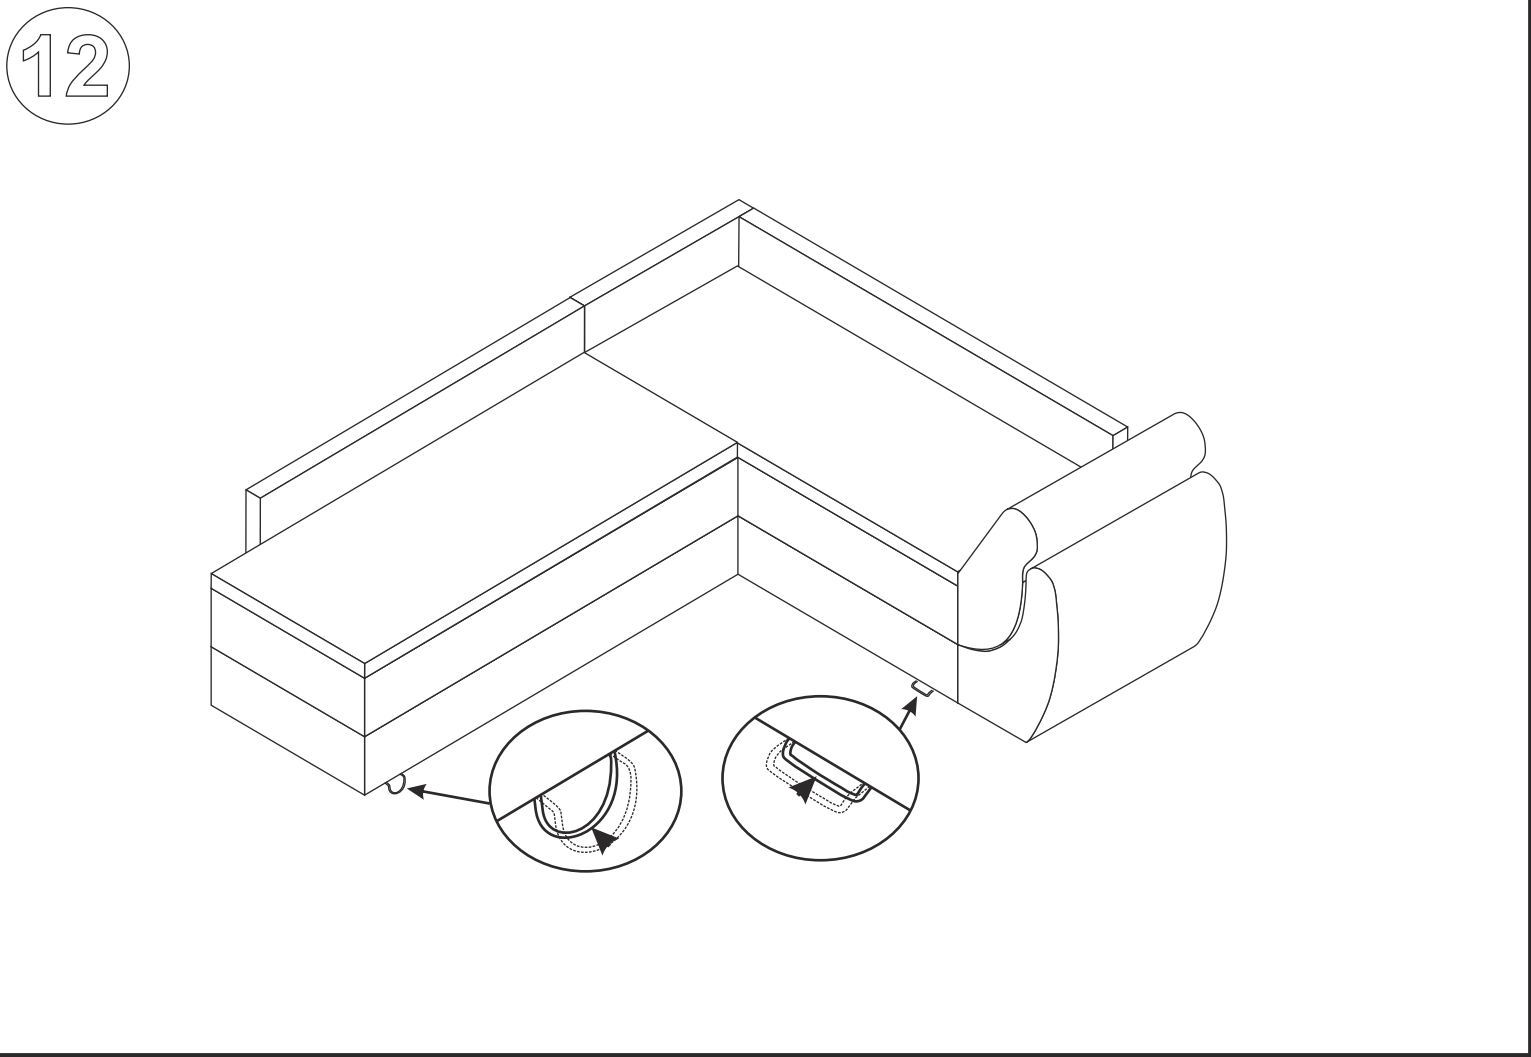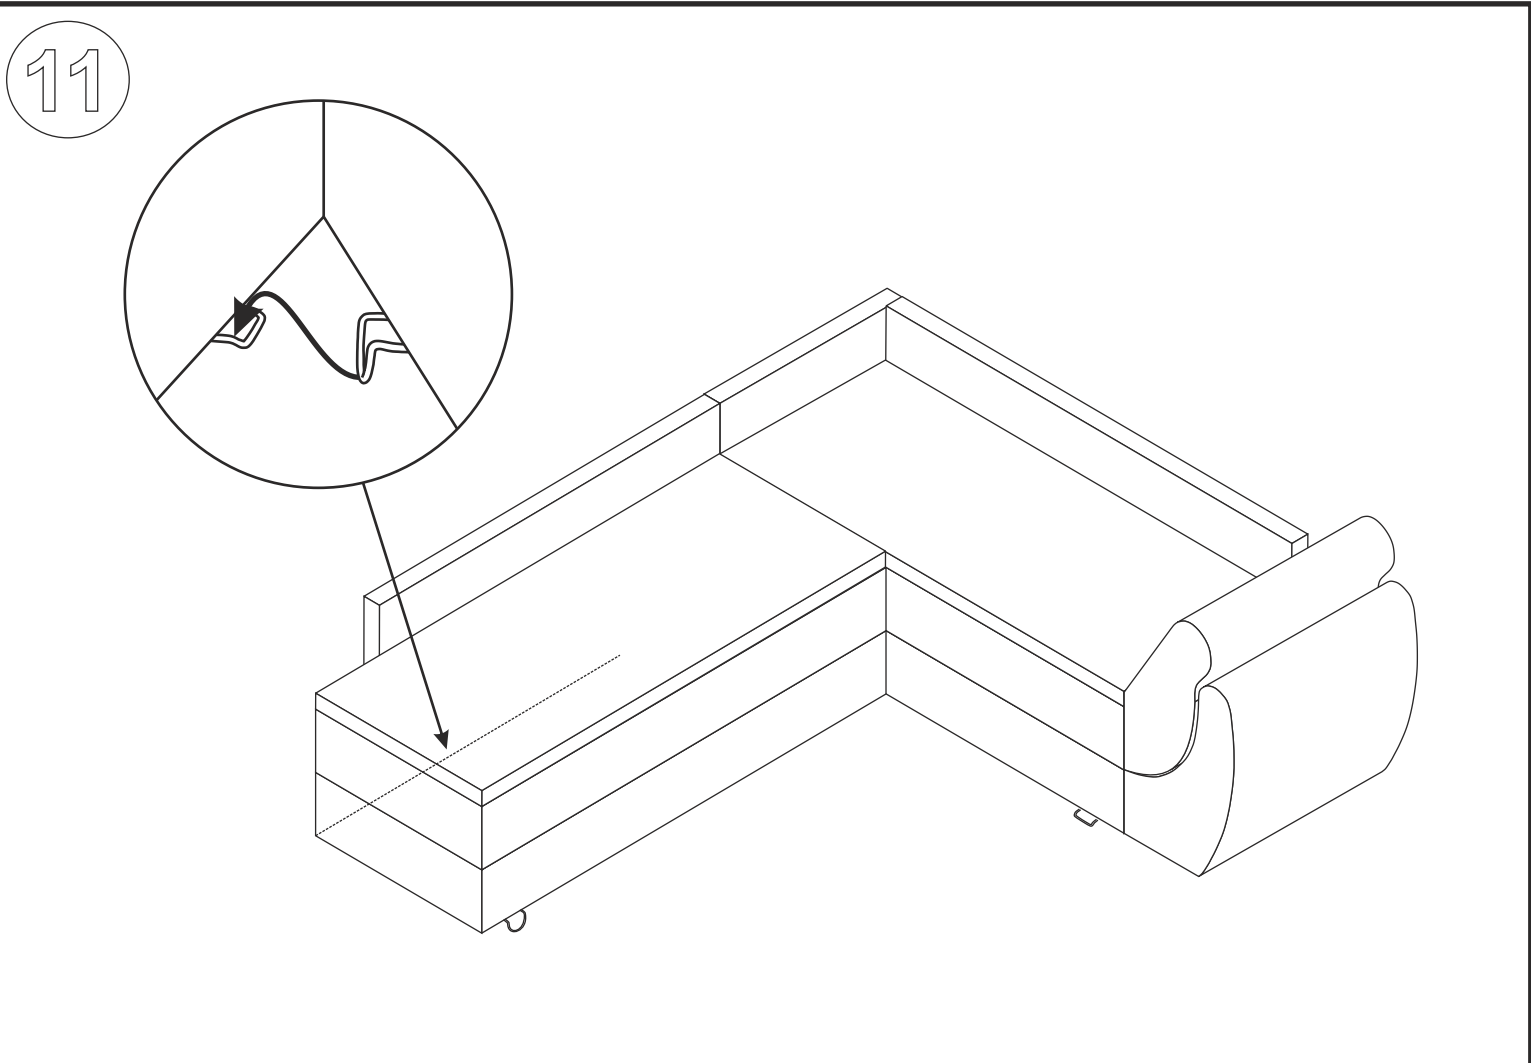

GÖTEBORG 180 R



- | | | | |
|----|----------------------------|----|---------------------------|
| DE | Bedienungsanleitung | IT | Istruzioni per l'uso |
| PL | Instrukcja użytkowania | FR | Mode d'emploi |
| NL | Instructies voor gebruik | RO | Instrucțiuni de utilizare |
| GB | Instructions for use | SK | Návod na použitie |
| TR | Kullanım Talimatı | CZ | Návod k použití |
| RU | Инструкции по эксплуатации | HU | Használati utasítások |



Name - Nazwa - Naam - Name - Isim - название
Nome - Nom - Numele - Meno - Jméno - Neve

GÖTEBORG 180 R

