



Melwin EL

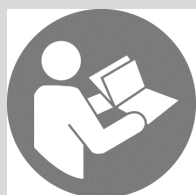

- | | |
|----------------------------------|---------------------------------------|
| D Montageanleitung | GB Assembly instructions |
| FR Notice de montage | NL Handleiding voor de montage |
| CZ Montážní návod | IT Istruzioni di montaggio |
| RO Instrucțiuni de montaj | RU инструкция по сборке |
| PL Instrukcja montażu | SK Návod na montáž |
| HU Szerelési útmutató | TR Montaj talimatı |

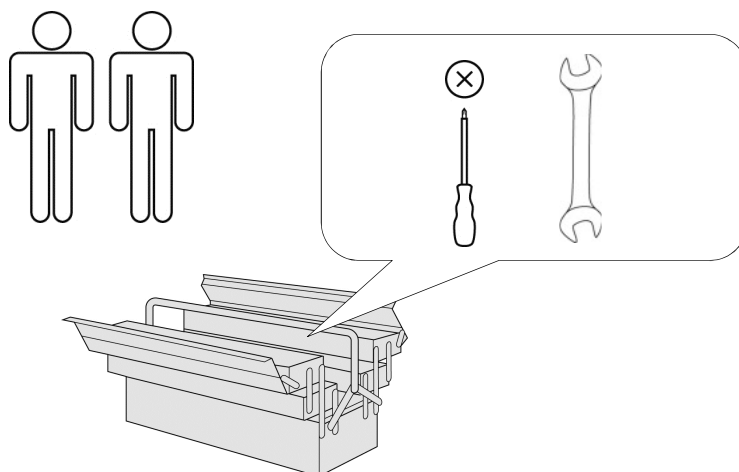

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название




Melwin

 
 
Nr. • No. • N° • Номер • Č • Sz

 
 
SH45

Typ • Type • Tip • Típus • Tipo
Тип

EL

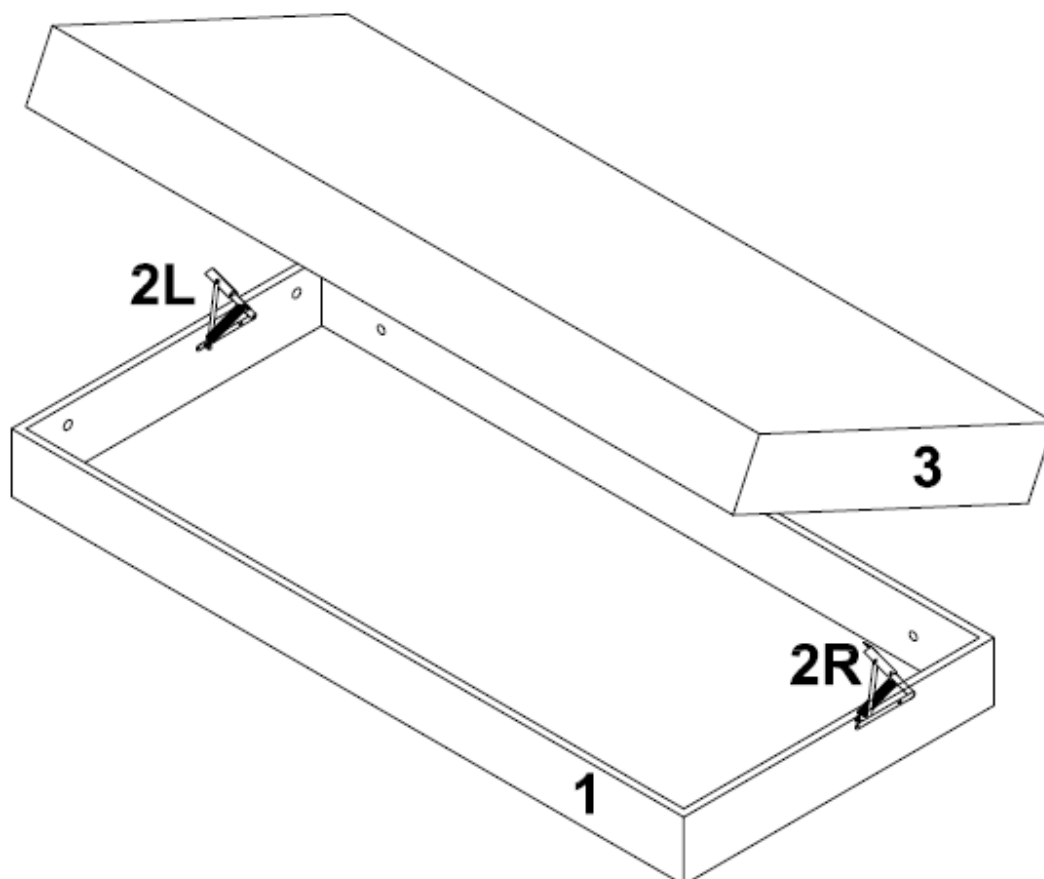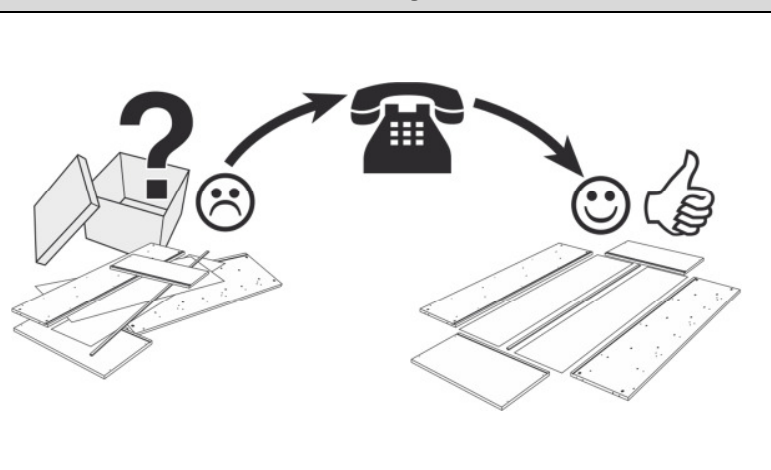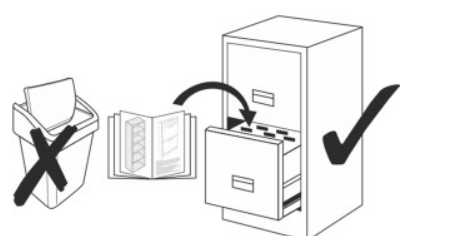

A	B	C
		
4x	4x 8x45	4x 8x20

A	B	C
		
4x	4x 8x45	4x 8x20

