

PRINCESS®

This attractive Royal Crepe Maker is suitable for baking delicious crepes. The appliance is easy to use and keep clean. The handy batter distributor allows you to make lovely, thin crepes.

OPERATION AND CONTROLS
The appliance consists of the following:
1. Hotplate
2. Housing
3. Indicator light
4. Power cord and plug
5. Batter distributor

BEFORE USING FOR THE FIRST TIME

- Remove all the packaging materials and stickers from the appliance.
- Clean the appliance and all the accessories (see 'Maintenance and cleaning').
- Set the appliance and turn it on (see 'Turning the appliance on and off').
- Allow the appliance to become hot. The appliance may emit a little smoke and a characteristic smell when you turn it on for the first time. This is normal and will soon stop. Make sure the appliance has sufficient ventilation.
- Allow the appliance to cool down.

Turning the appliance on and off

- Place the appliance on a flat, sturdy surface.
- Insert the plug into the plug socket. The indicator light will be lit and the appliance will become hot.
- Once the indicator light goes out, the hotplate is at the correct temperature.
- Remove the plug from the plug socket once you have finished.

BAKING CREPES
Once the hotplate is at the correct temperature and the batter has been prepared (see 'Cooking tips'), you can start to bake the crepes. Do not use sharp implements on the hotplate, such as metal spatulas, knives and forks. These may damage the nonstick coating.

- Apply a small quantity of oil or butter onto the hotplate.
- Use a spoon to pour a thin layer of batter onto the hotplate.
- Use the batter distributor to spread the batter evenly over the hotplate.
- Allow the batter to solidify.
- Use a wooden or plastic spatula to carefully turn the crepes over.
- Bake the other side until it is golden brown and remove the crepe from the hotplate.
- Repeat steps 1 to 6 if you wish to make more crepes.
- Remove the plug from the plug socket once you have finished.

MAINTENANCE AND CLEANING

- Never clean the appliance when it is turned on or is still hot. Turn off the appliance by unplugging it and wait until it has cooled down before cleaning it.
- Make sure no water gets into the housing.
- Do not immerse the appliance in water or other liquids. If this does happen, do not use the appliance again. For safety reasons, do not immerse it in water.
- Never use aggressive or abrasive cleaning products.
- Remove the plug from the plug socket and allow the appliance to cool down.
- Clean the hotplate using the appliance's housing with a damp soft cloth. Use warm water and some washing-up liquid to dampen the cloth.
- Make sure the appliance is thoroughly dry before storing it.

SAFETY

General information

- Read these instructions carefully and keep them for future reference.
- Only use this appliance as described in these instructions.
- The use of this appliance by children or persons with a physical, sensory, mental or motor disability or persons who lack the necessary knowledge and experience may result in a dangerous situation. Persons responsible for their safety must always explicitly instruct them or supervise the use of the appliance.
- Make sure children do not play with the appliance.
- Repairs may only be carried out by a qualified service technician. Never try to repair the appliance yourself.
- Only use accessories recommended by the supplier. The use of other accessories may result in damage to the appliance, thereby creating a hazard for the user.

HEAT AND ELECTRICITY

- Before use, verify that the mains voltage is the same as that indicated on the appliance's type plate.
- Plug the appliance into an earthed plug socket.
- Always remove the plug from the plug socket when the appliance is not in use.
- Always remove the plug from the plug socket by pulling the plug, not the power cord.
- Never pull the power cord to move the appliance or to remove the plug from the plug socket.
- Do not use the appliance if the power cord or the appliance has been damaged. To avoid any dangerous situations, send the appliance to your service department. A damaged power cord may only be replaced by our service department using the special tools required for the repair.
- Use the appliance in a dry location.
- Certain parts of the appliance can become hot. To avoid being burnt, do not touch the hot parts of the appliance.
- Use the appliance with the power cord and do not come into contact with heat sources, such as a hot iron or a toaster.
- Make sure the power cord and the plug do not come into contact with water.
- To avoid the risk of fire, the appliance must be able to release the heat it produces. Make sure the appliance has sufficient space around it and does not come into contact with inflammable materials. The appliance must not be covered.

During use

- Never use the appliance outdoors.
- Never use the appliance in a humid room.
- Place the appliance on a stable, flat surface where it cannot fall over.
- Do not allow the power cord to hang over the edge of a sink, a work surface or a table.
- Always keep the appliance unplugged when in use.
- Remove the plug from the plug socket in the event of a malfunction during use, before cleaning the appliance, before fitting or removing an accessory and before storing the appliance after use.
- Never leave the appliance unattended when in use.
- Keep the appliance out of the reach of small children.
- Never move the appliance whilst it is turned on or is still hot. Turn off the appliance and wait until it has cooled down before moving it.
- Do not use sharp implements on the hotplate, such as metal spatulas, knives and forks. These may damage the non-stick coating.
- Never immerse the appliance in water, the power cord or the plug in water or other liquids.
- This appliance's hotplate has a nonstick PTFE coating. On heating this coating, it may release small amounts of gas which are totally harmless to humans. However, the nervous system of birds has been found to be extremely sensitive to these gases and for this reason, this appliance should not be used near birds (for example, tropical birds such as parrots).
- Do not clean the appliance if it has fallen into water. Remove the plug from the plug socket immediately. Do not use the appliance again.
- Clean the appliance thoroughly after use (see 'Maintenance and cleaning'). Allow the appliance to cool down before cleaning it, clean it or carry out maintenance work.

UK: WIRING INSTRUCTIONS

- The wires in the mains lead are coloured in accordance with the following code:
- BLUE NEUTRAL
 - BROWN LIVE
 - GREEN/YELLOW EARTH
- As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured blue.
 - The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.
 - The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E (earth symbol) and is coloured GREEN or GREEN/YELLOW

WARNING: THIS APPLIANCE MUST BE EARTHED
With this appliance, if a 13A plug is used a 5A fuse should be fitted. If any other type of plug is used, a 15A fuse must be fitted either in the plug or at the distribution board.

THE ENVIRONMENT

- Dispose of packaging material, such as plastic and boxes, in the appropriate waste containers. If you wish to dispose of the appliance whilst it still works properly or can be easily repaired, ensure that the appliance is recycled. When the appliance reaches the end of its useful life, it should be disposed of in a responsible manner, thereby ensuring the reuse of the appliance or its parts. Do not dispose of the appliance with normal household waste, but hand it over to a recycling collection point. Contact your local authority for information about available disposal and collection systems in your area.

COOKING TIPS
Crepes (basic recipe)
For approximately 4 people, as a dessert:

- 130 g of flour
- 3 eggs
- 25 g of milk
- 21 g of butter or margarine
- Crég of oil
- Salt

- Use an electric mixer to mix the flour, eggs, a pinch of salt, the milk, the melted butter and 10 or 11 tablespoons of water.
- 2 Allow the batter to rest for 30 minutes.
- 3 Bake the crepes.

Crepes Suzette
Crepes Suzette are crepes with an orange sauce. For the sauce, you need:

- 75 g of butter
- 75 g of sugar
- The juice and grated rind of 2 oranges
- 1 small bag of vanilla sugar
- 15 g of orange liqueur (Grand Mariner, Cointreau or Curacao)
- 1 Bake the crepes as described for the basic recipe.
- 2 Keep them warm by covering them and placing them over a pan of boiling water.
- 3 To make the sauce, melt the butter in a frying pan, mix the sugar through it and allow it to slightly caramelize.
- 4 Mix the orange juice, the grated orange rind and the vanilla sugar into the sugar mixture in the pan.
- 5 Bring the sauce to the boil.
- 6 Add the liqueur and immerse the crepes one by one in the sauce.

Variations:
You can make countless variations with crepes. For example, you can make the batter sweeter by adding sugar or honey. You can serve the crepes with:

- Pieces of fruit, jam and cream.
- Cheese.
- Ice cream.
- Chocolate sauce.

service.princess.info

© Princess 2017

