


Diagram 5 shows the assembly of the back panel (DD) to the main frame (AA, BB, CC). The back panel (DD) is shown being attached to the side panel (CC) and the base (BB) using two screws (d) and washers (e, f, g). The screws (d) are shown being inserted into the back panel (DD) and secured with washers (e, f, g) on the side panel (CC) and the base (BB). The diagram includes a callout showing the components: 2x screws (d), washers (e, f, g), and the back panel (DD).

6

A line drawing of a sofa with various parts labeled with letters and numbers. The labels are: 'm' for the seat cushions, 'k' for the backrest cushions, 'j' for the backrest, 'BB' for the right side panel, 'CC' for the left side panel, 'EE' for the central seat, 'AA' for the front base, and 'DD' for the right front leg.


4

 
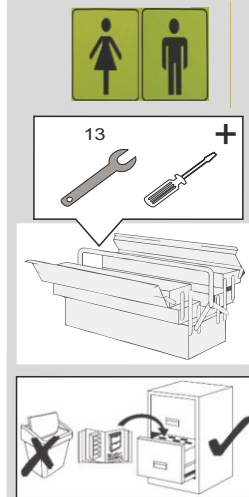


(IT) Istruzioni di montaggio
 (FR) Notice de montage
 (RO) Instrucțiuni de asamblare
 (SK) Montážny návod
 (CZ) Montážní návod
 (HU) Szerelési útmutató





SOFT & COSY SESSEL

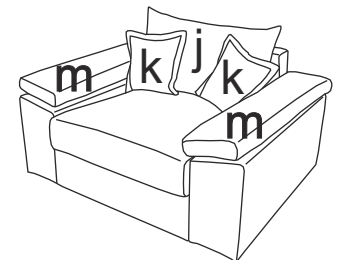


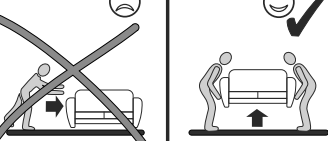
8x  a	24x (3x13)  b	8x  c	6x (M8x80)  d	6x (Ø8)  e	6x (Ø8)  f	6x (M8)  g
1x   j	2x   k	2x   m				

Service - Servis - Dienstverlening - Servis - Serwis - Сервисная служба - Servizio - Service Serviciu - Služby - Szolgáltatás
--

1x j 2x k

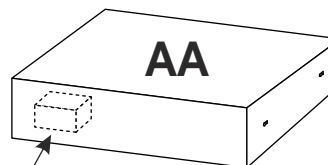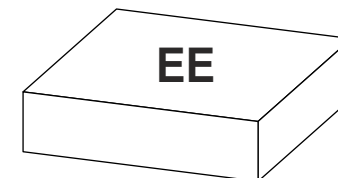

2x m

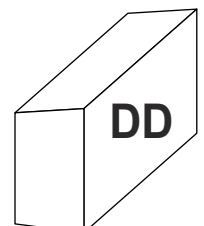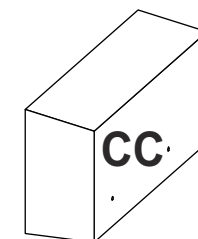

Ver:	20.08.25
------	----------

SOFT & COSY SESSEL

1

