




Klebebereich für Klettstreifen ausschneiden
Cut the positions of the Velcro straps out of the drilling template

110 mm

Bohrschablone für Geschirrspüler/Drilling template for dishwasher HG14582E97736BS



A

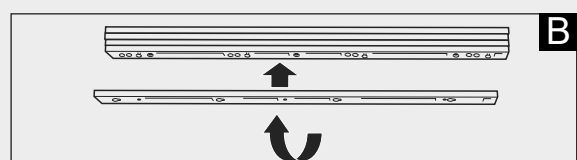


B




C




D

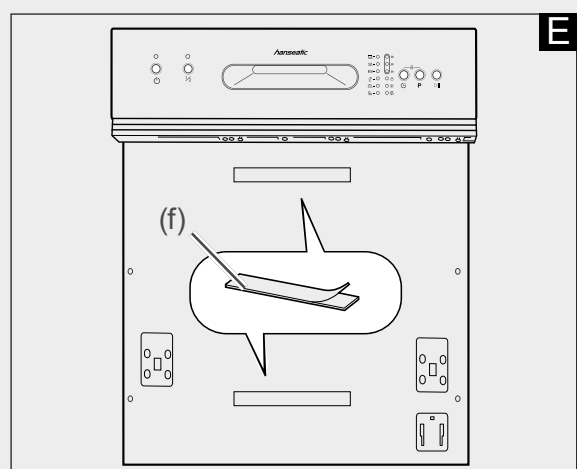


E

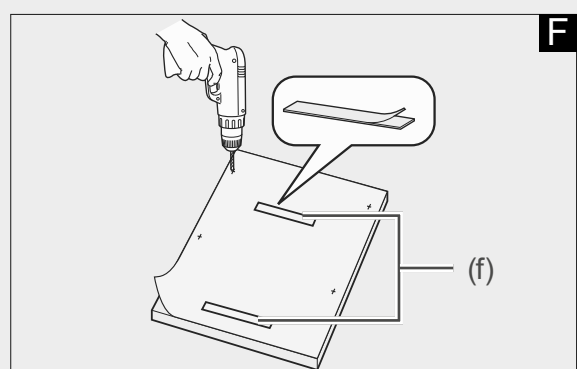


F

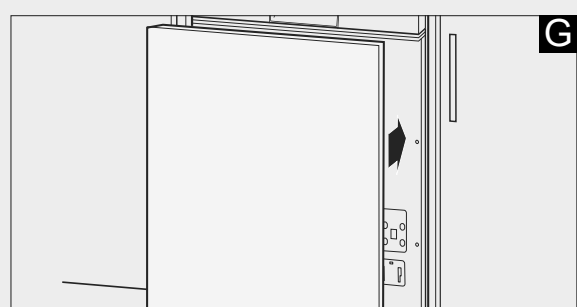

G

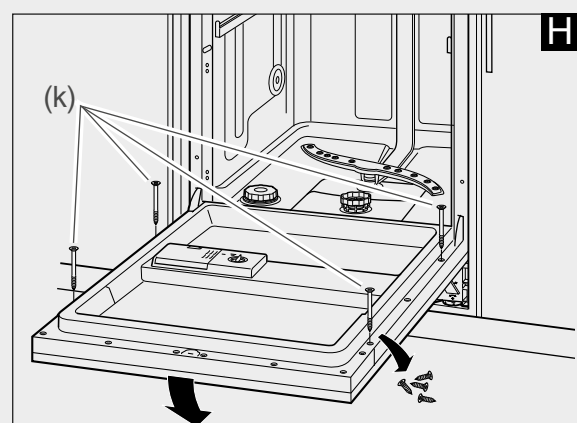

H

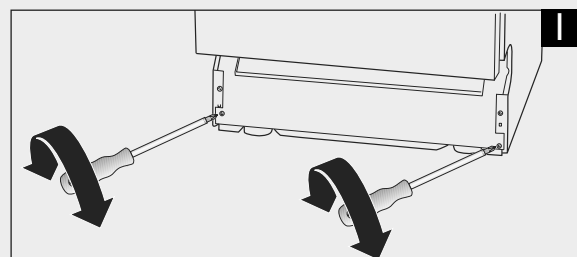

I

Möbelfrontplatte montieren

! HINWEIS

Gefahr von Sachschäden!
Unsachgemäßer Umgang kann zu Beschädigungen am Gerät oder an der Möbelfrontplatte führen.

■ Das Gewicht der Möbelfrontplatte darf 5 kg nicht überschreiten!

An der Gerätetür können Sie eine zu Ihrer Küchenfront passende Möbelfrontplatte montieren. Die Möbelfrontplatte darf ein Gewicht von 5 kg nicht überschreiten.

- Halten Sie die Möbelfrontplatte so an die Gerätetür, dass die untere Seite der Möbelfrontplatte bündig mit den nebenstehenden Küchenschränken abschließt.
- Messen Sie den Abstand zwischen der Möbelfrontplatte und der Bedienblende aus.
- Einen Abstand zwischen 5 mm und 25 mm können Sie durch die 5 mitgelieferten Zierleisten (b) ausgleichen. Entnehmen Sie die benötigte Anzahl an Zierleisten aus dem Block. Verschieben Sie dazu die Zierleiste kräftig, aber ohne Werkzeug.
- Wenn Sie nur 1 Zierleiste benötigen, sägen Sie die vier herausragenden „Füßchen“ ab, klemmen Sie die Zierleiste unter die Bedienblende und fixieren Sie sie mit den beiden Senkkopfschrauben (l). Machen Sie weiter mit Schritt 7.
- Wenn Sie mehr als eine Zierleiste benötigen, drehen Sie die untere Zierleiste um und schieben Sie sie auf die übrigen. So verschwinden die „Füßchen“ und die Oberflächen sind plan.
- Wenn Sie
 - 2 Zierleisten benötigen, fixieren Sie diese mit den beiden Senkkopfschrauben (l).
 - 3 Zierleisten benötigen, fixieren Sie diese mit den beiden Senkkopfschrauben (m).
 - 4 bis 5 Zierleisten benötigen, fixieren Sie diese mit den beiden Senkkopfschrauben (n).
- Ziehen Sie beide Klettbandpaare (f) auseinander.
- Entfernen Sie jeweils vom gleichen Klettbandtyp die Schutzfolie.
- Kleben Sie die Klettbänder (f) mit der abgezogenen Schutzfolie mittig auf die eingelassenen Bereiche auf der Gerätetür.
- Schneiden Sie die Positionen der Klettbänder aus der Bohrschablone heraus.
- Schneiden Sie die Anzahl der eingesetzten Zierleisten von der Bohrschablone ab.
- Legen Sie die mitgelieferte Bohrschablone so auf die Rückseite der Möbelfrontplatte, dass die Bohrschablone und die Möbelfrontplatte oben bündig abschließen.
- Übertragen Sie die Bohrlöcher von der Bohrschablone auf die Möbelfrontplatte.

- Bohren Sie die gekennzeichneten Positionen der Bohrlöcher mit einem Bohrer (Ø 2 mm) vor.
- Entfernen Sie die Schutzfolien der anderen Klettbänder und kleben Sie die Klettbänder mit Hilfe der Bohrschablone auf die Möbelfrontplatte.
- Fixieren Sie die Möbelfrontplatte mithilfe der Innenseite der Tür. Schrauben Sie die Möbelfrontplatte an diesen Positionen mithilfe der beiliegenden 4 Schrauben (k) fest. Die Möbelfrontplatte ist damit fertig montiert.

Gängigkeit der Tür einstellen

Sie können einstellen, wie leicht oder schwer sich die Gerätetür öffnen lässt. Diese Einstellung ist oft nach der Montage der Möbelfrontplatte notwendig. Durch Drehen der beiden unteren Schrauben können Sie die Federkraft der Tür verändern.

- Drehen Sie die Schrauben gegen den Uhrzeigersinn, um die Tür leichtgängiger einzustellen.
- Drehen Sie die Schrauben im Uhrzeigersinn, damit sich die Tür schwerer öffnen lässt.

Mounting the front panel

! NOTICE

Possible damage to property!
Improper handling may result in damage to the appliance itself or the front panel.
■ The front panel must not exceed a weight of 5 kg.

You can mount a front panel on the appliance door which matches your kitchen. The front panel must not exceed a weight of 5 kg.

- Hold the front panel against the appliance door such that the lower side of the front panel is flush with the adjoining kitchen cupboards.
- Measure the distance between the front panel and the control panel.
- A gap of 5 mm to 25 mm can be offset with the 5 trim strips supplied (b). Remove the required number of trim strips from the block. To do so, move the trim strip vigorously but without using tools.
- If you only need one trim strip, saw off the four feet that stick out, clamp the moulding under the control panel and secure it using both countersunk screws (l). Continue with Step 7.

- If you need more than one trim strip, turn the lower moulding and push it onto the other mouldings. This hides the feet and makes the surfaces flat.
- If you
 - need two trim strips, secure these using both countersunk screws (l).
 - need three trim strips, secure these using both countersunk screws (m).
 - need four to five trim strips, secure these using both countersunk screws (n).
- Pull apart the two pairs of Velcro straps (f).
- Remove the protective film from the same type of Velcro strap.
- With the protective film removed, stick the Velcro straps (f) onto the middle of the recessed areas on the appliance door.
- Cut the positions of the Velcro straps out of the drilling template.
- Cut the number of trim strips used off the drilling template.
- Lay the supplied drilling template on the reverse side of the front panel in such a way that the drilling template and the front panel are flush at the top.
- Transfer the drill holes from the drill template to the front panel.
- Drill the drill holes in the indicated positions using a (Ø 2 mm) drill bit.
- Remove the protective films from the other Velcro straps and stick the velcro straps to the front panel using the drilling template.
- Fix the front panel to the appliance door using the Velcro straps (f). Hold the front panel in place and carefully open the door.
- Remove the 4 screws from the inside of the door. Screw the front panel in place at these positions using the 4 enclosed screws (k). The front panel has been successfully mounted.

Adjusting the door's accessibility

You can adjust how easy or difficult it is to open the dishwasher door. You can change the spring force of the door by turning both lower screws.

- Turn the screw anticlockwise to adjust the door more smoothly.
- Turn the screws clockwise to make it harder to open the door.

Bestell-Nr./Order no.: 43277443
2001-01059b_20240703

Klebebereich für Klettstreifen ausschneiden
Cut the positions of the Velcro straps out of the drilling template

110 mm

415 mm

95 mm

207 mm

12,5 mm

402 mm

402 mm

402 mm

402 mm

402 mm

402 mm