


Aufbauanweisung

(Bitte aufbewahren)




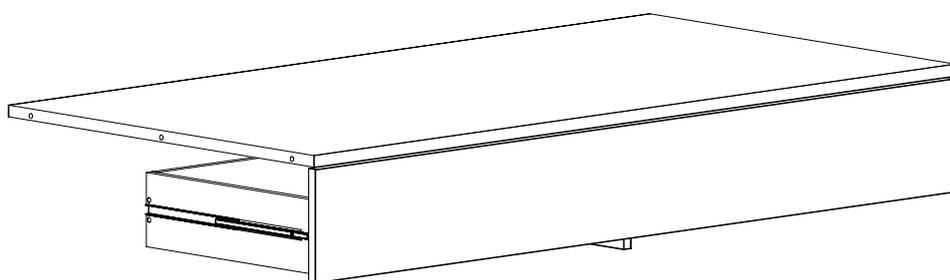


Art.-Nr.: **0420-SKV**

REPC-Nr.:

Bettschubkasten

Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба

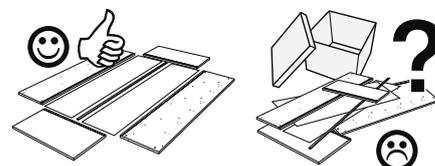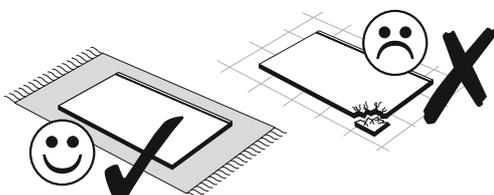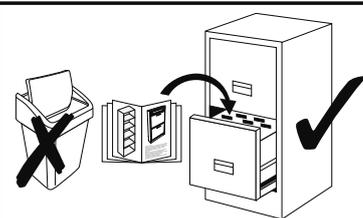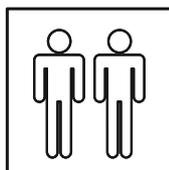


BT1-00312 Colli 1/1


B01-199		B01-330		B05-130		B02-10		B02-20	
12x	6,3x9,5	4x	M4x10	1x		8x		8x	




▶ SCAN ME




Colli 1/1

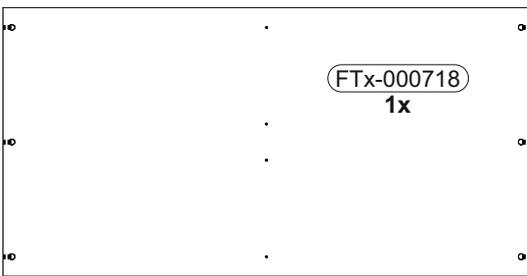


1388 x 712

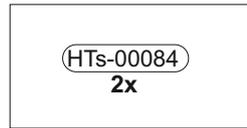


666 x 380



1384 x 184

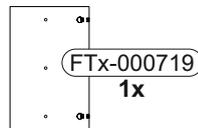


208 x 326

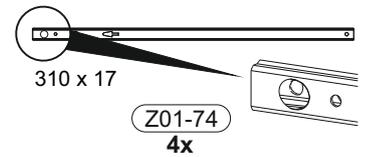


310 x 17


Z01-74
4x



654 x 120




380 x 120



380 x 120


1

B02-20		B02-10	
2x		6x	

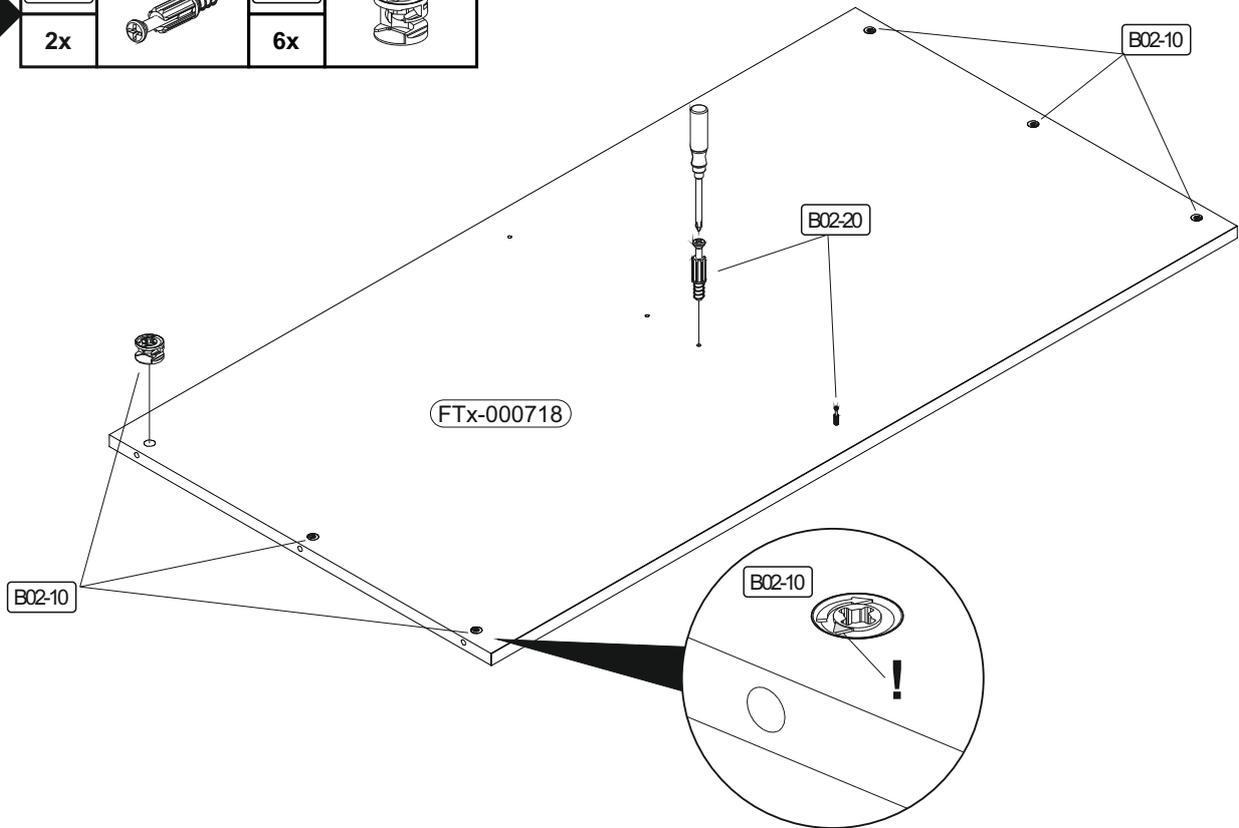






2

B02-10		B01-199	
2x		6x	6,3x9,5

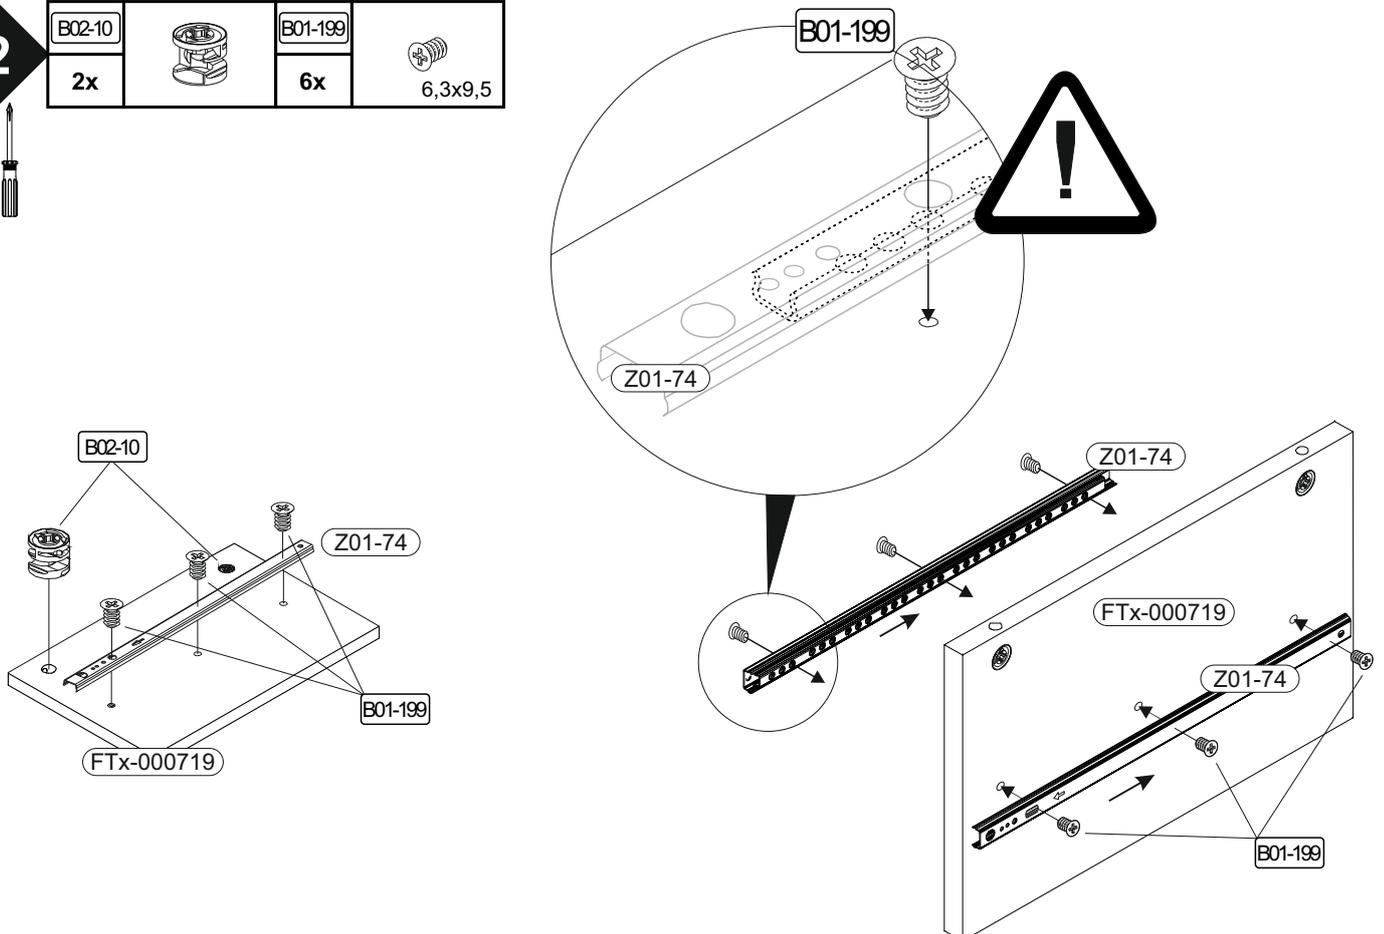

3

B05-130	
1x	

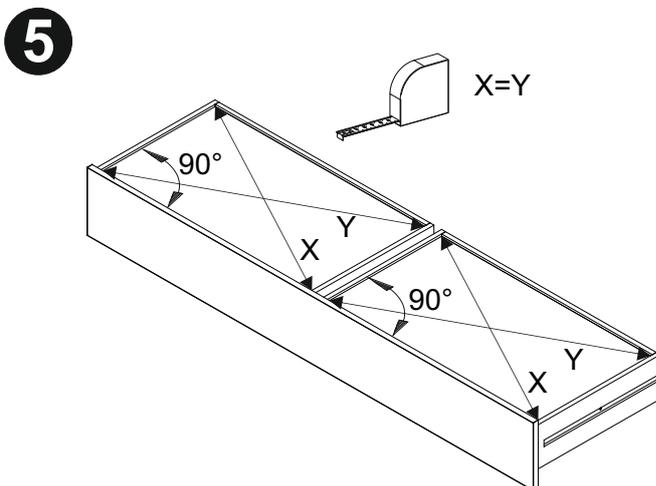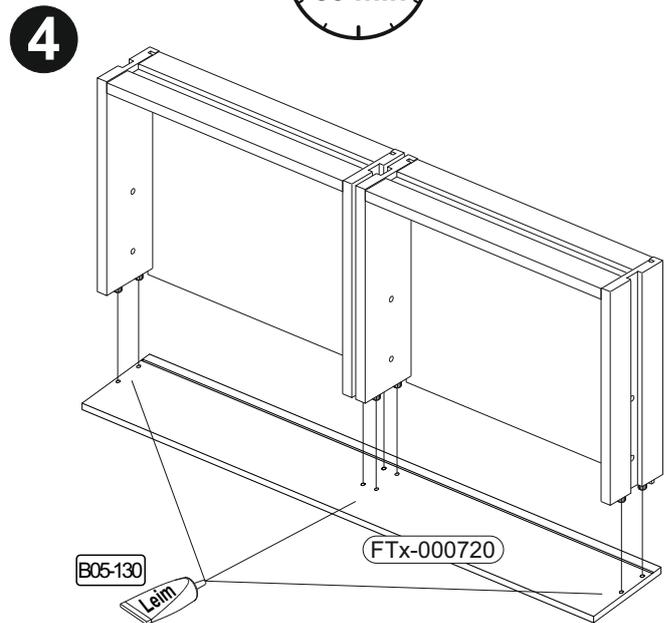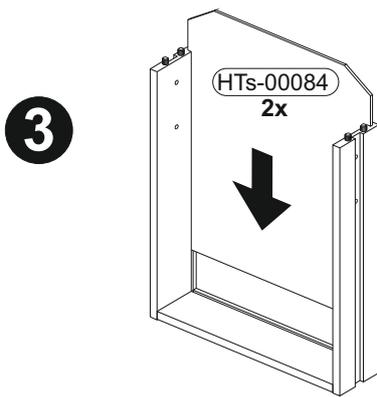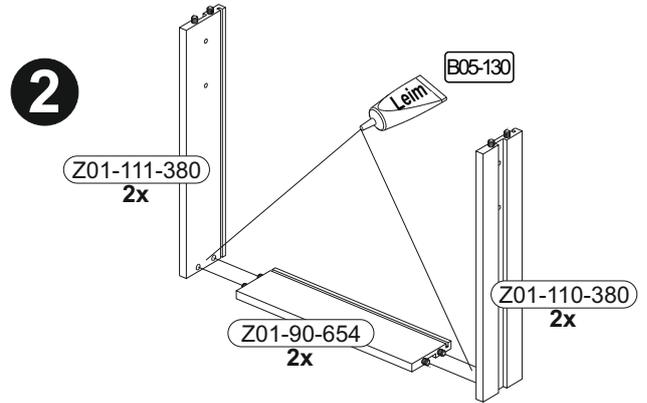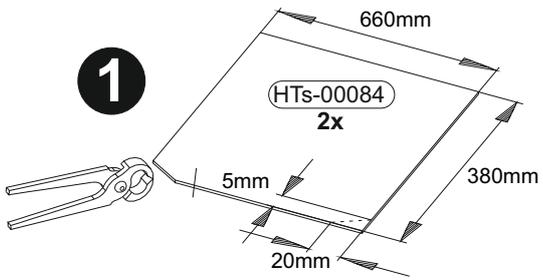

4

B02-20		B01-199	
6x		6x	6,3x9,5



Art.-Nr. :
0420_BH

