

The Original
smarTrike®



www.smarTrike.com

www.youtube.com/user/SmartTrikeOfficial

675/650/695/195/690

Thank you for buying smarTrike,
If you have any assembly issues or are missing
a part, please call us for assistance. Our
smarTrike® assembly experts will assist you.

DO NOT RETURN TO THE STORE

If you are experiencing problems with this
product, please call our HELP LINE.

UK: +44-2035148561

9:30am – 5:00pm Monday to Friday

Not Bank Holidays or weekends.

**You can also email us: help@mookie.co.uk
for assistance and advice.**

**USA: 1-855-SMTRIKE
(1-855-768-7453)**

675 A




675 B



195/690











695

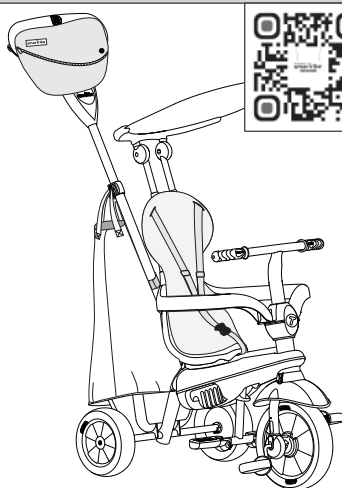






650



675/650/695/195/690

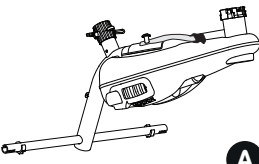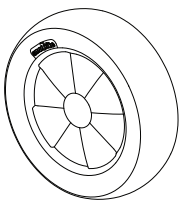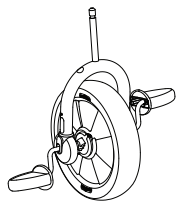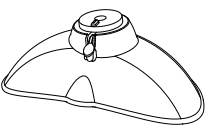
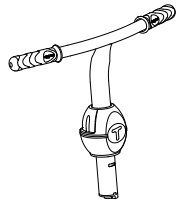
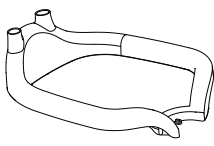
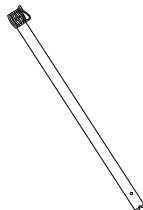
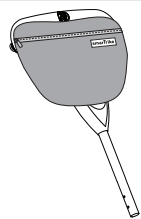
1			
665100	607130 X2	607120	607210
			
A	B	C	D
607150	607220	607110	607200
			
E	F	G	H
607141	665140	695360	
			
I	J	K	


2			
607190			
			
X4	X2		
L	M	N	O

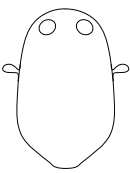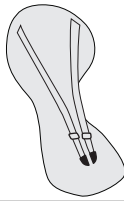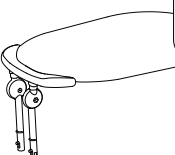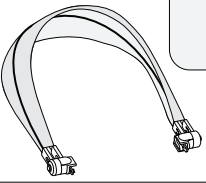3		665160		695280	
	675A		675A		675B/695 195/690/650
	P		Q1		Q2
665170		650171		695410	
	675 695/195/690		650		675B 650/195/690
	R1		R2		S



Step 1

Parts needed to complete this section

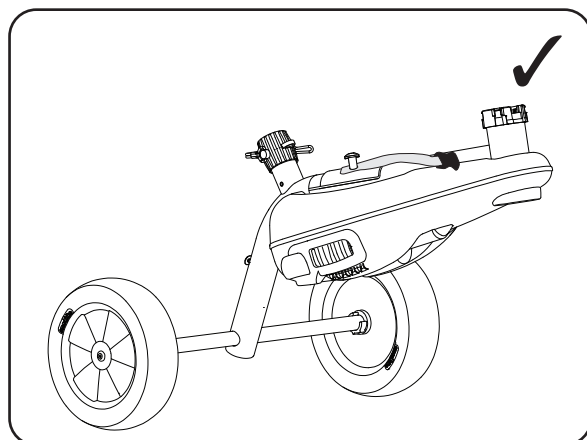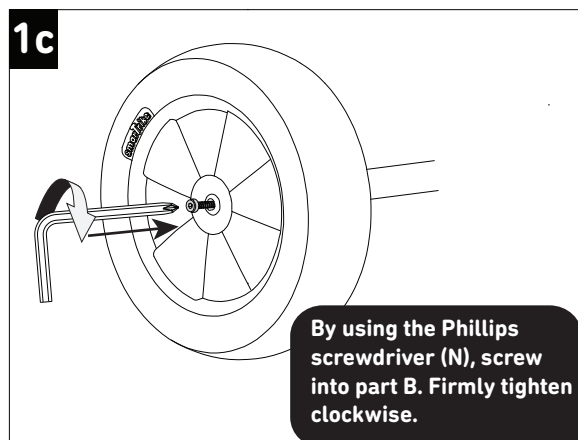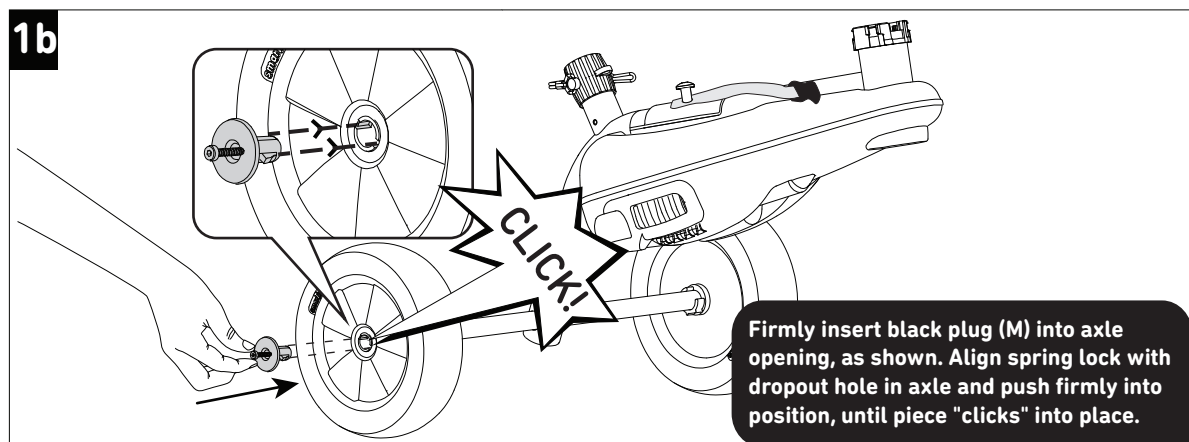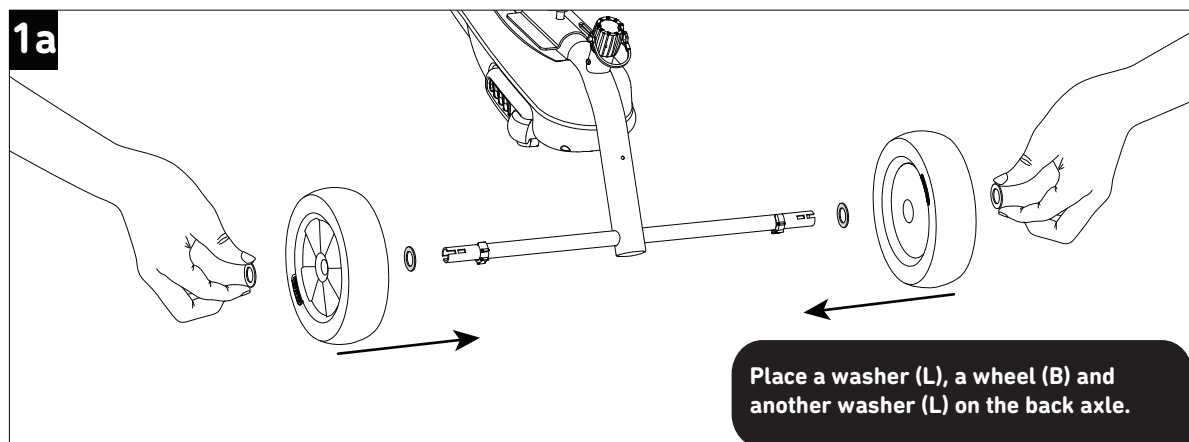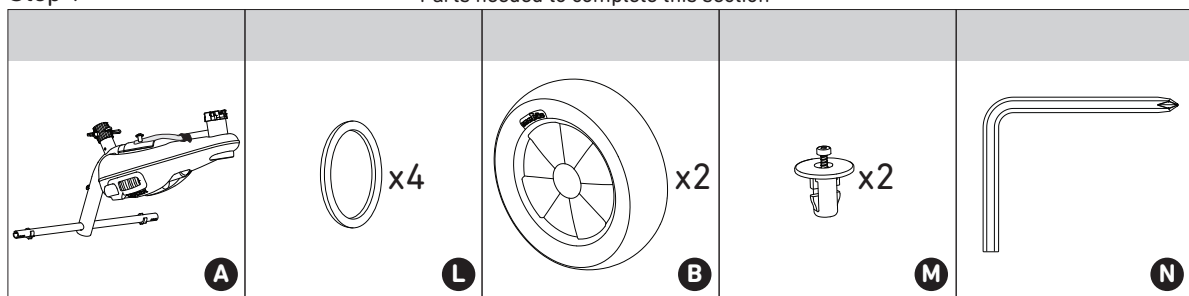


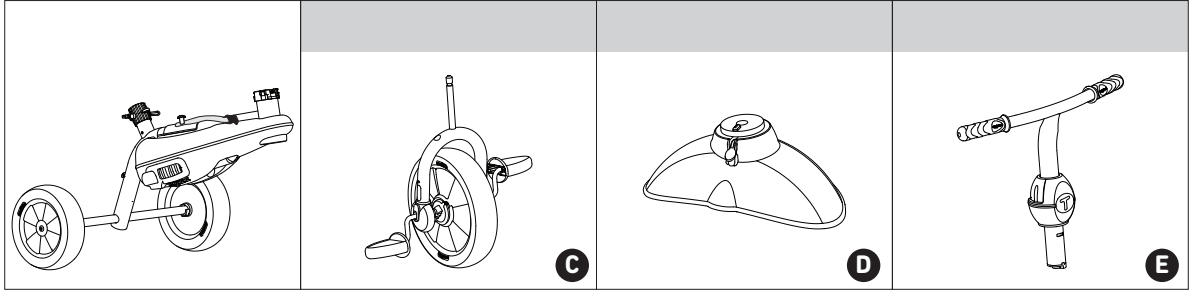


2a




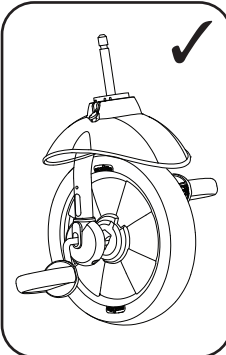
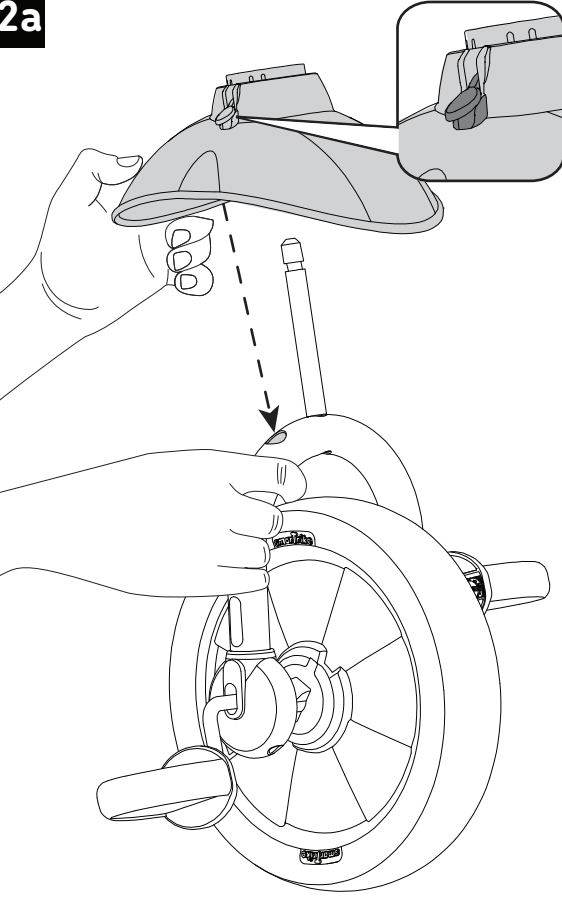







Insert part D into part C all the way through the hole.






2b

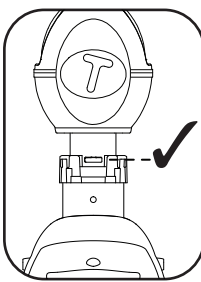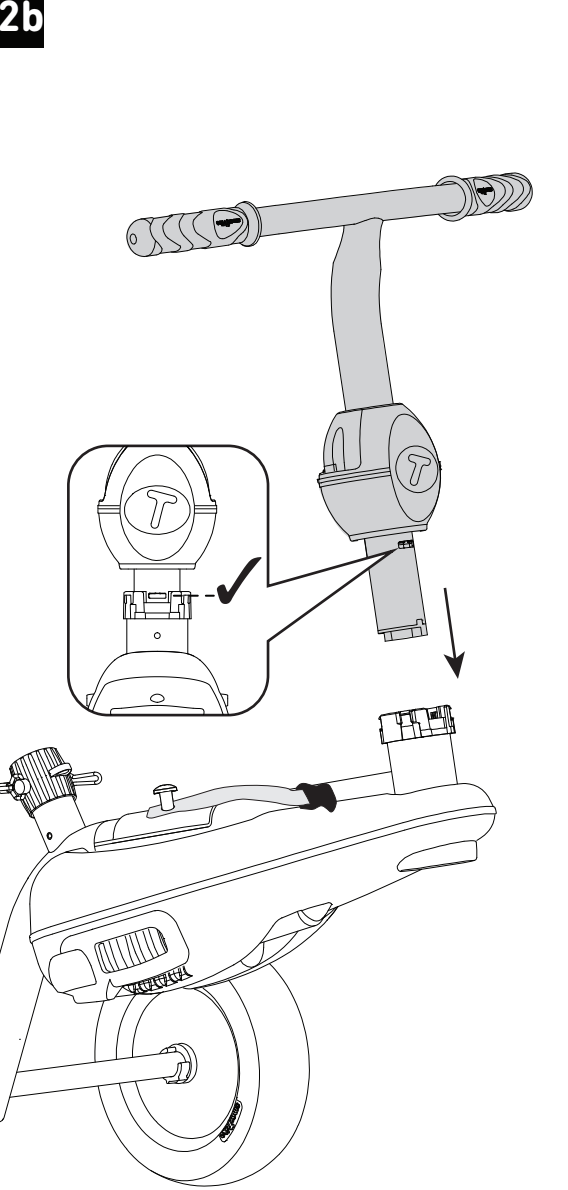

Insert part E into the body of the trike all the way through the hole.




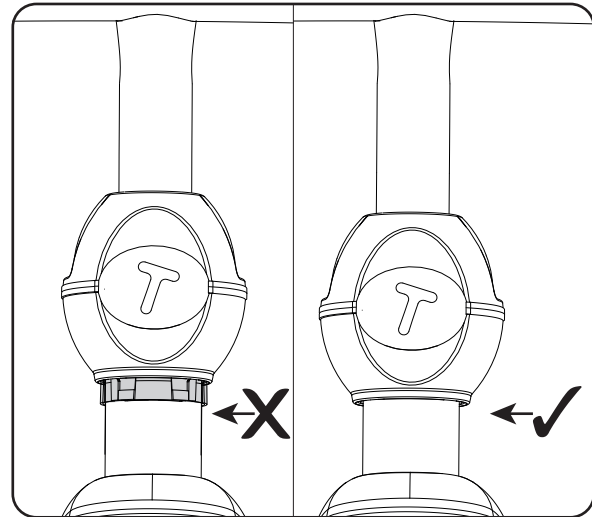
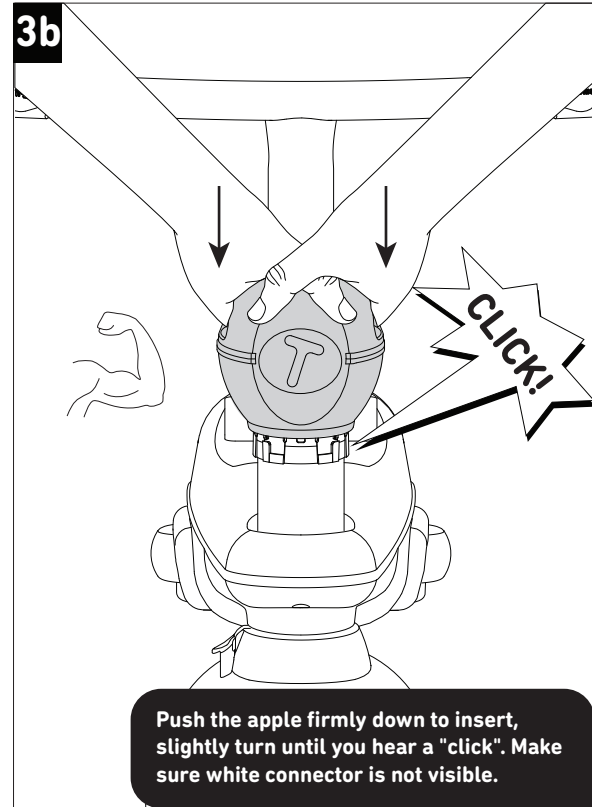
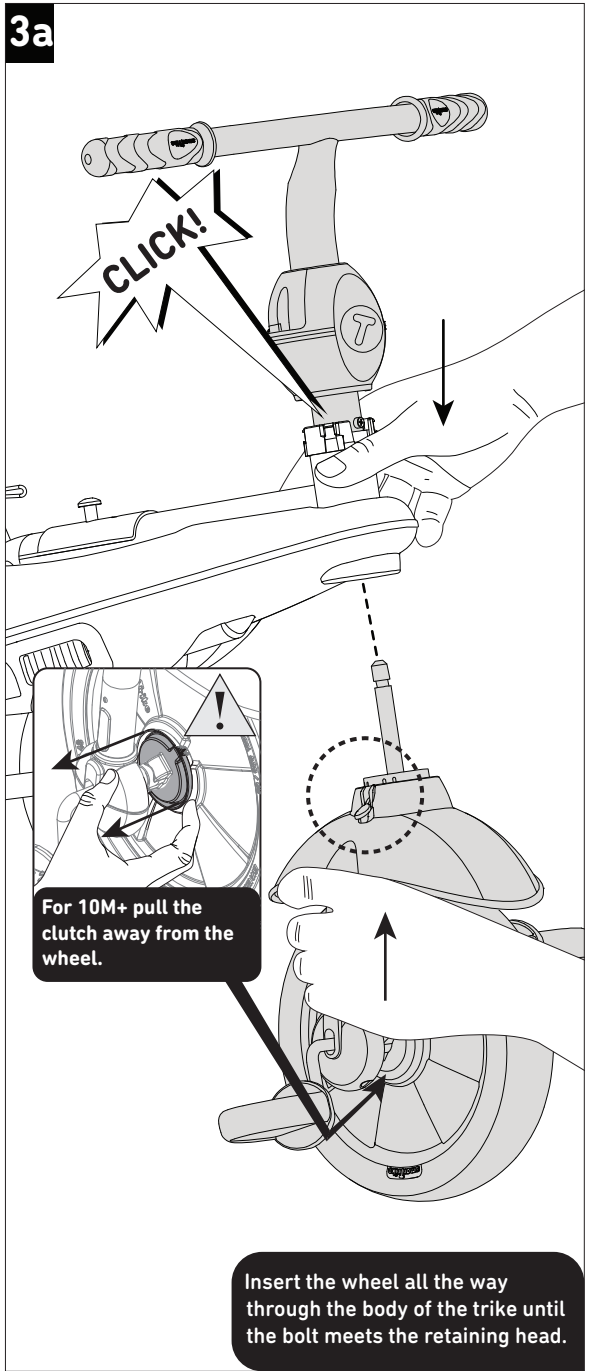
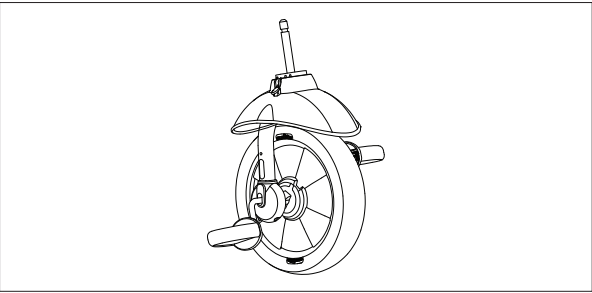
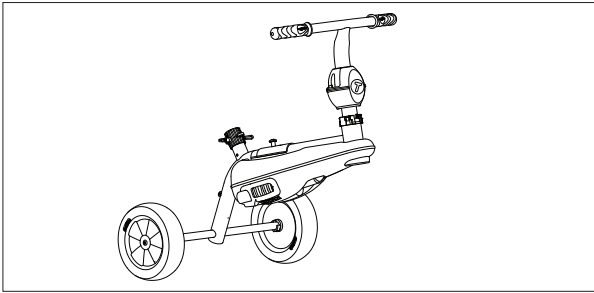


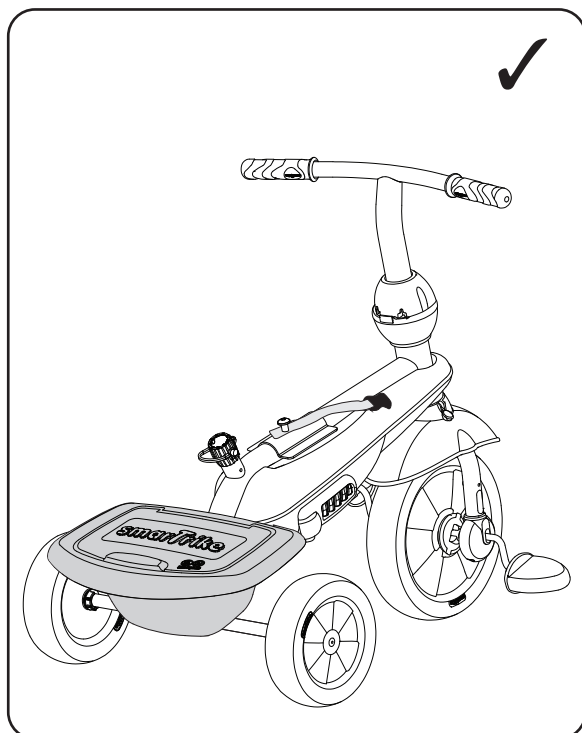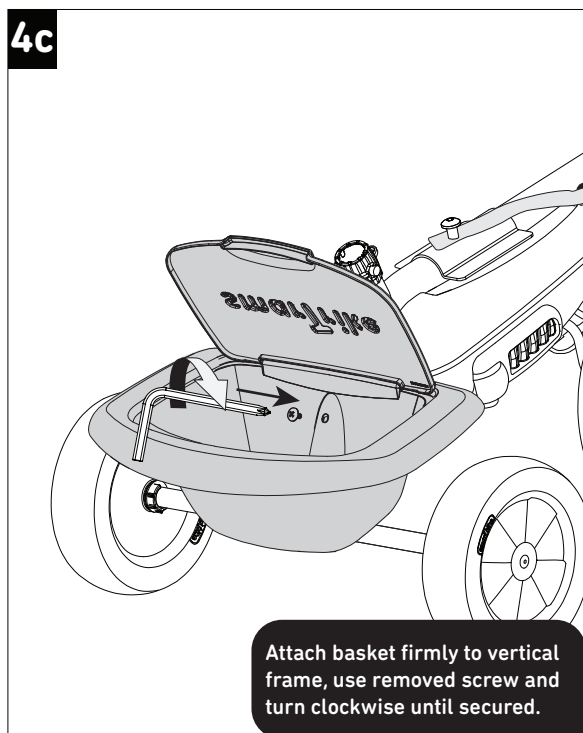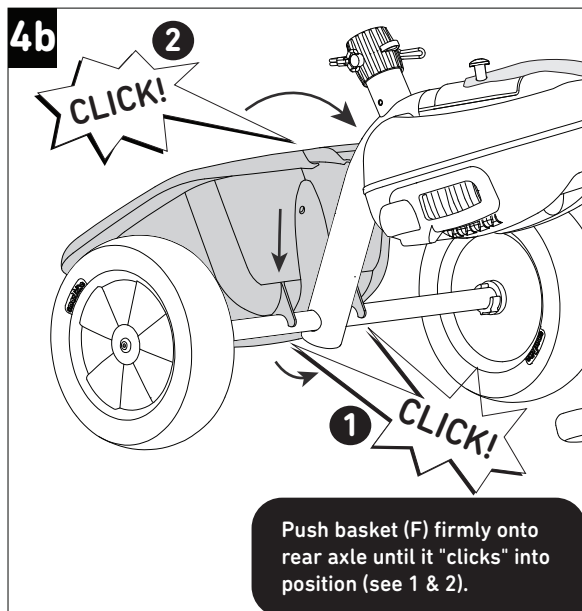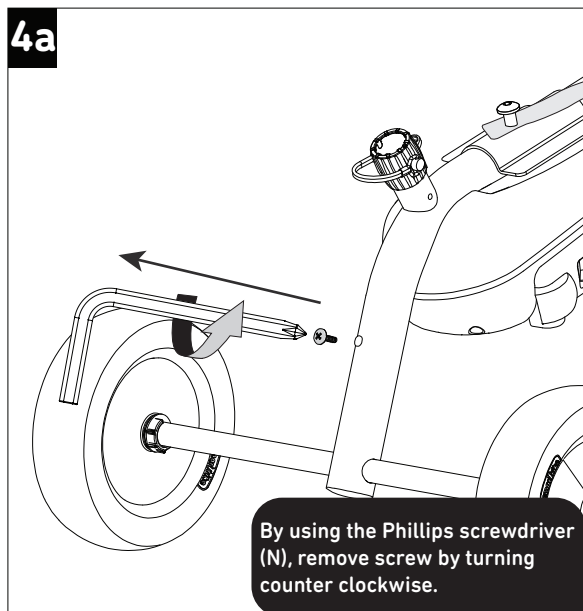
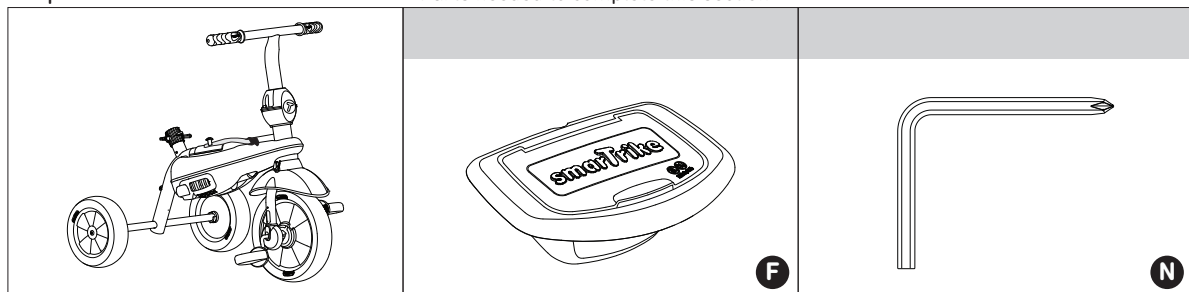


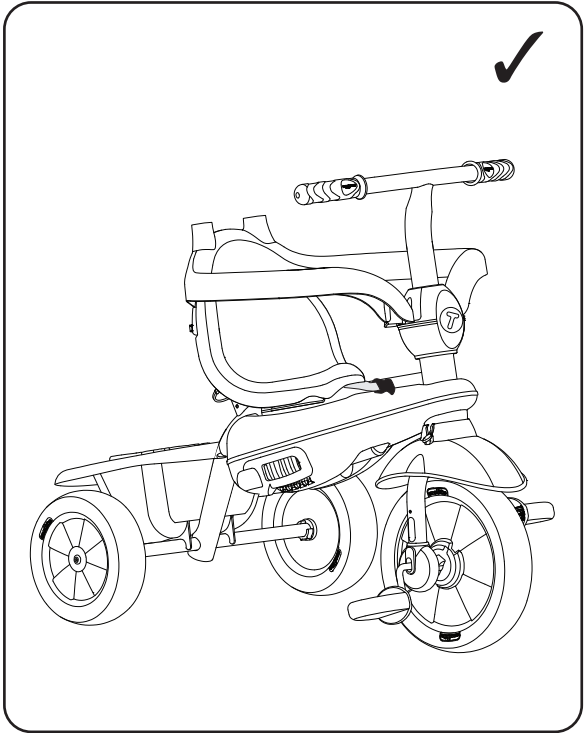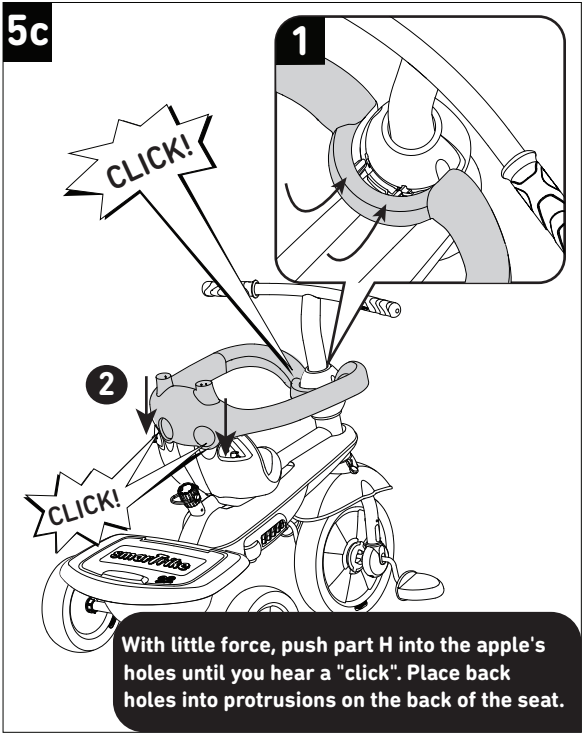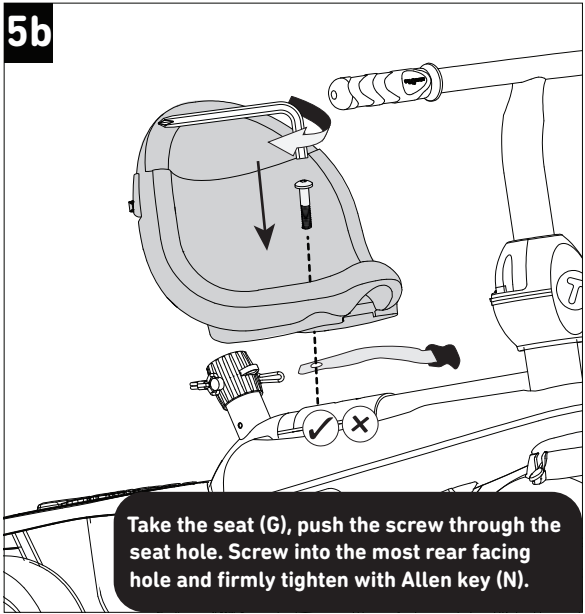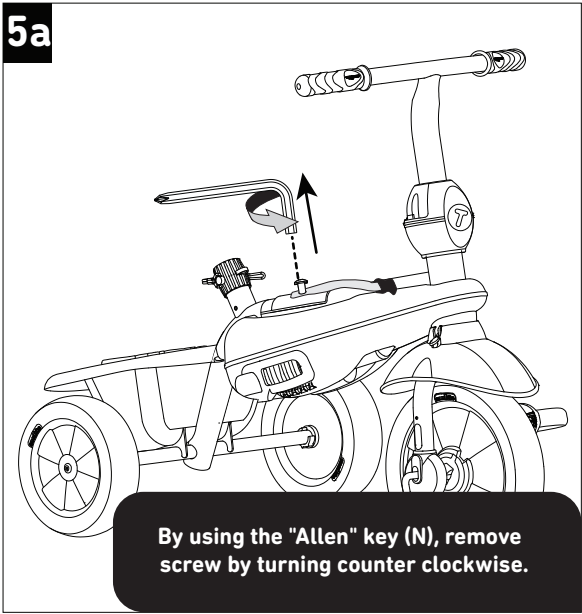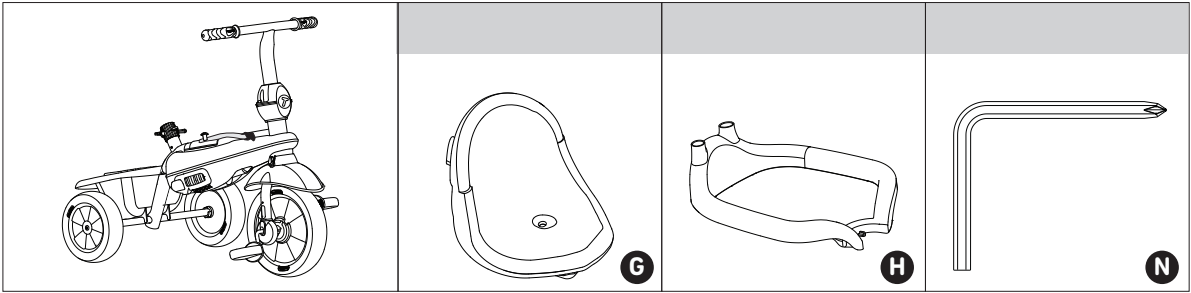





Steps 6-7

Parts needed to complete this section

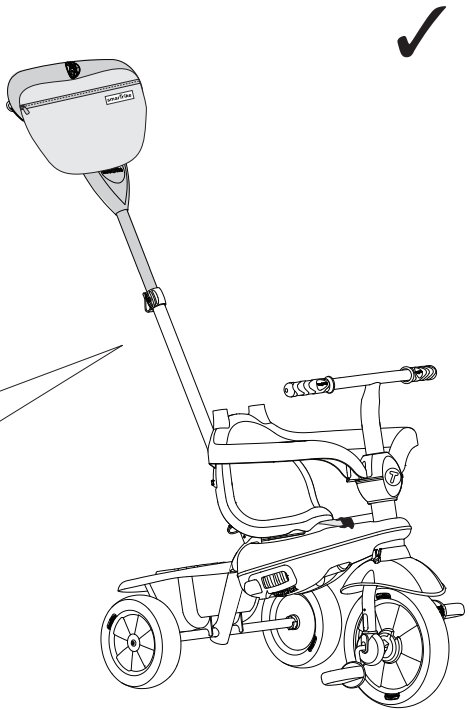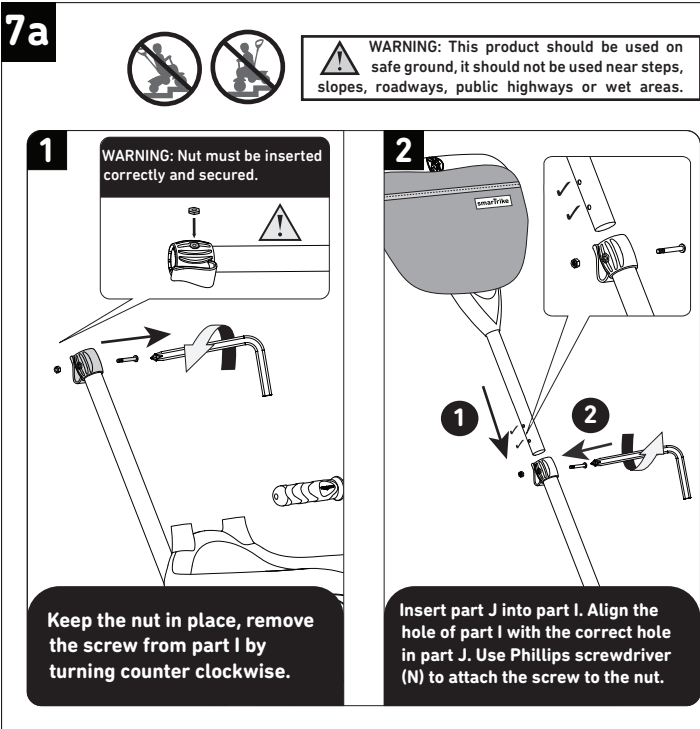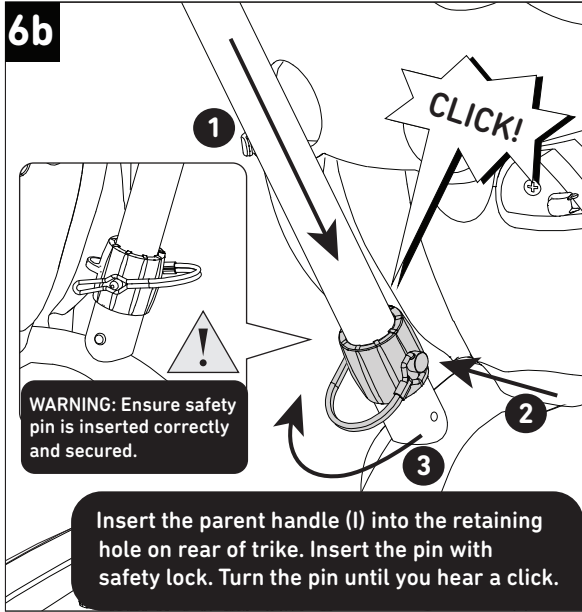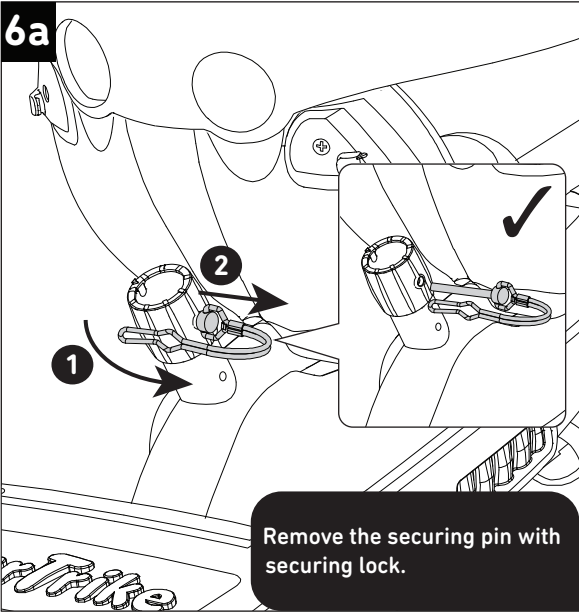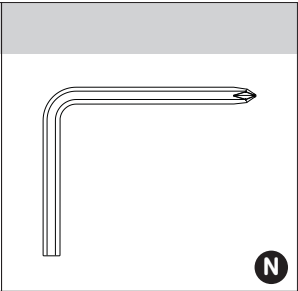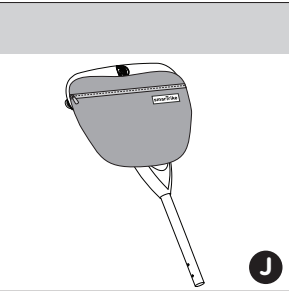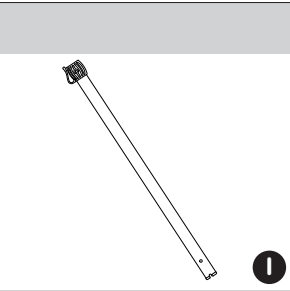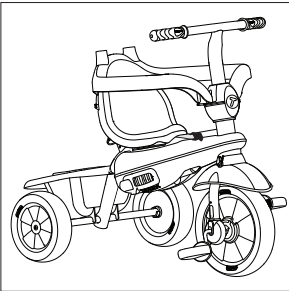


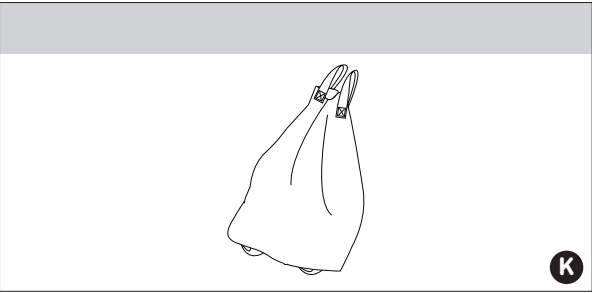
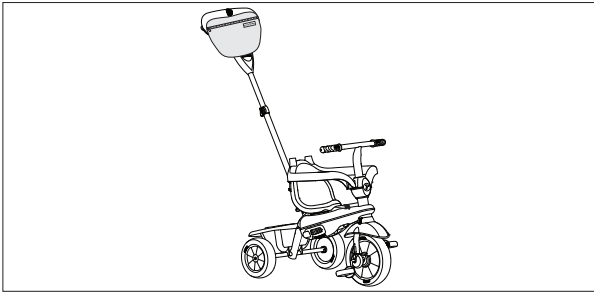


K

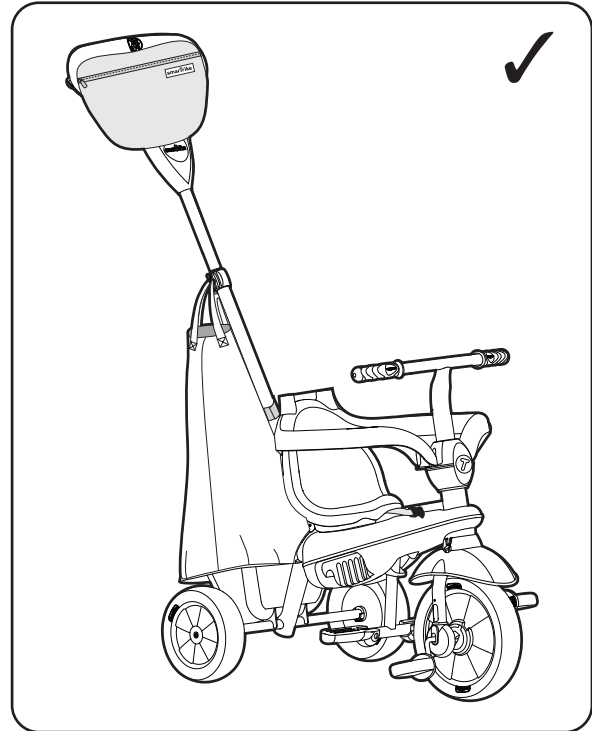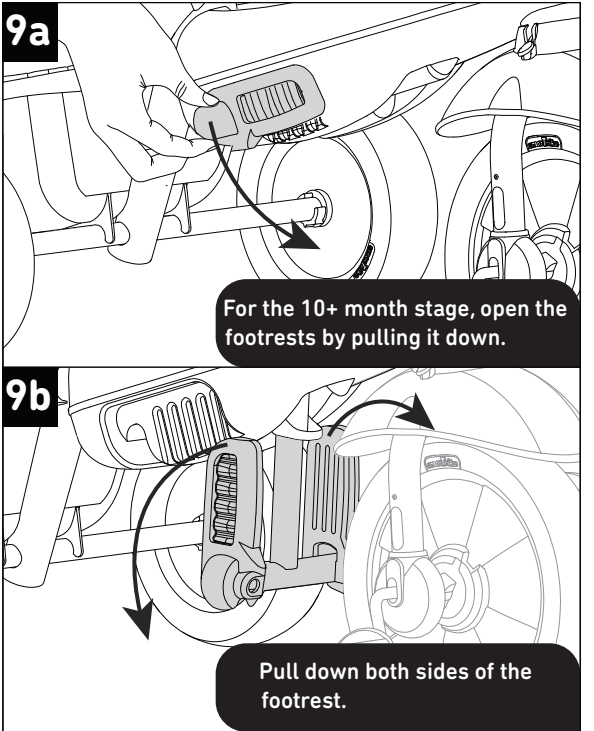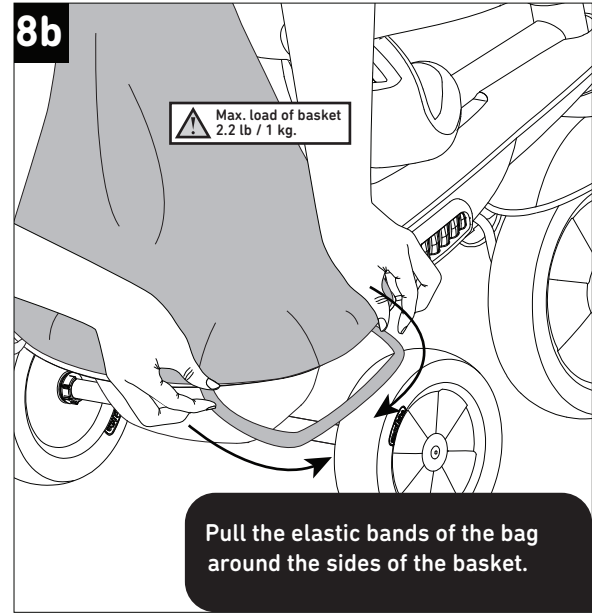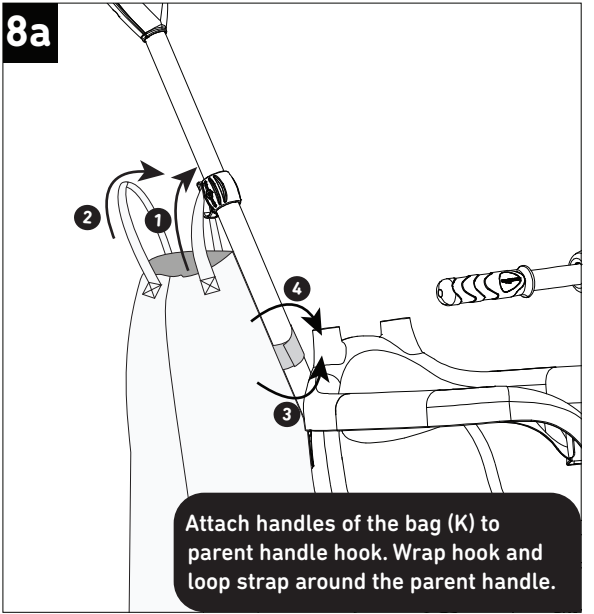


Step 10


Parts needed to complete this section

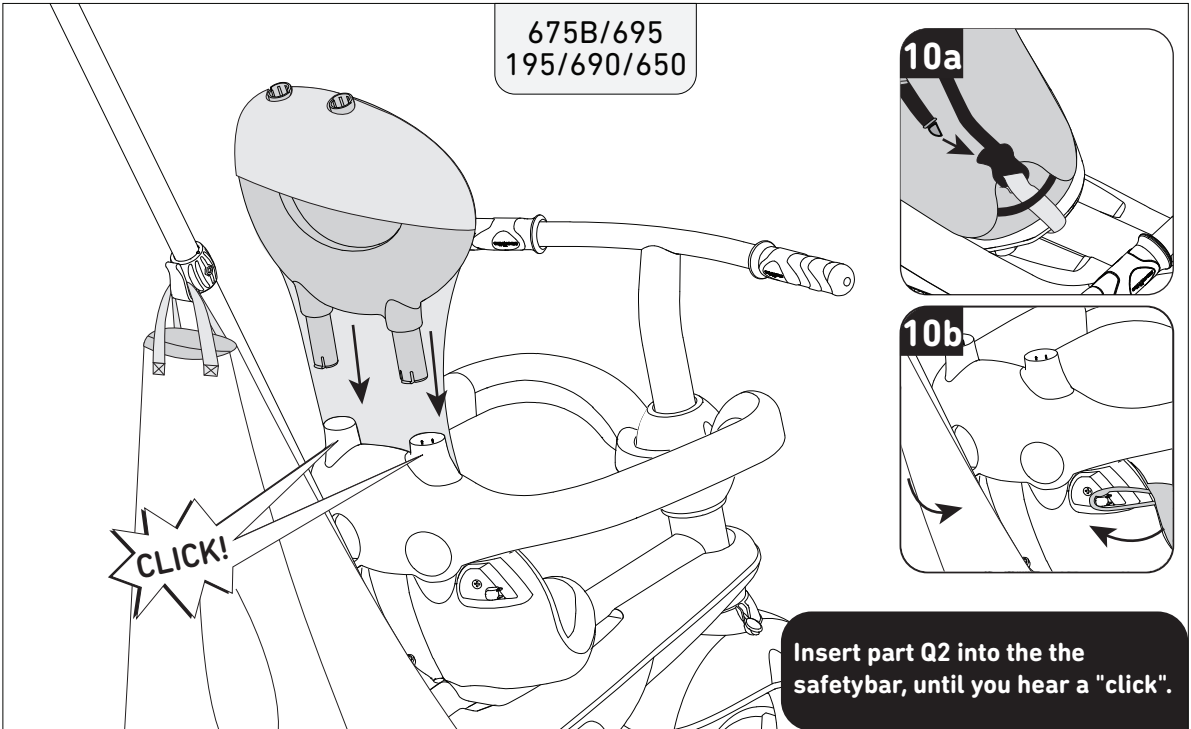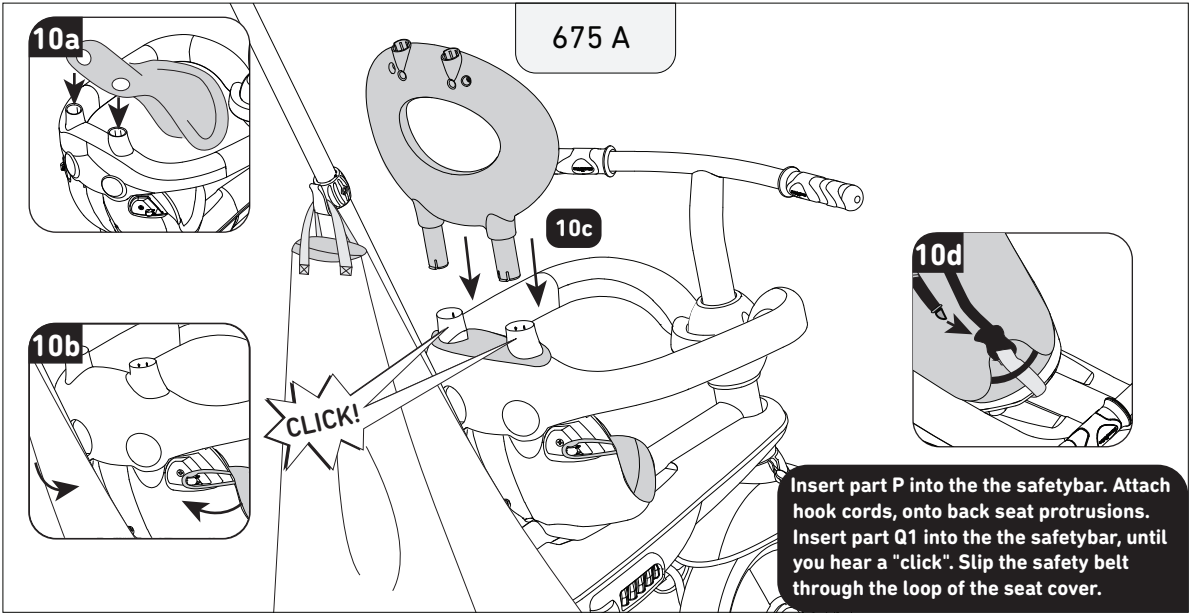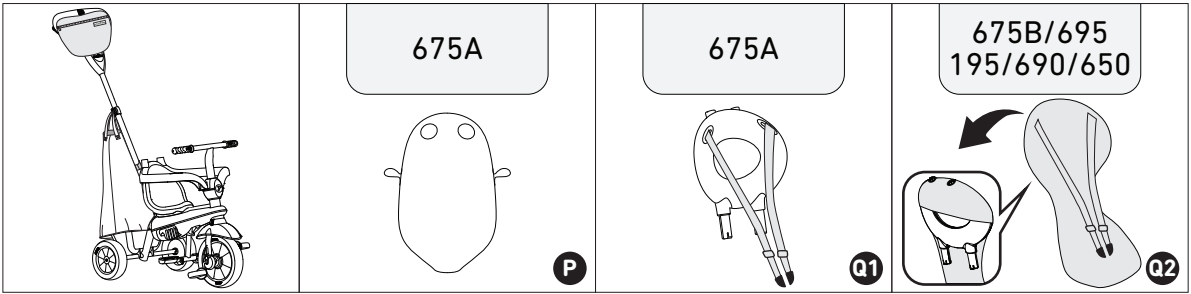

675 A

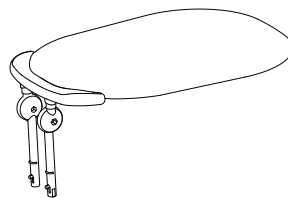

R1

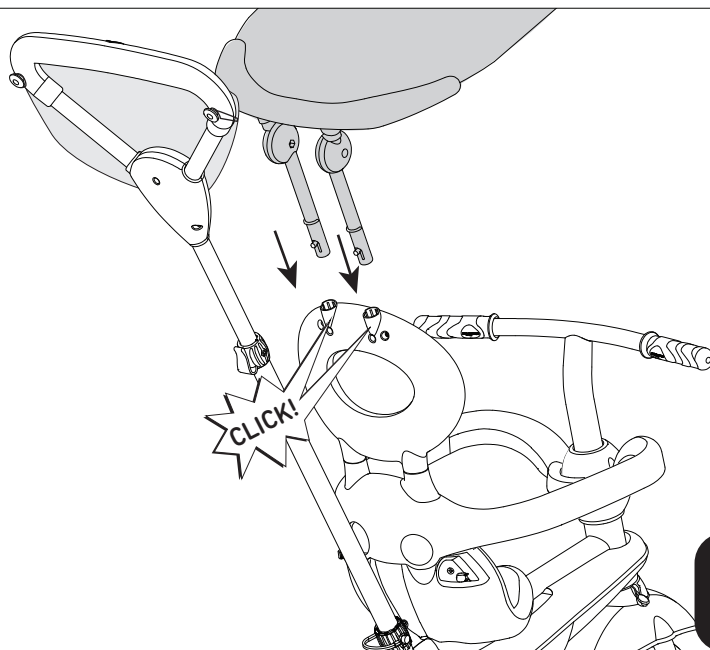


Insert part R1 into the headrest until you hear a "click".

675 A



675 B / 195 / 690

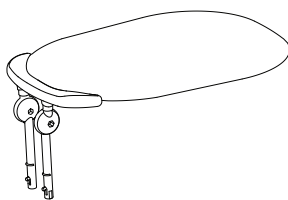


R1




S

11a

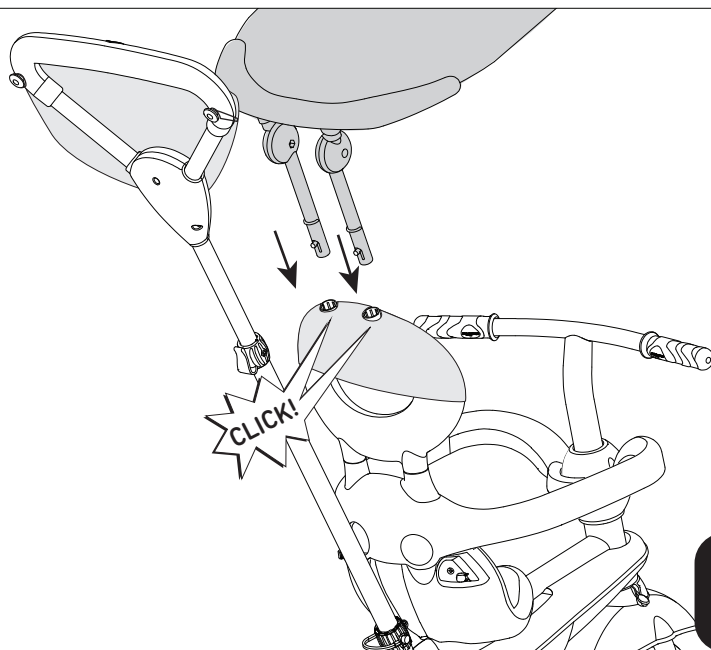

Insert part R1 into the headrest until you hear a "click".

11b

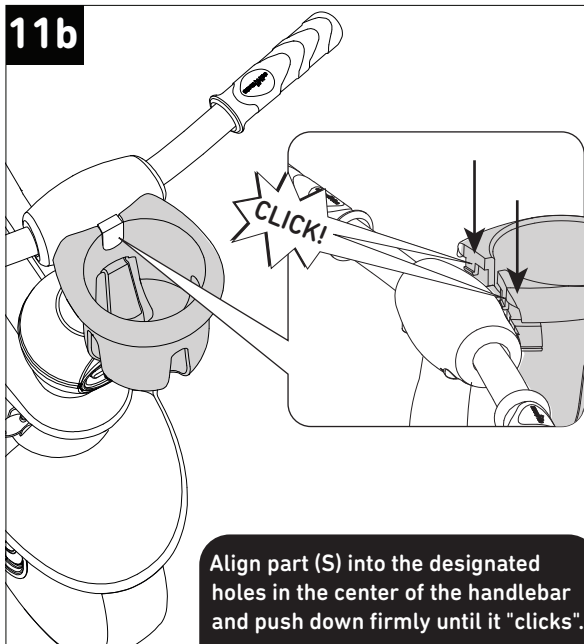


Align part (S) into the designated holes in the center of the handlebar and push down firmly until it "clicks".


675B/195/690



695

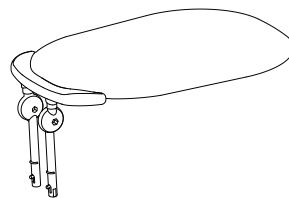

R1


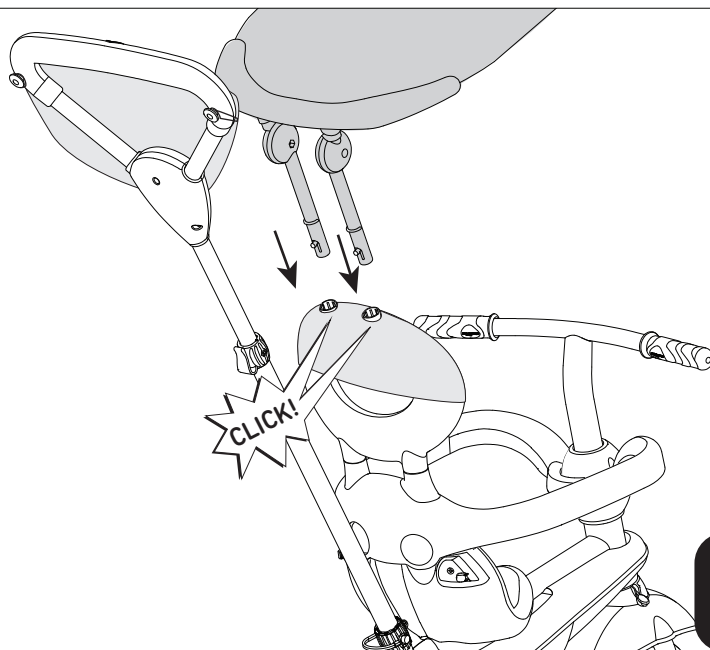


Insert part R1 into the headrest until you hear a "click".

695



650

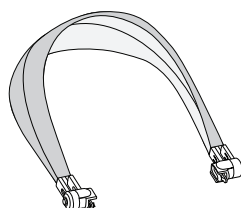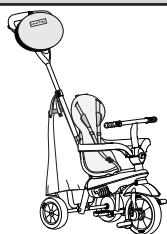


R2




S

11a

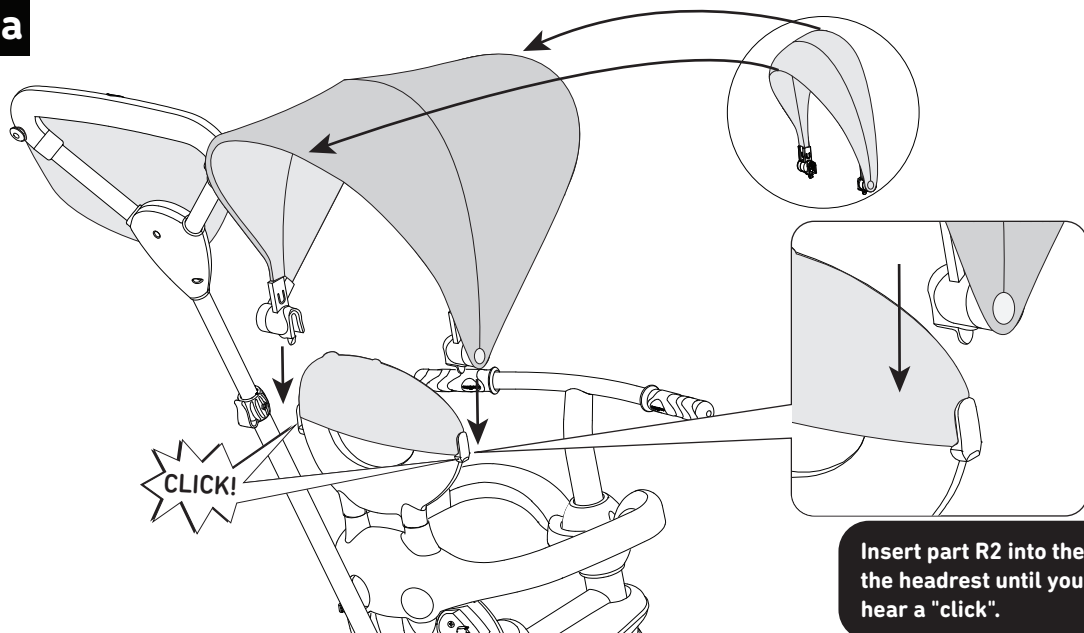

11b

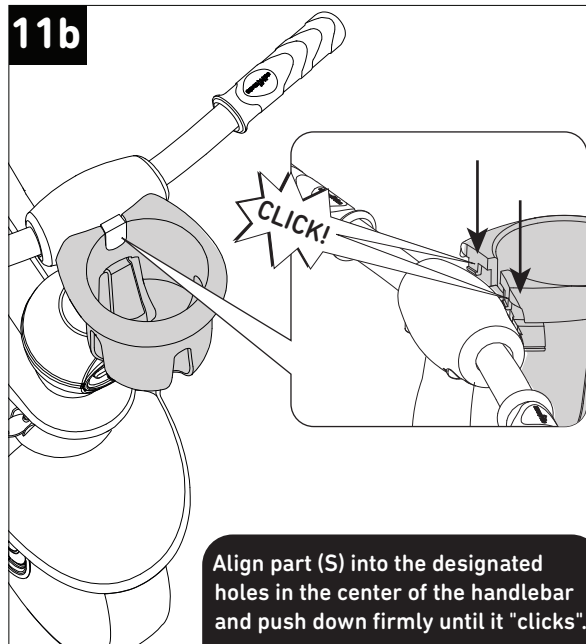


650






Parent Control


10M+

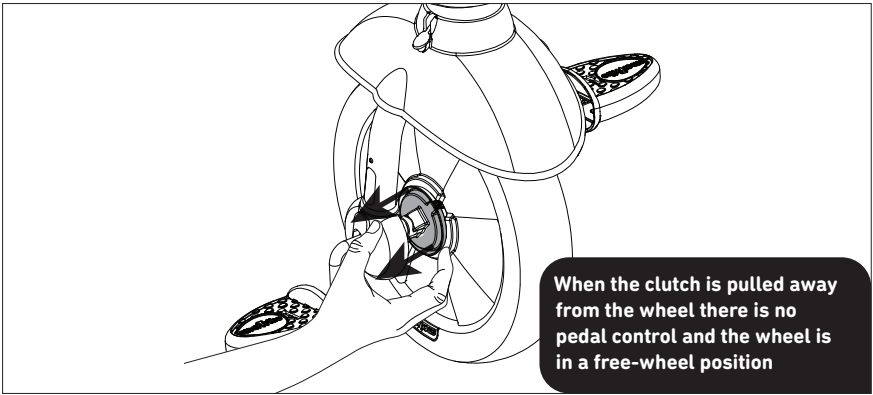

Child Control

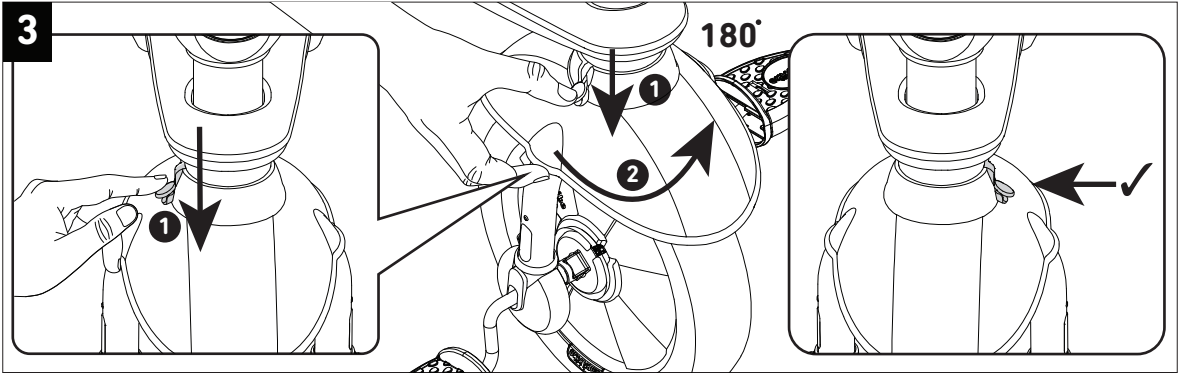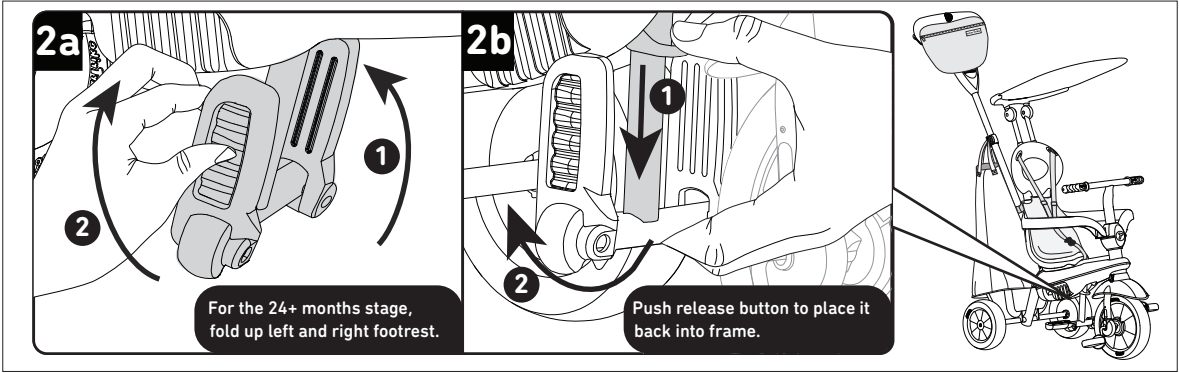
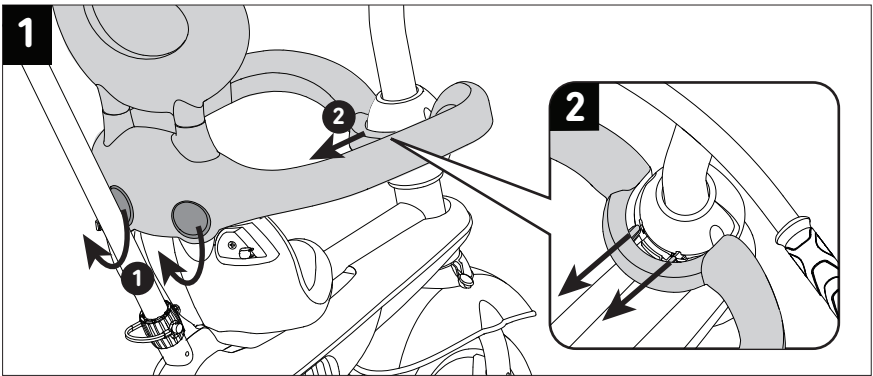


4

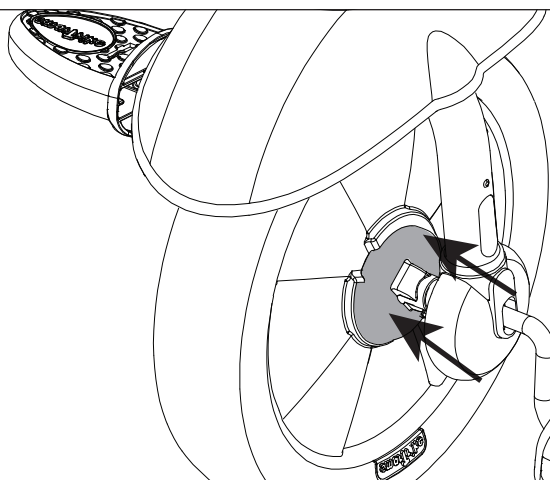


When the clutch is pushed closed and aligned with the front wheel, child has pedal control.


5

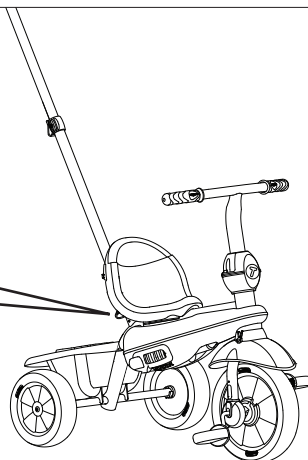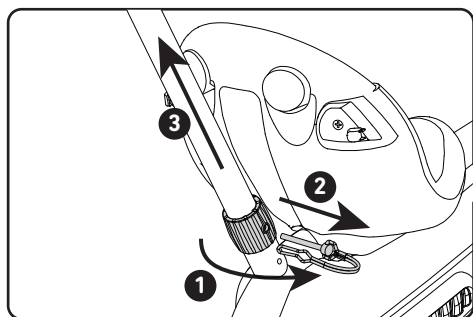

6a

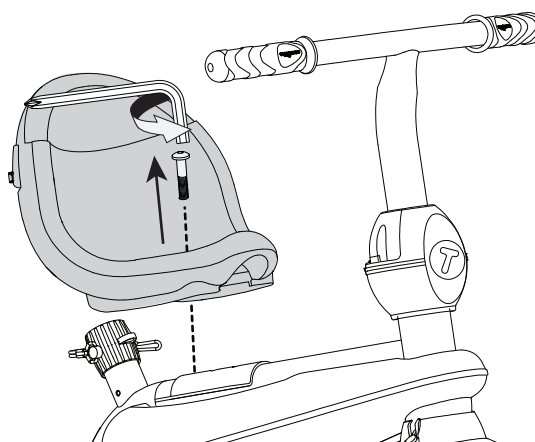

6b

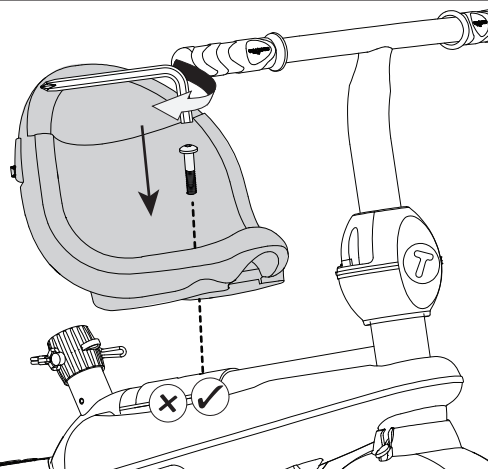

66528057603