

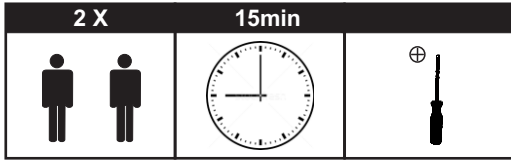
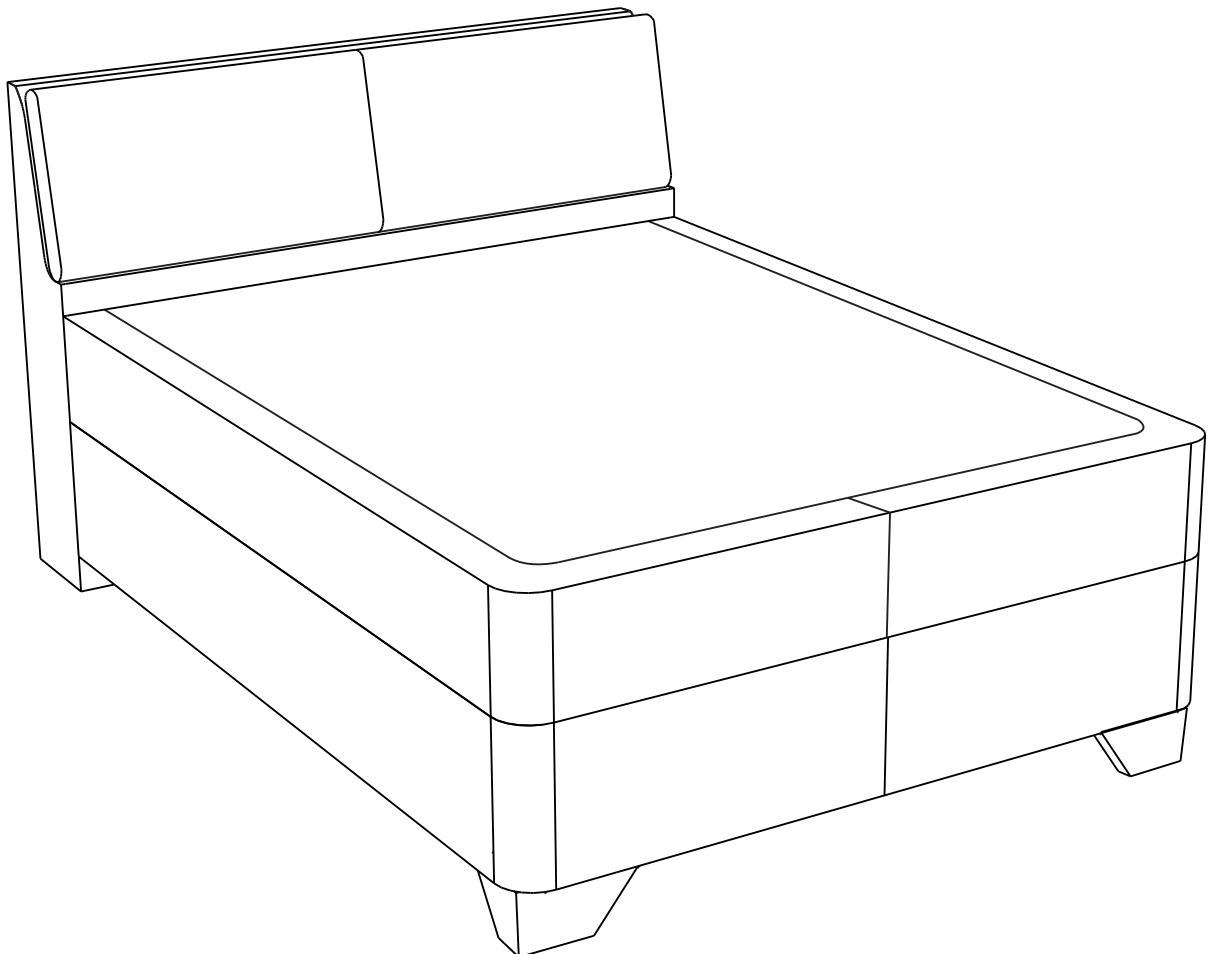



- (D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS



BOXSPRING TIMEA

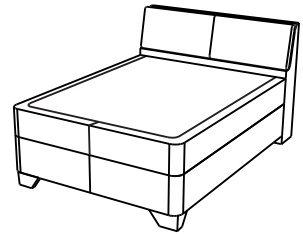

PENSEZ AU TRI !
ENSEMBLE RÉDUISONS
L'IMPACT ENVIRONNEMENTAL
DES EMBALLAGES

ÉLÉMENT(S)
PLASTIQUE(S)
 À JETER

ÉLÉMENT(S)
MÉTAL(S)
CARTON(S) PAPIER(S)
 À RECYCLER





2 X

15min

- D
AUFBAUANLEITUNG
- NL
HANDLEIDING VOOR DE MONTAGE
- TR
MONTAJ TALIMATI
- RO
INSTRUCTIUNI DE ASAMBLARE
- F
INSTRUCTION D'ASSEMBLAGE
- CZ
POKYNY K MONTÁŽI
- BG
ИНСТРУКЦИИ ЗА МОНТАЖ
- HR
NAPUTCI ZA MONTAŽU
- E
INSTRUCCIONES DE MONTAJE

- GB
ASSEMBLY INSTRUCTIONS
- PL
INSTRUKCJA MONTAŻU
- RU
Инструкция по монтажу
- I
PROCEDURA DI ASSEMBLAGGIO
- SK
POKYNY K MONTÁŽI
- HU
KÖZGYŰLÉS UTASÍTÁSOK
- SLO
NAVODILA ZA MONTAŽO
- S
MONTERINGSANVISNING
- LT
DIEGIMO INSTRUKCIJOS

BOXSPRING TIMEA

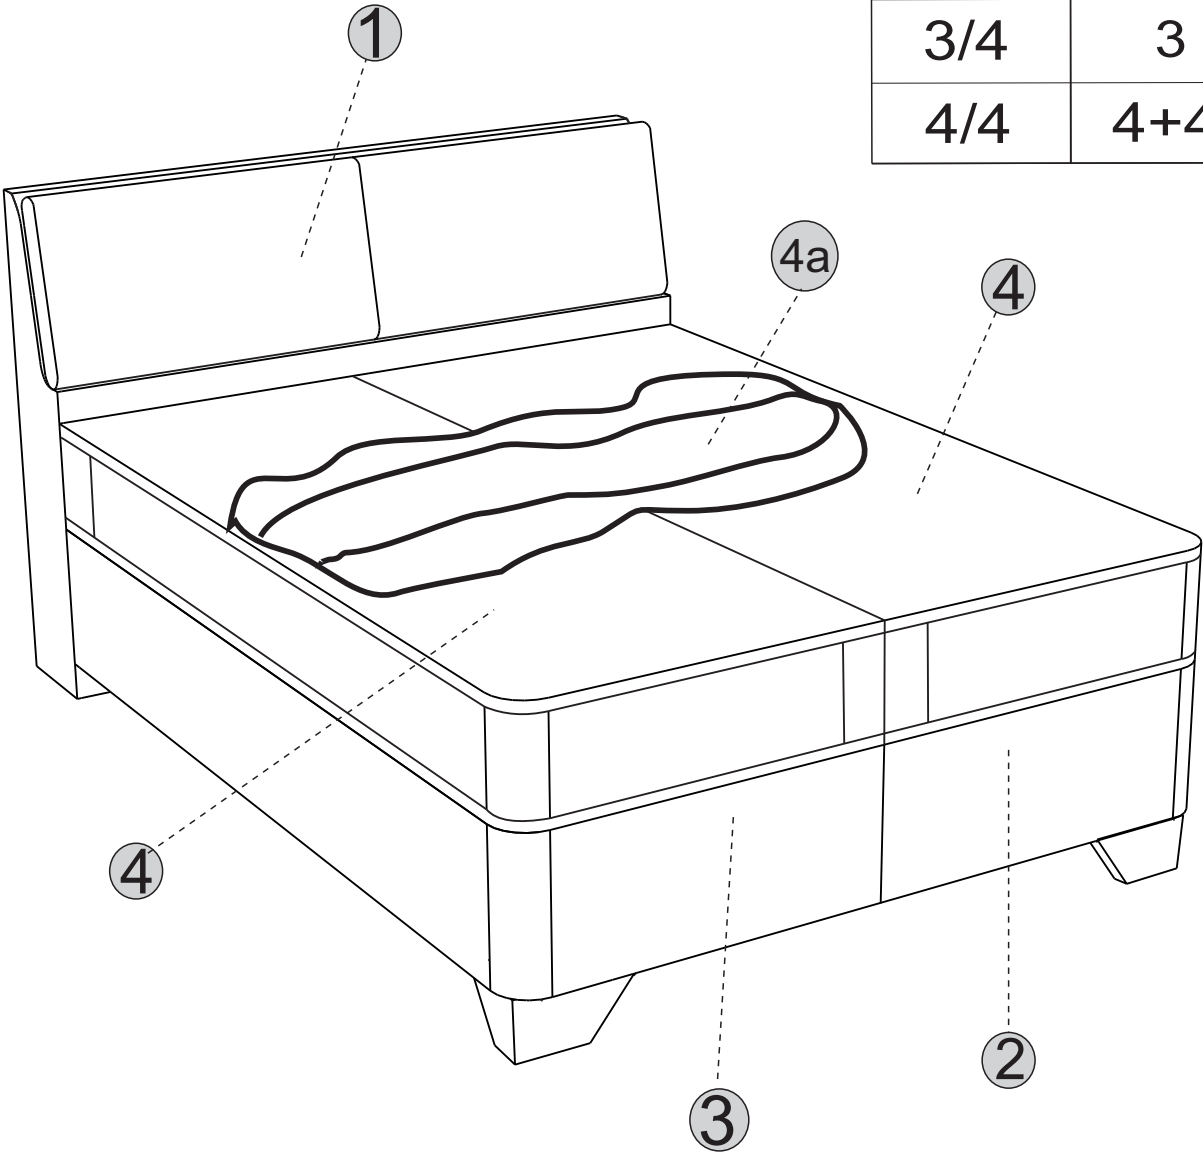

Colli	Teil
1/4	1+4a
2/4	2
3/4	3
4/4	4+4

15min



-  ASSEMBLY INSTRUCTIONS
-  INSTRUKCJA MONTAŻU
-  Инструкция по монтажу
-  PROCEDURA DI ASSEMBLAGGIO
-  POKYNY K MONTÁŽI
-  KÖZGYŰLÉS UTASÍTÁSOK
-  NAVODILA ZA MONTAŽO
-  MONTERINGSANVISNING
-  DIEGIMO INSTRUKCIJOS



2 X

15min

- D

AUFBAUANLEITUNG
- NL

HANDLEIDING VOOR DE MONTAGE
- TR

MONTAJ TALIMATI
- RO

INSTRUCTIUNI DE ASAMBLARE
- F

INSTRUCTION D'ASSEMBLAGE
- CZ

POKYNY K MONTÁŽI
- BG

ИНСТРУКЦИИ ЗА МОНТАЖ
- HR

NAPUTCI ZA MONTAŽU
- E

INSTRUCCIONES DE MONTAJE

- GB

ASSEMBLY INSTRUCTIONS
- PL

INSTRUKCJA MONTAŻU
- RU

Инструкция по монтажу
- I

PROCEDURA DI ASSEMBLAGGIO
- SK

POKYNY K MONTÁŽI
- HU

KÖZGYŰLÉS UTASÍTÁSOK
- SLO

NAVODILA ZA MONTAŽO
- S

MONTERINGSANVISNING
- LT

DIEGIMO INSTRUKCIJOS

BOXSPRING TIMEA

3

A

x6
M8x60

4

H

x6


F

x6


4/6

- (D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS


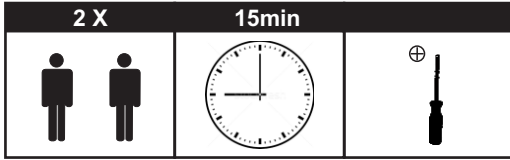


BOXSPRING TIMEA

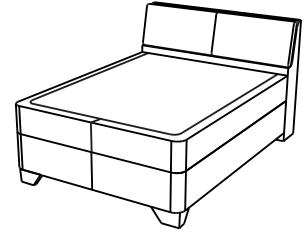

5

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180

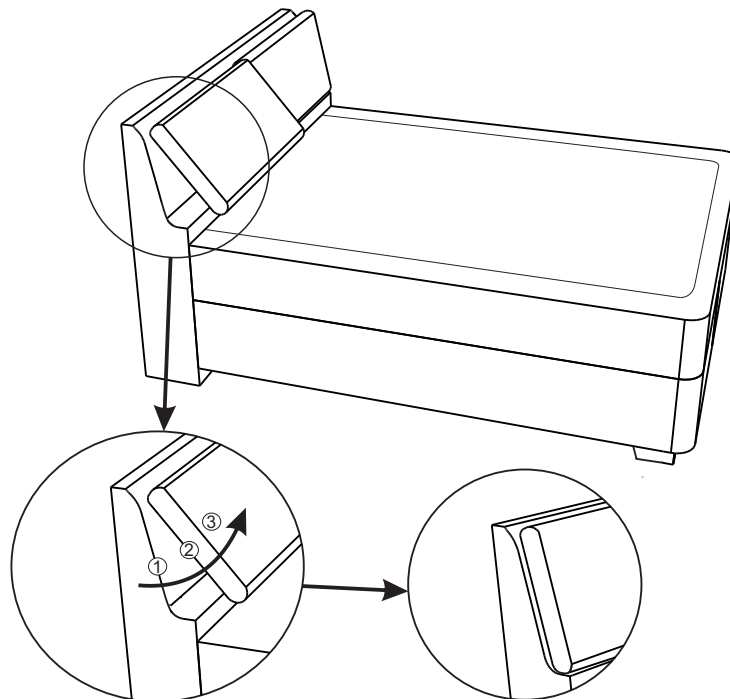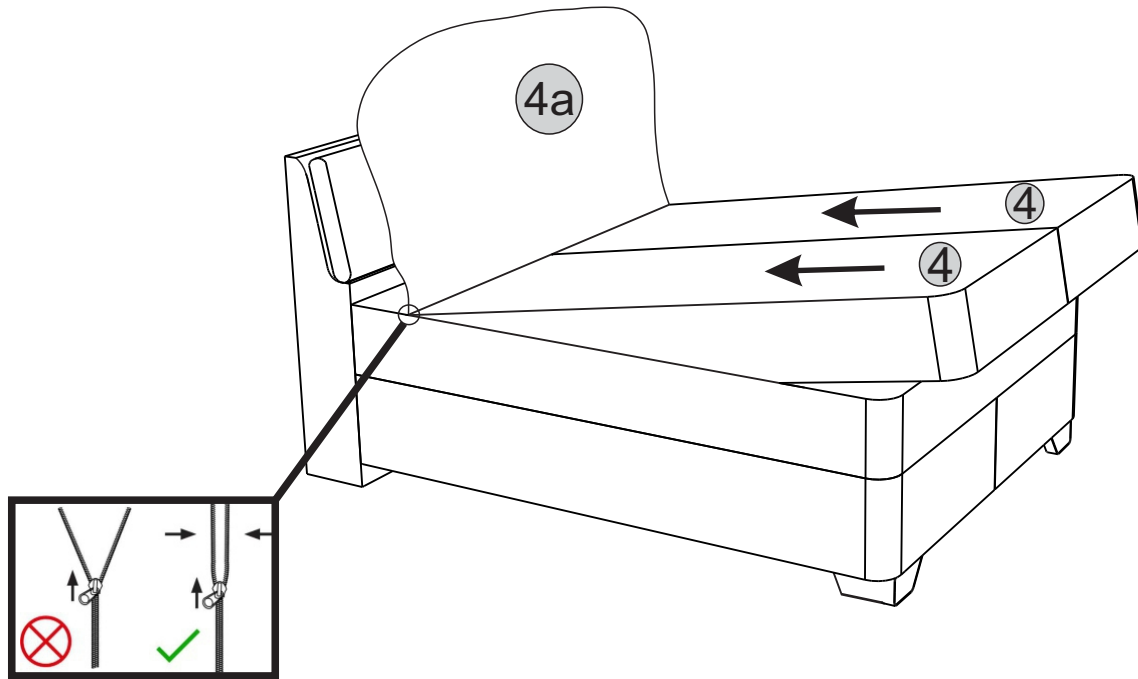

2 X

15min

- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
NAVODILA ZA MONTAŽO
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS

BOXSPRING TIMEA

