
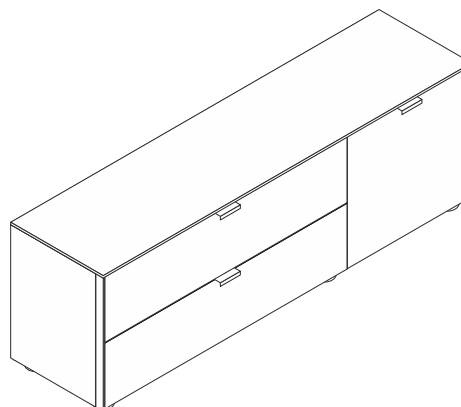


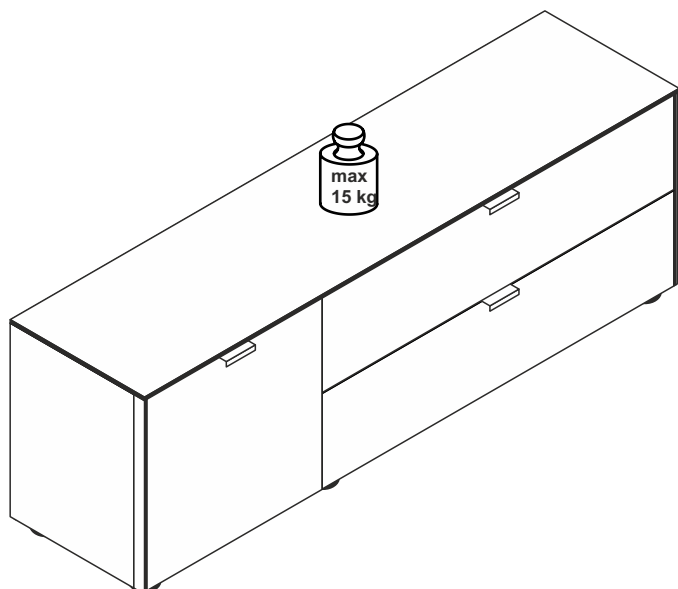

Das Lowboard kann spiegelbildlich montiert werden.
Diese Anleitung zeigt die Ausführung mit der Tür auf der
linken Seite.

Art.Nr. : **0772-LB_111**
Lowboard


REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

			Colli 1/3 : (13) (14) (15) (16) (17) (18) (19) (20) (21) (22) (23) (24) Colli 2/3 : (1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11) (12) Beutel 1/5, 2/5, 3/5, 4/5, 5/5 Colli 3/3 : (25)	

CHICAGO


Beutel 1/5

1-10 2x		1-30 45x		1-70 2x		1-80 12x		1-90 4x		1-122 2x	
1-190 12x		1-200 12x		1-349 12x		2-08 4x		2-10 18x		2-20 22x	
2-160 4x											


Beutel 2/5

1-123 12x		2-173 6x		3-07 2x		3-11 5x		3-42 5x	
--------------	---	-------------	---	------------	---	------------	--	------------	---


Beutel 4/5

2-103 12x		5-01 10x		5-130 2x		5-185 4x	
5-260 1x		5-265 1x		5-280 1x		6-425 3x	


Beutel 5/5

1-36 4x	
------------	---


Colli 1/3




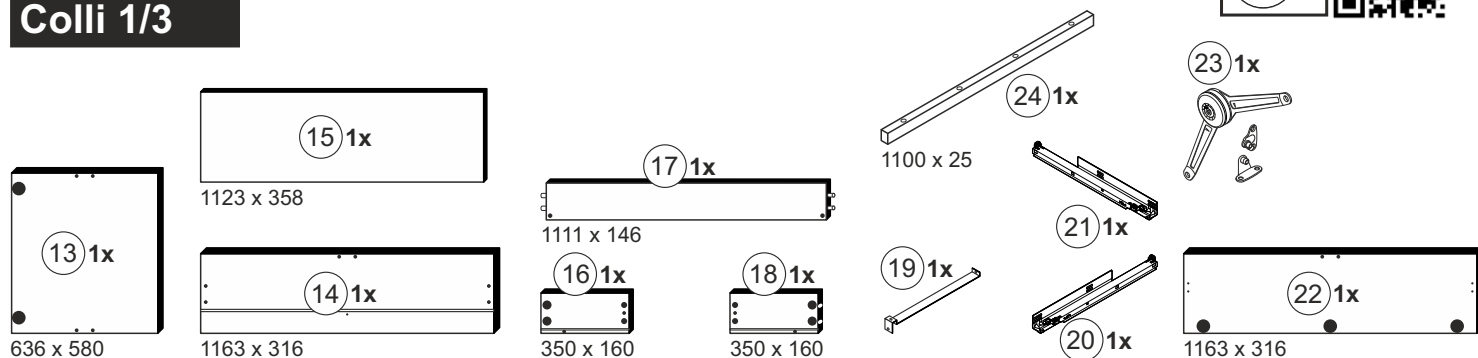


Colli 2/3

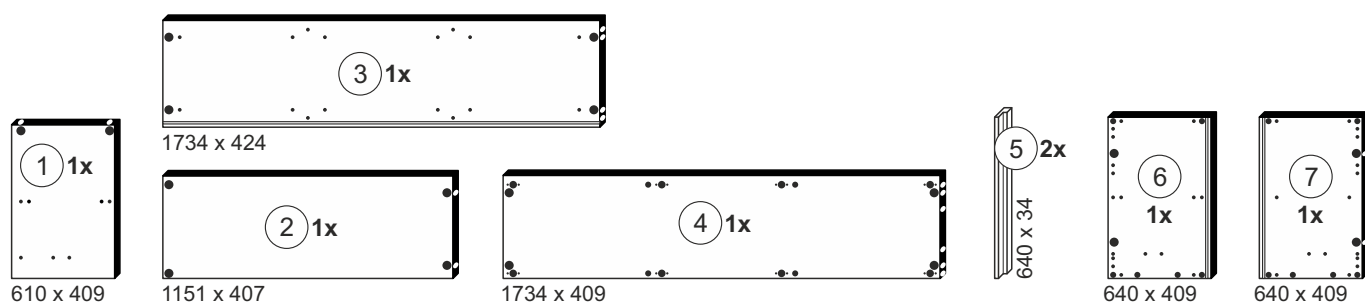

Colli 3/3

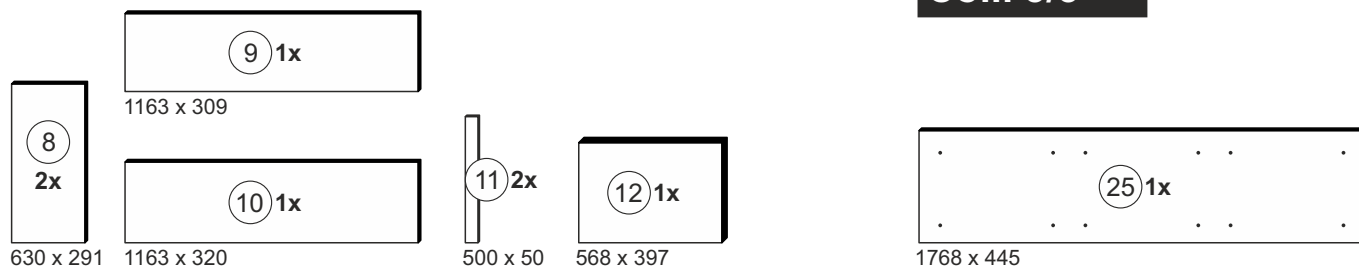

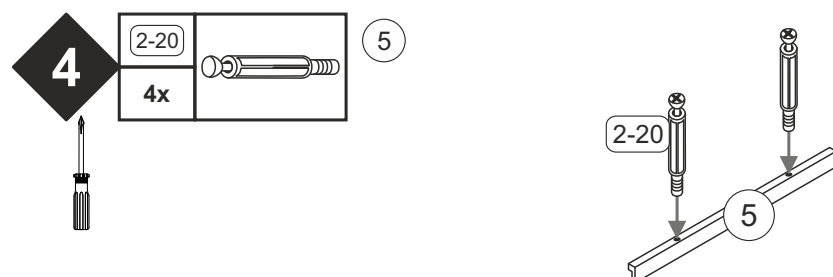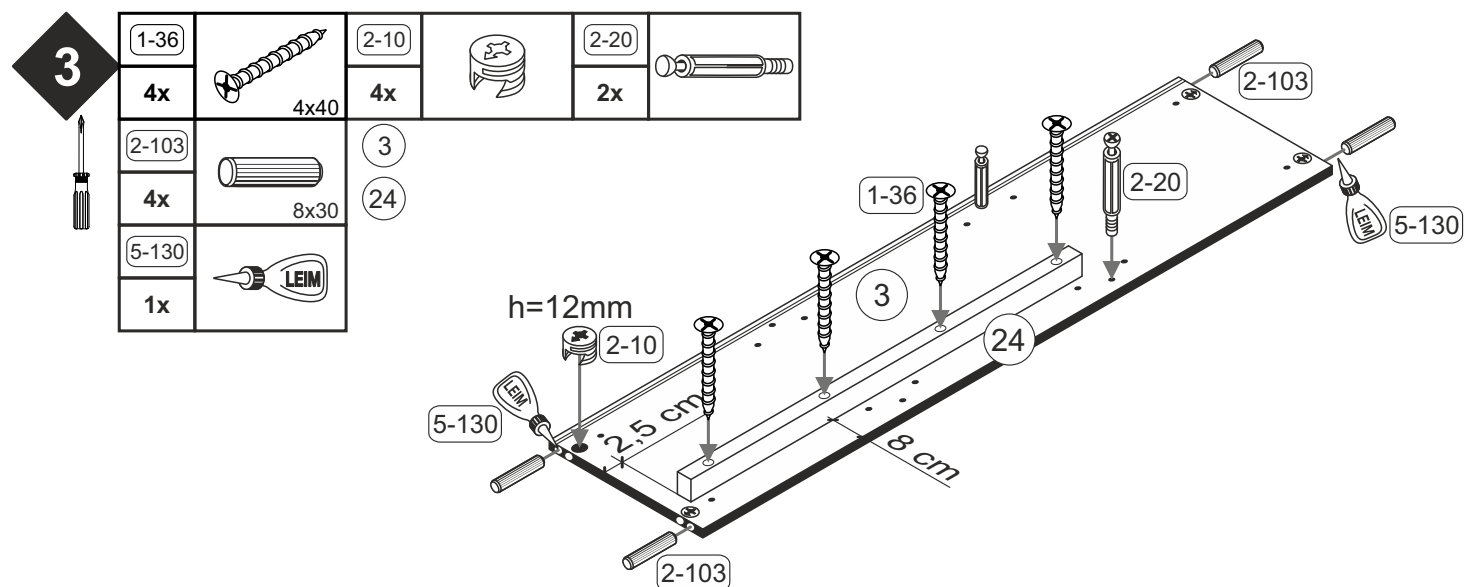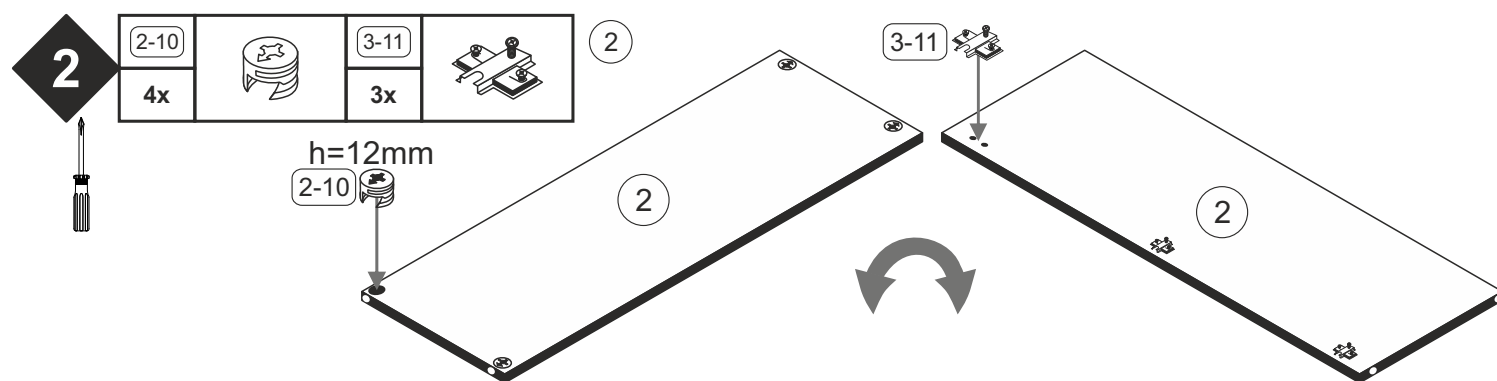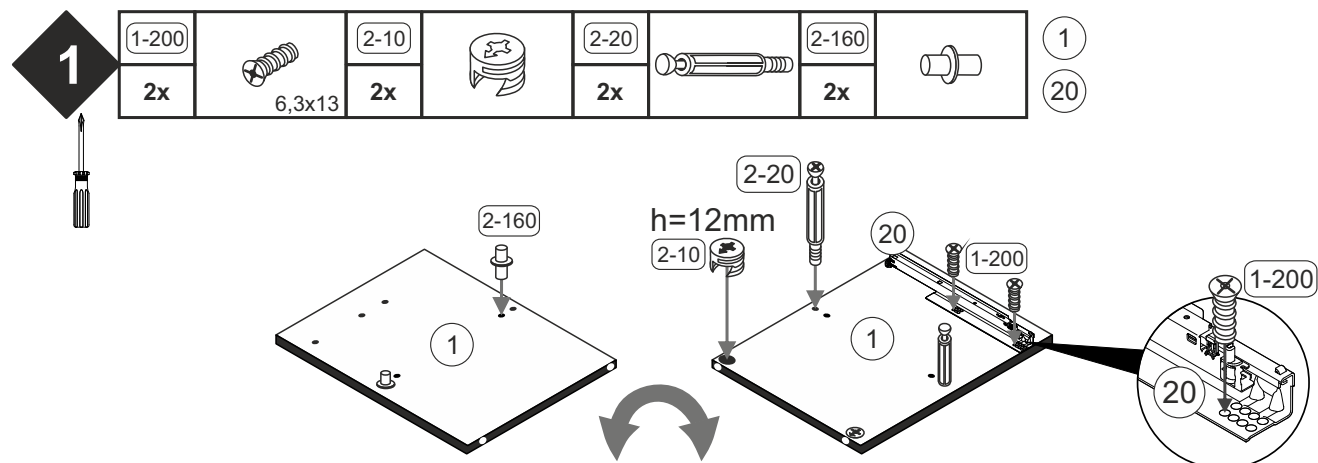

CHICAGO

5

2-10

4x

5-130

1x

2-103

8x

8x30

4

h=12mm

6

2-10

2x

2-20

4x

3-11

2x

2-160

2x

5

6

h=12mm

7

1-200

2x

6,3x13

2-10

2x

2-20




6x

5

7

21

h=12mm

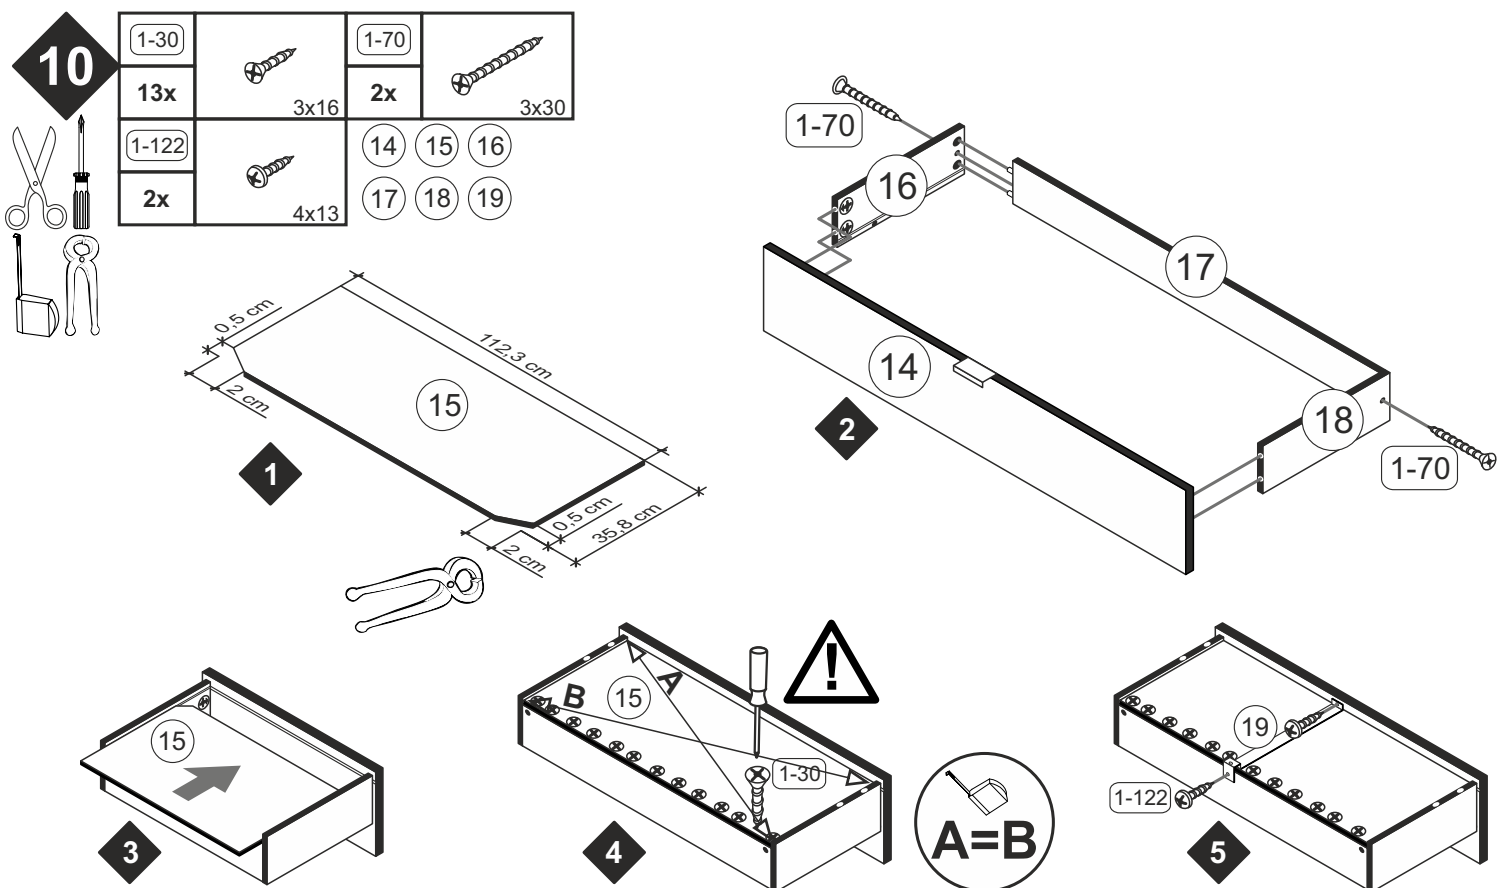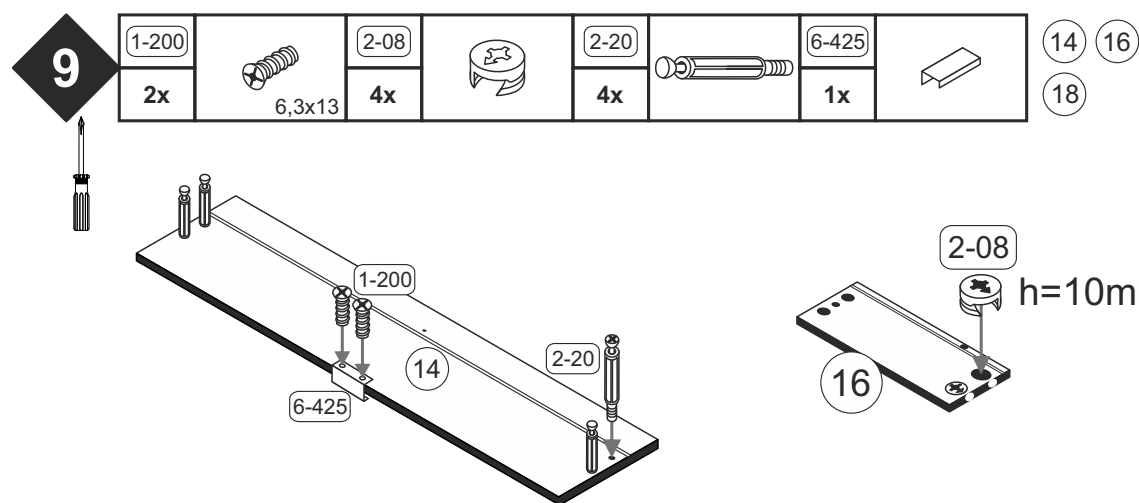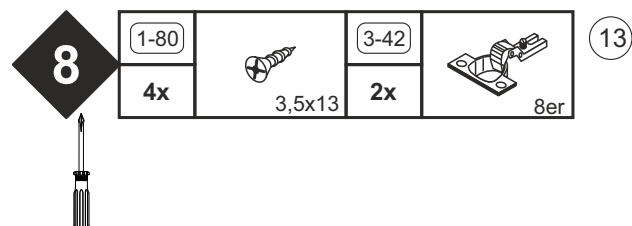


CHICAGO

11



1-80		1-200	
6x	3,5x13	2x	6,3x13
3-42		6-425	
3x	8er	1x	


22

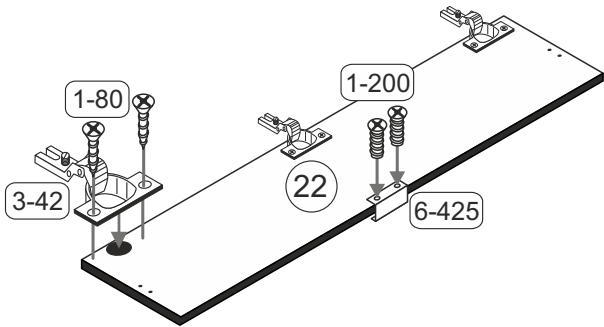



12






1-10		5-130	
2x	6,3x50	1x	LEIM

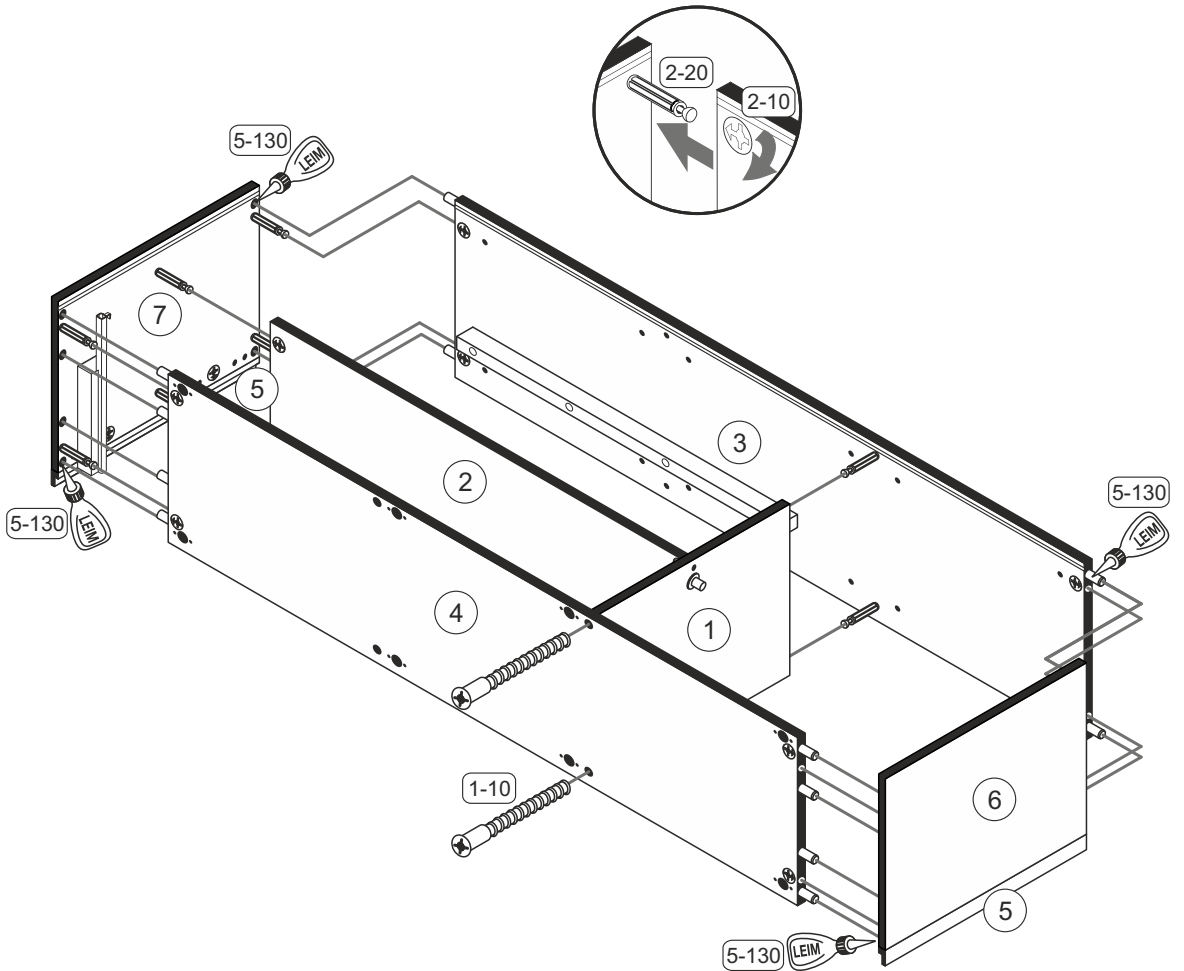

13	1-30		1-90	
	32x	3x16	4x	3,5x20
	1-123			
	12x	4x15		
	5-185			
	4x			
	2-173			
	6x			

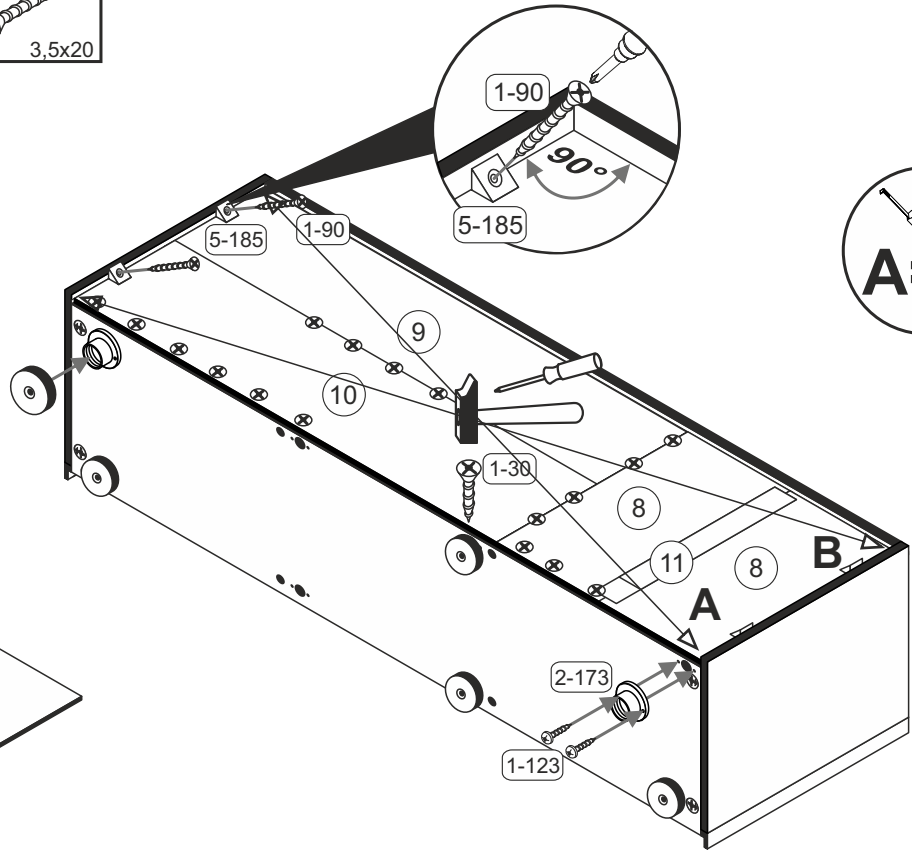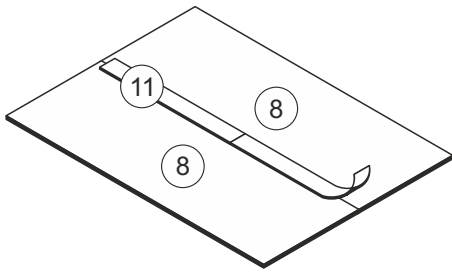


12	5-01		5-280	
	10x		1x	

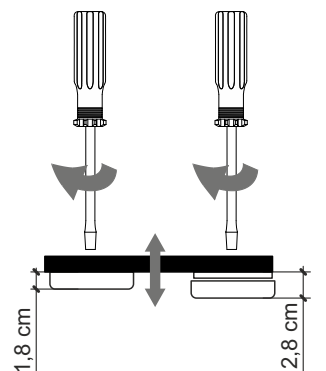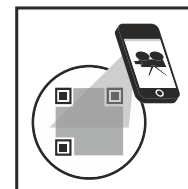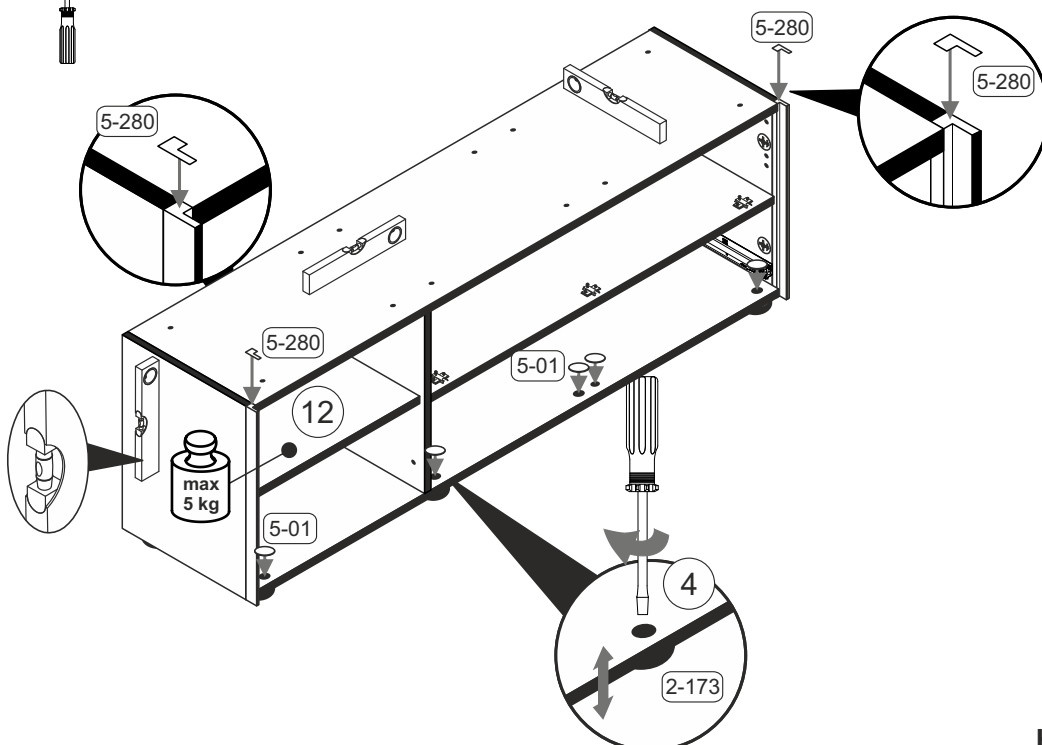


Höhenverstellung der Möbelfüße

13



Einbau des Schubkastens

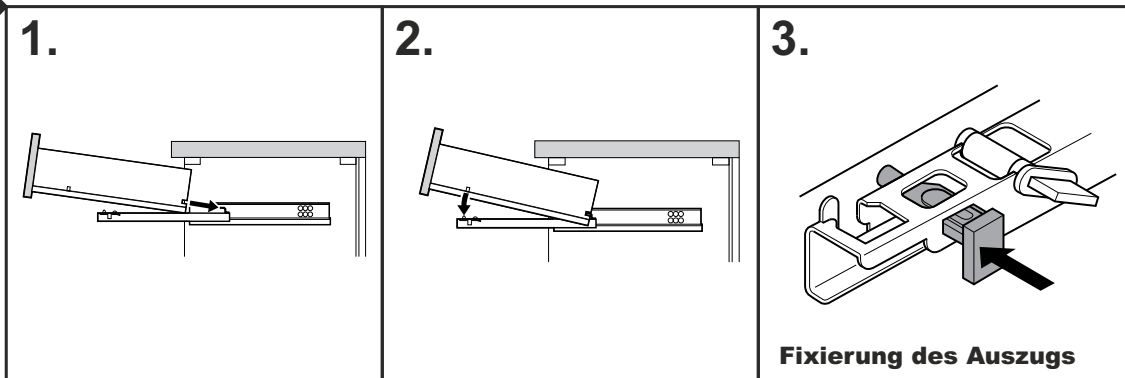


Ausbau des Schubkastens

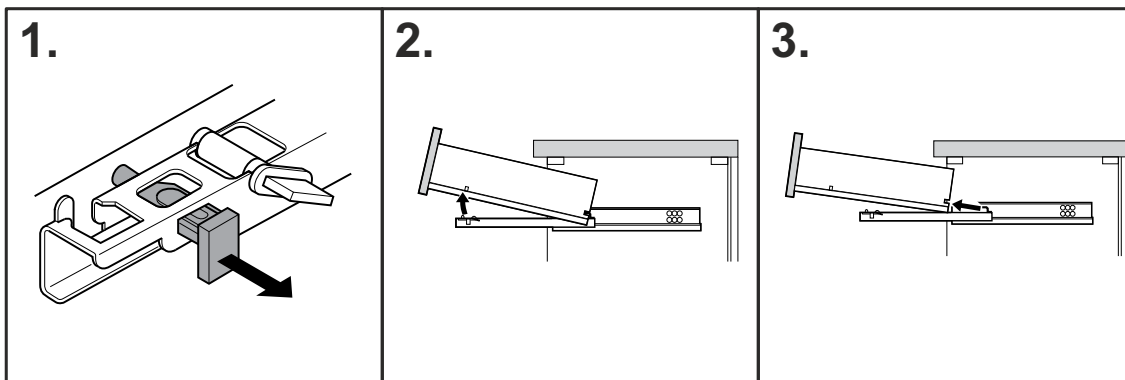


Höhenverstellung des Schubkastens

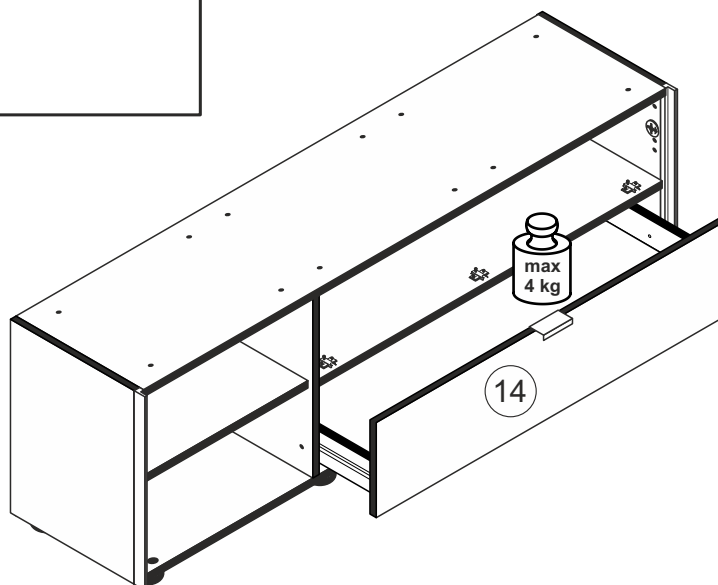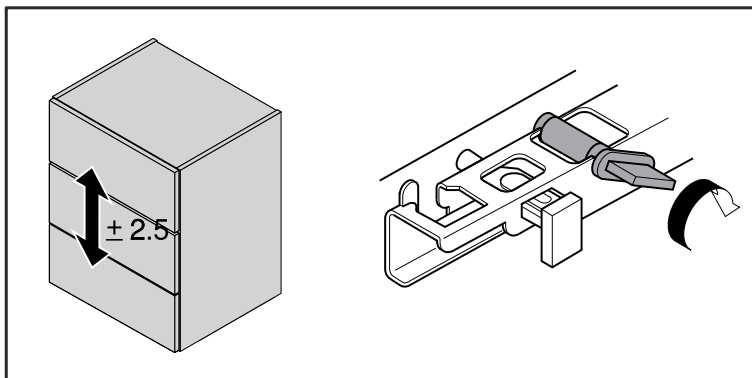


Montage der Holzoberplatte

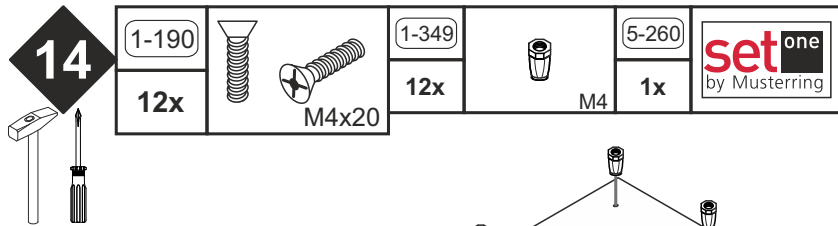

Die Schrauben M4x20 (1-190) müssen mit der Hand eingedreht werden.

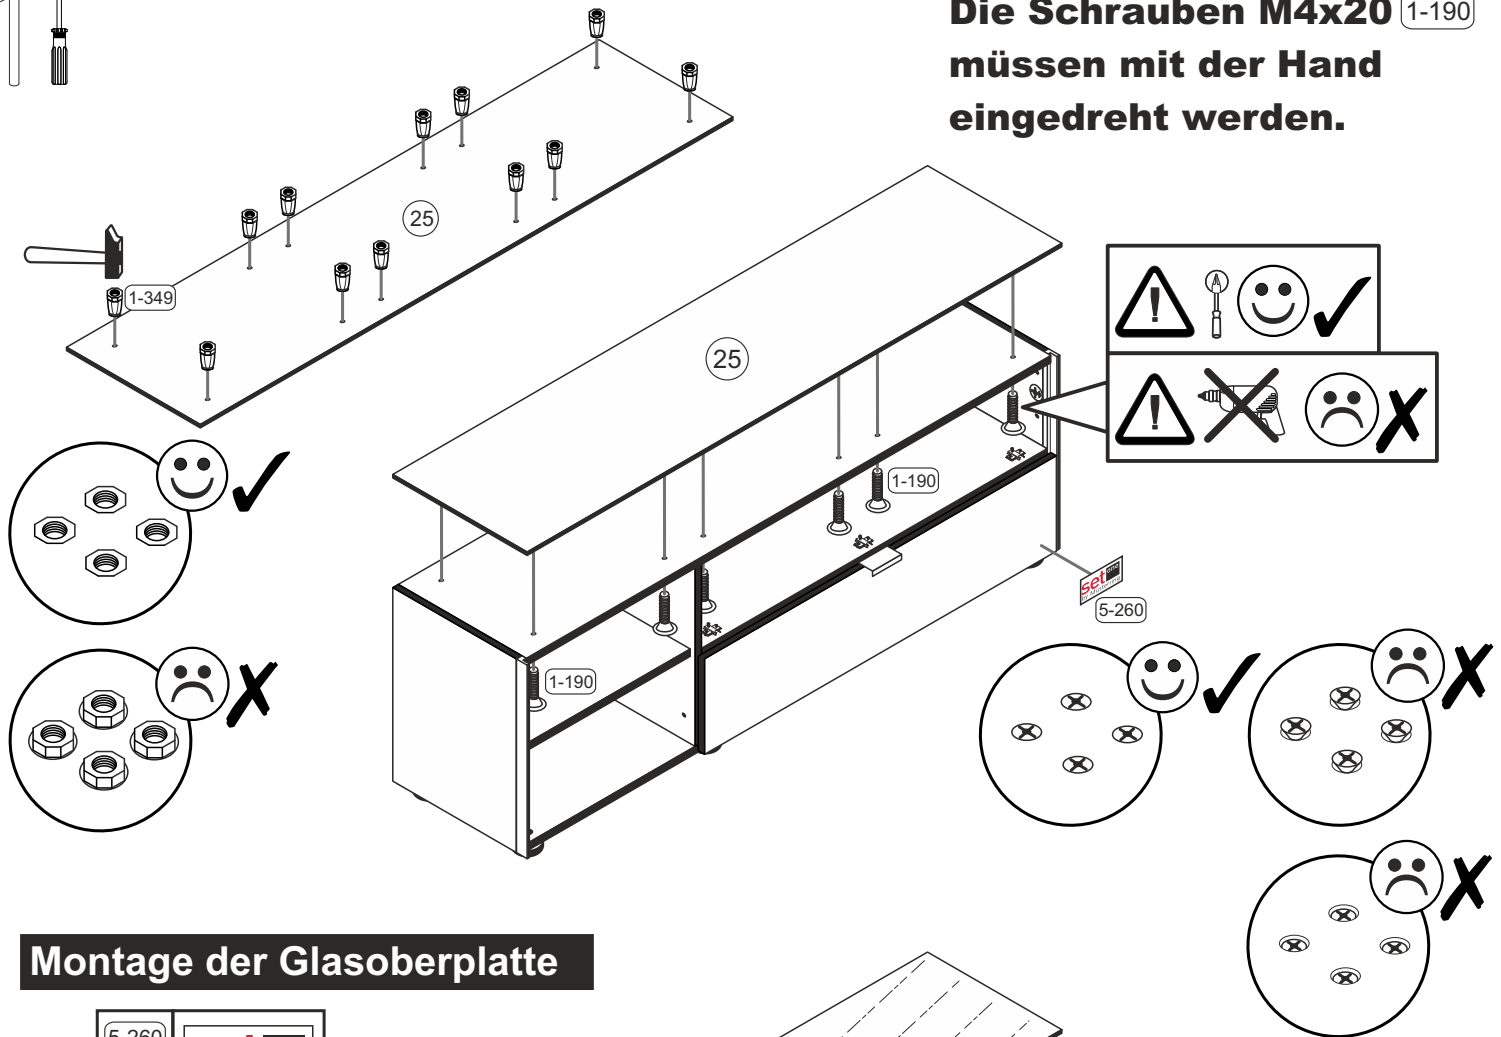


Montage der Glasoberplatte


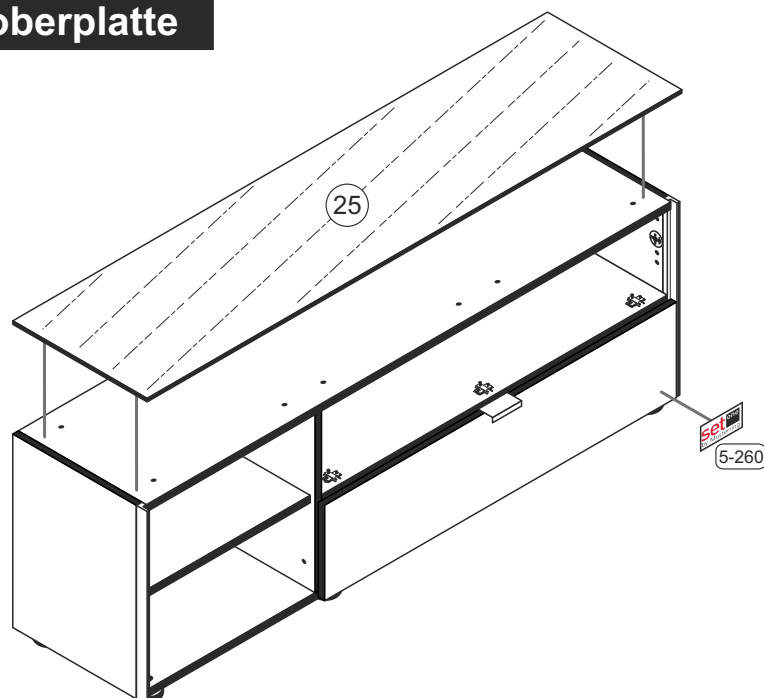






1-80	1-200	3-07	6-425
2x	4x	2x	1x
3,5x13	6,3x13		

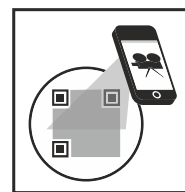

Montage der Türdämpfung

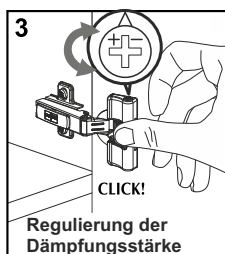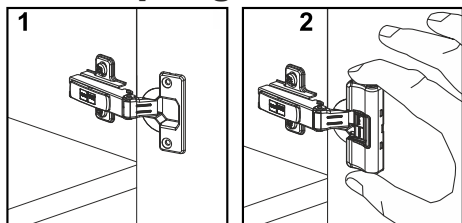

Stütze unten ⁽²³⁾ überdrehen

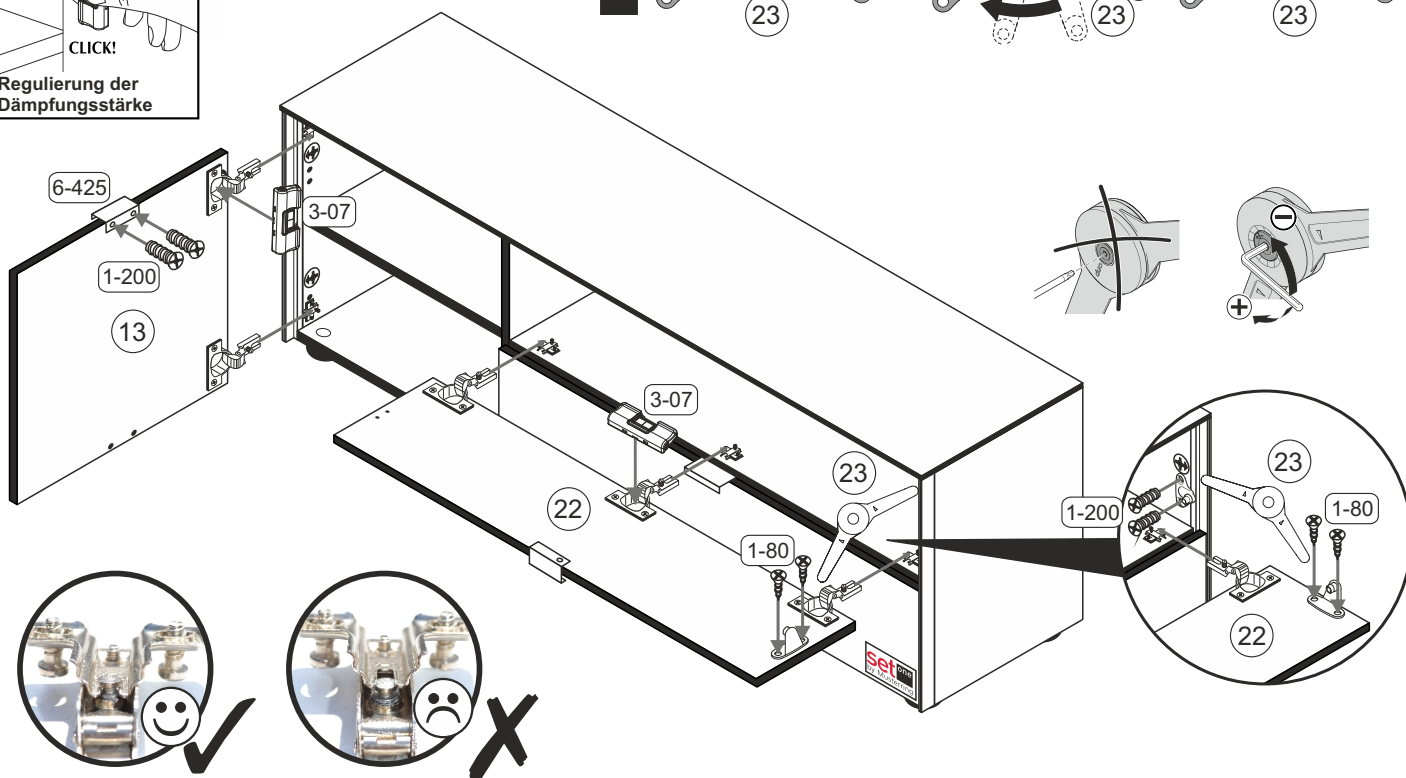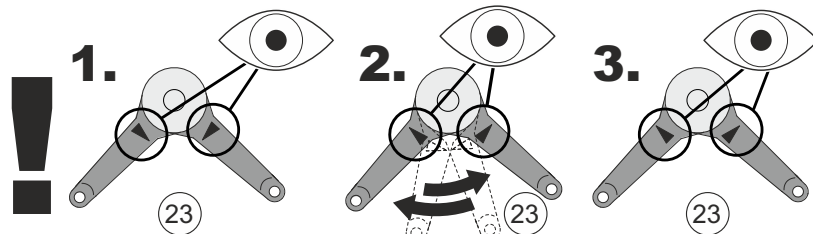

Türen einstellen (Scharniere justieren)
Adjusting the doors (adjusting the hinges)
Régler les portes (ajuster les charnières)
Sistemare le porte (regolare le cerniere)
Deuren instellen (scharnieren afstellen)
Nastawić drzwi (wyregulować zawiasy)
Vyrovnajte dvířka (seřid'te závěsy)
Nastavenie dverí (nastavenie závesov)
Állítsa be az ajtókat (állítsa be a zsanérokot)
Reglare usi (ajustare balamale)
Kapıların ayarlanması (menteselerin seviye ayarı)
Регулировка дверей (регулировка шарнира)

