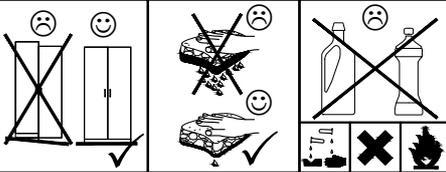
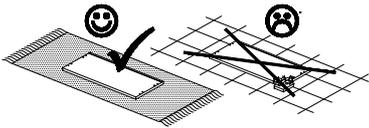


# Montageanleitung

## Clara 13, 3trg.



### DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

### EN - Caution

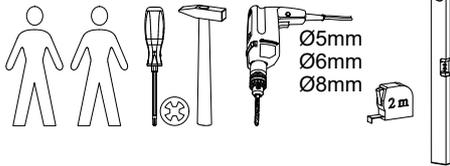

Follow carefully the assembling instructions described in the directions.



### FR - Sécurité

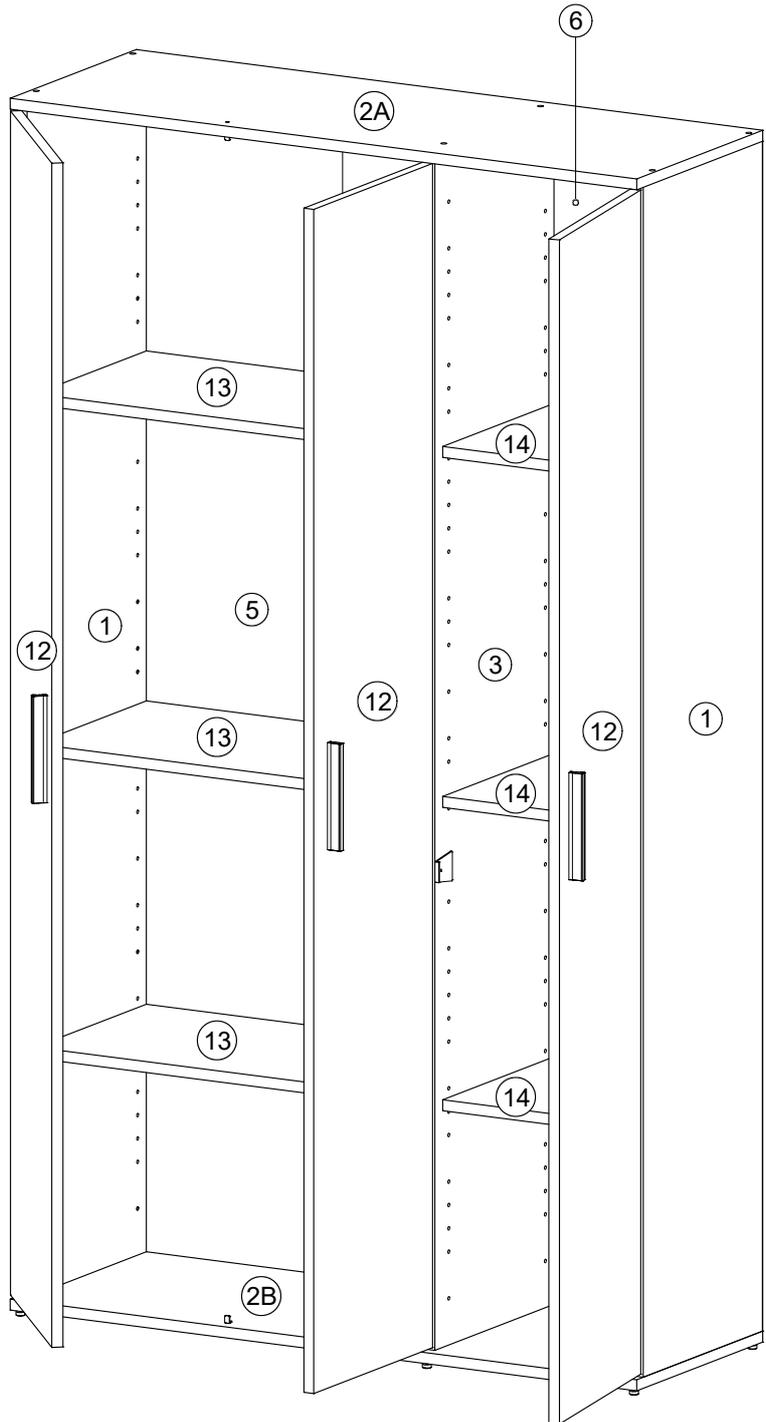
Respecter les instructions de montage décrites dans la notice.

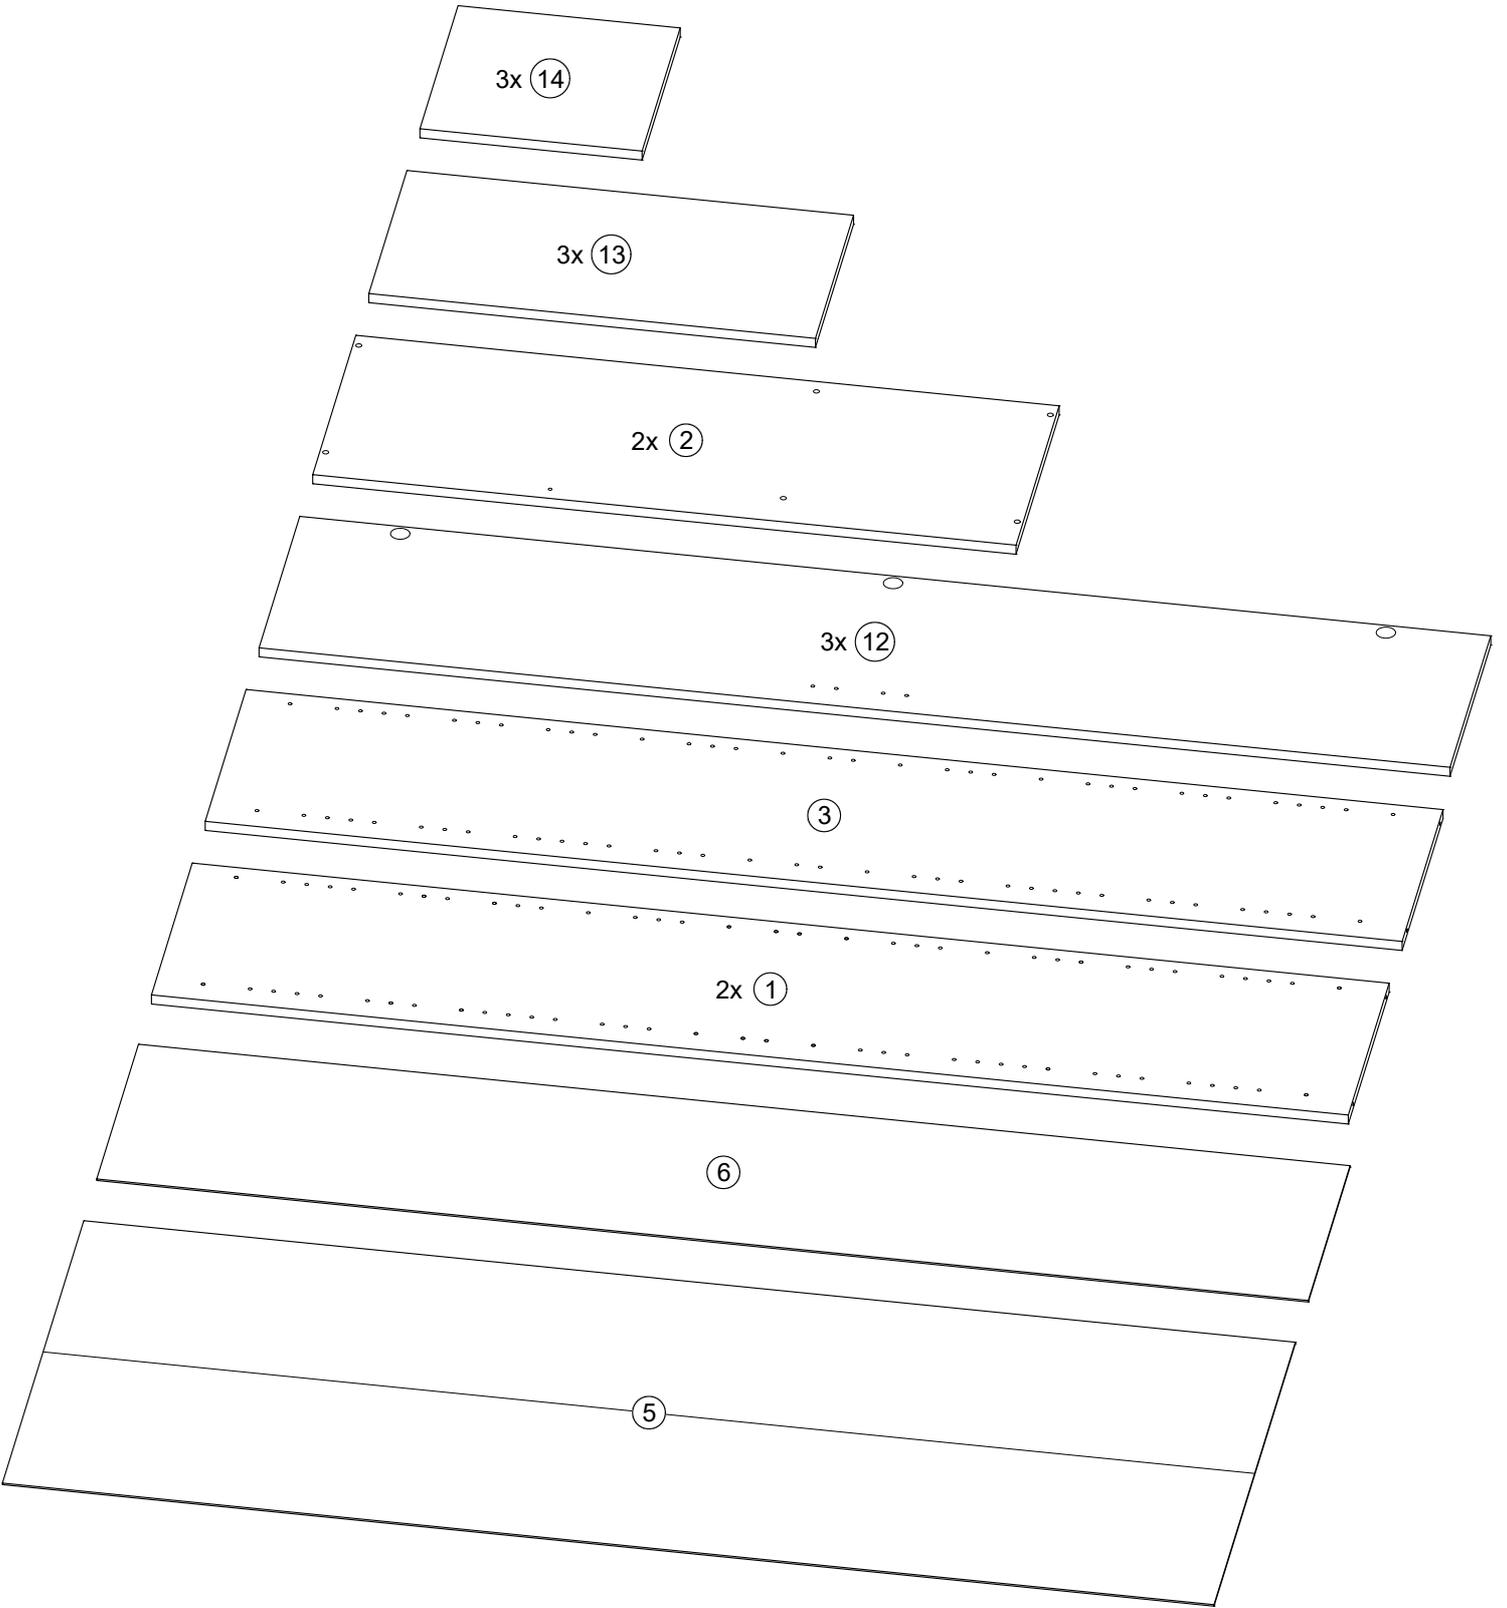
### NL - Veiligheid

De in de Gebruiksaanwijzing beschreven Instructies respecteren.

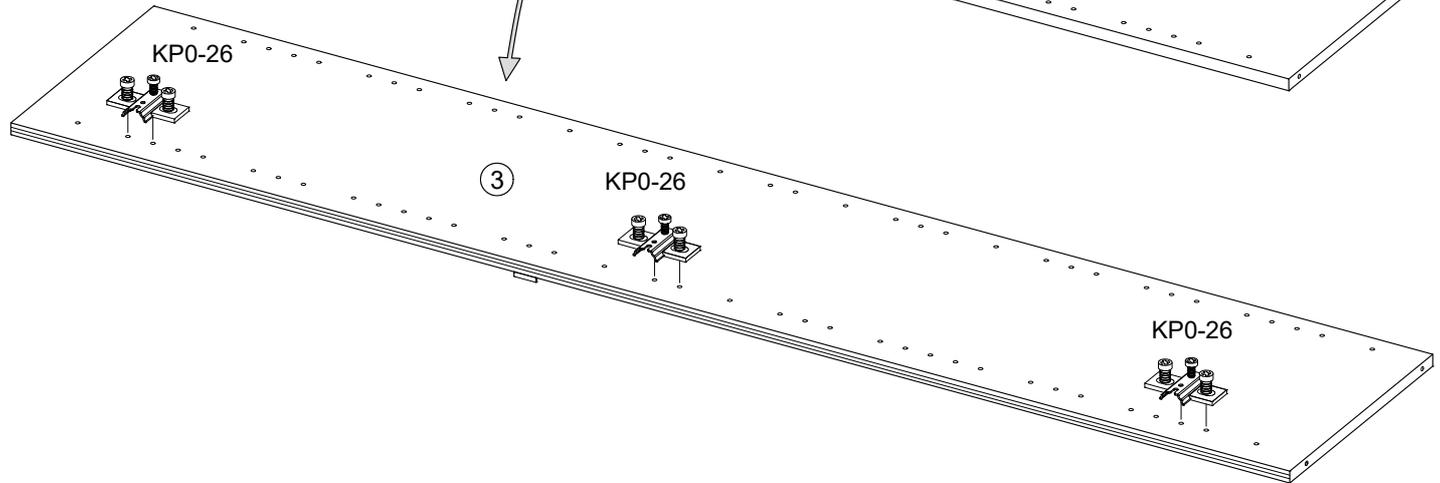
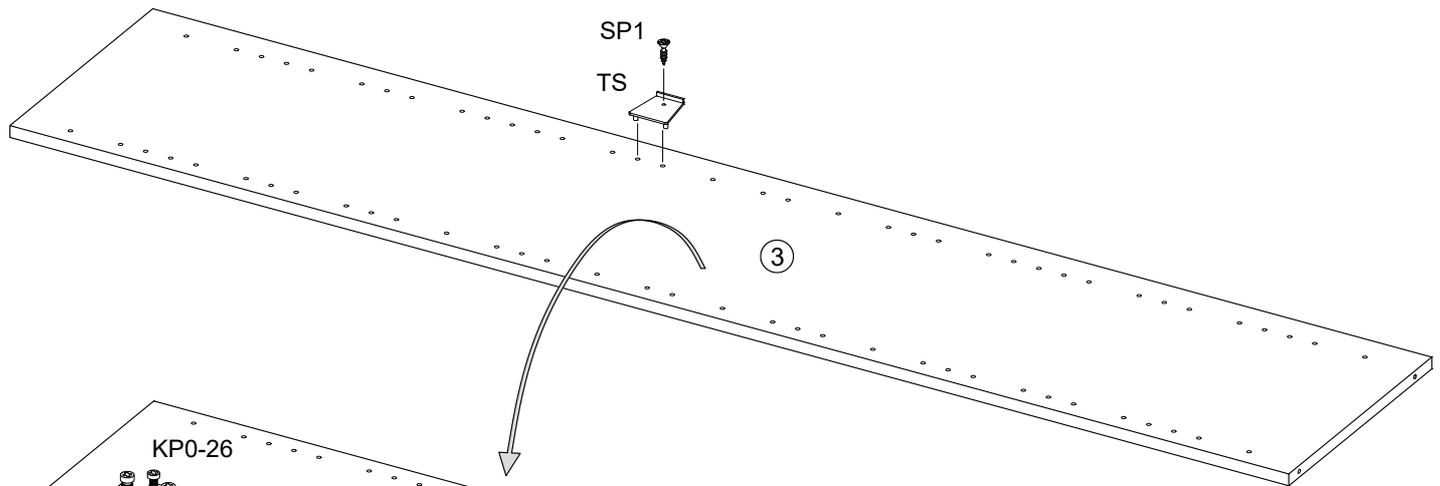
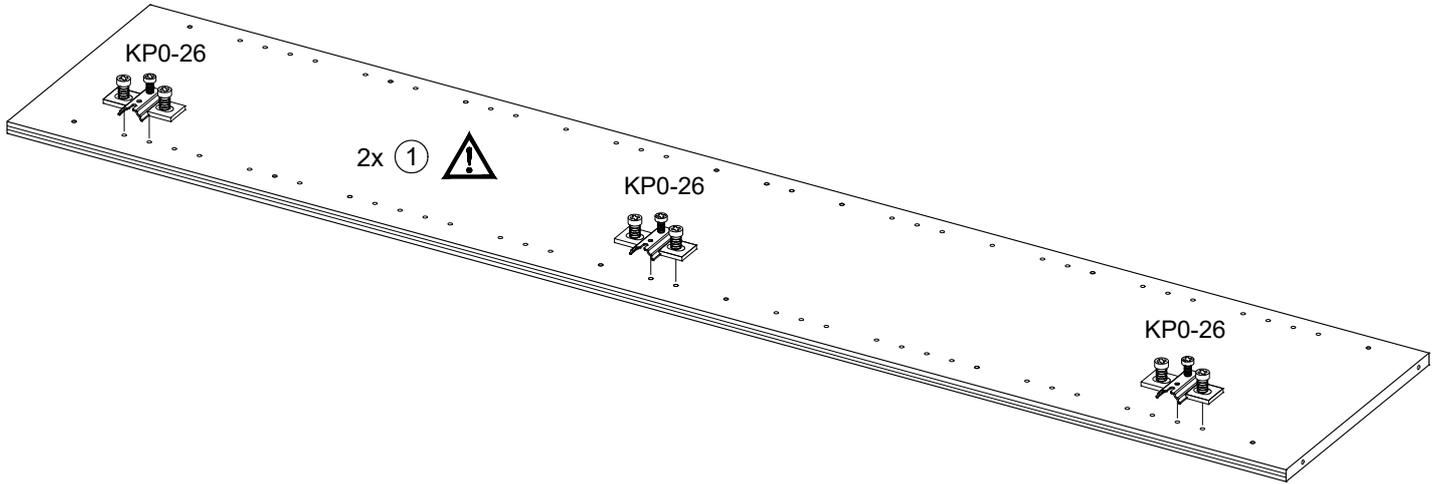
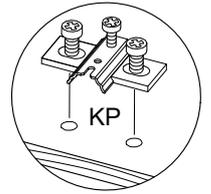


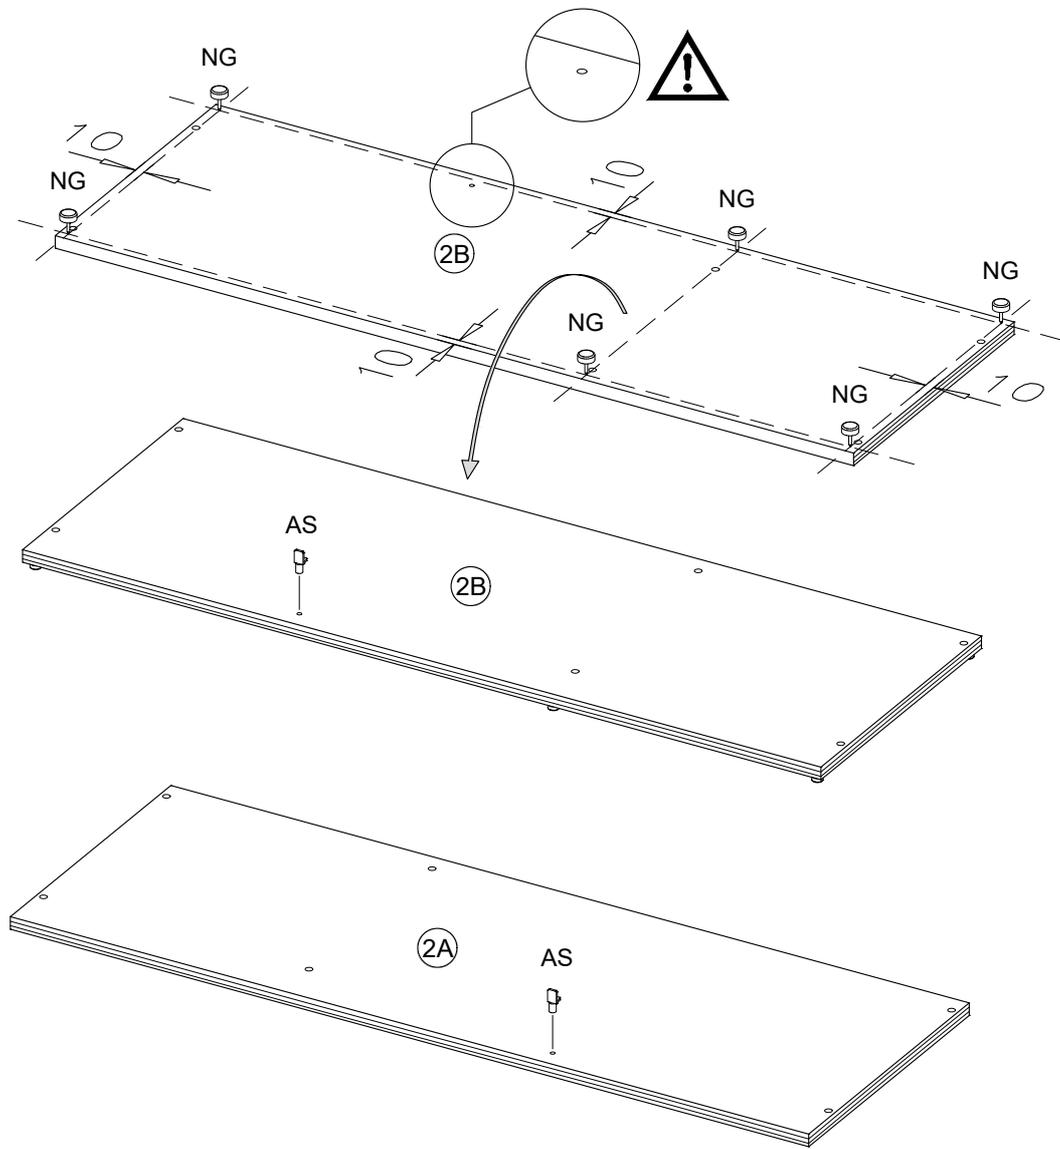
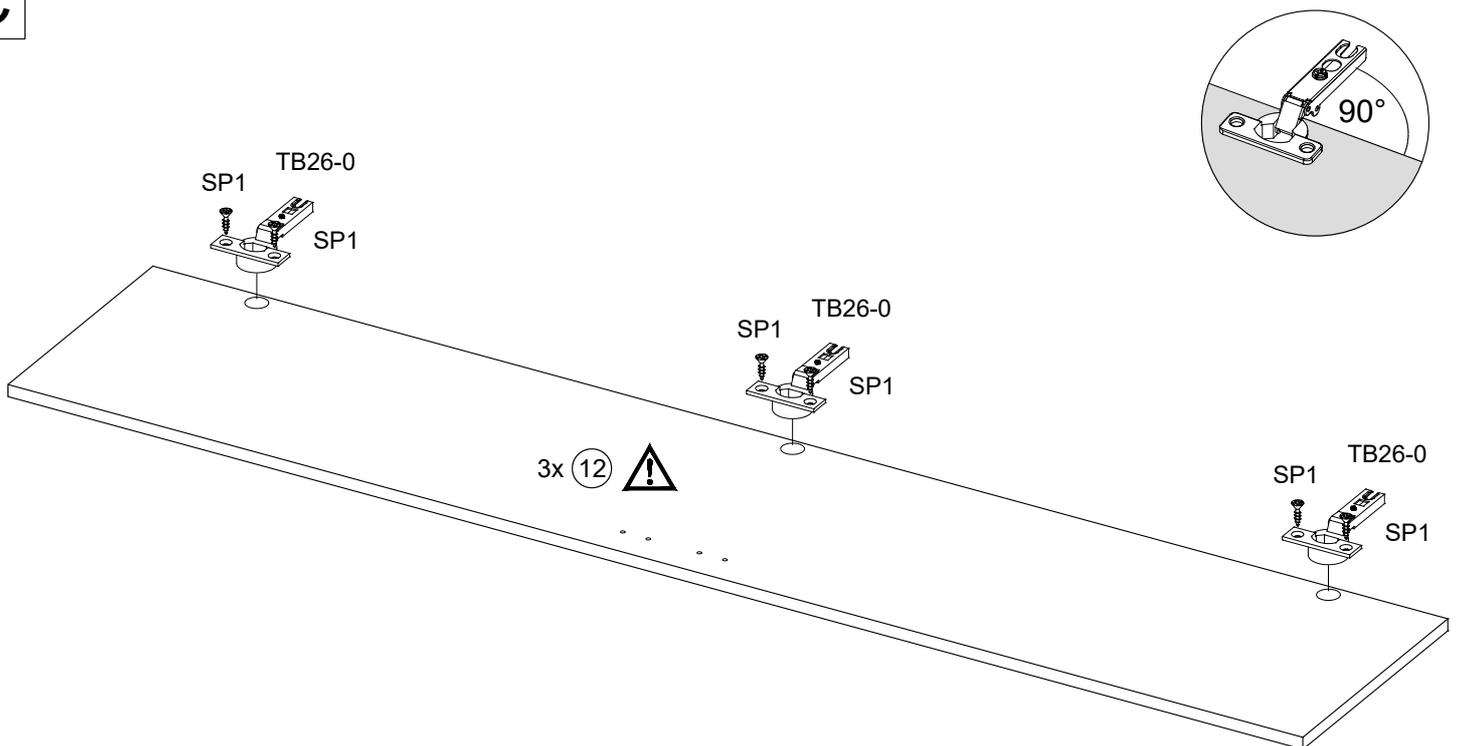
6,3x50  12x VBS	 6x ADK-VBS
 1x ADK-5	 24x BT
 9x TB26-0	 9x KP0-26
3,5x13  19x SP1	 6x NG
 3x GLD-128	4x27  6x RWS27
 50x NA	 1x WBF
 1x NH	 2x AS
4x15  6x RWS15	 1x TS

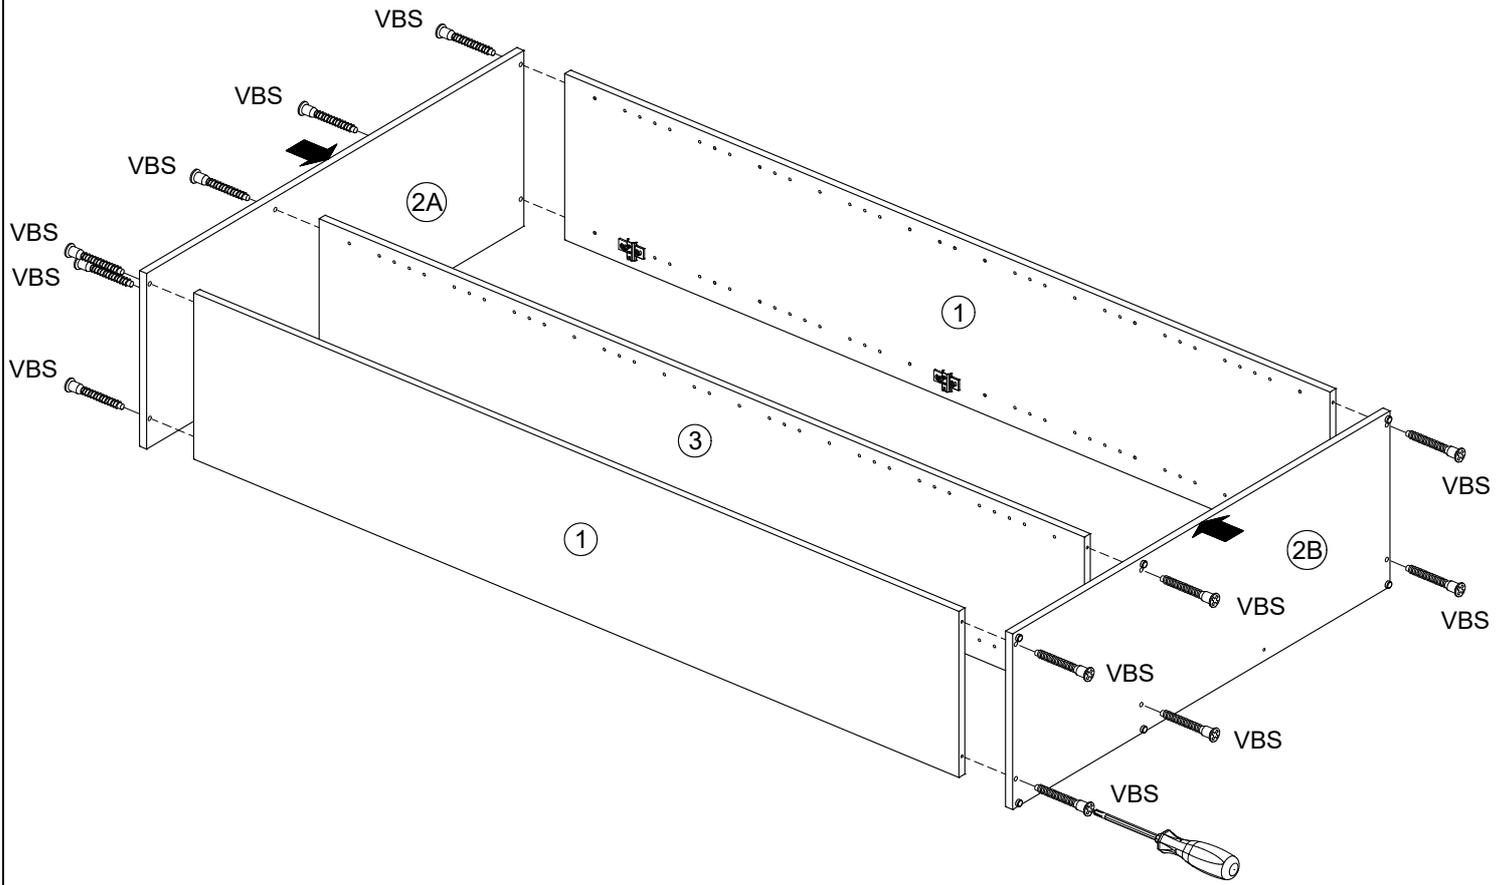
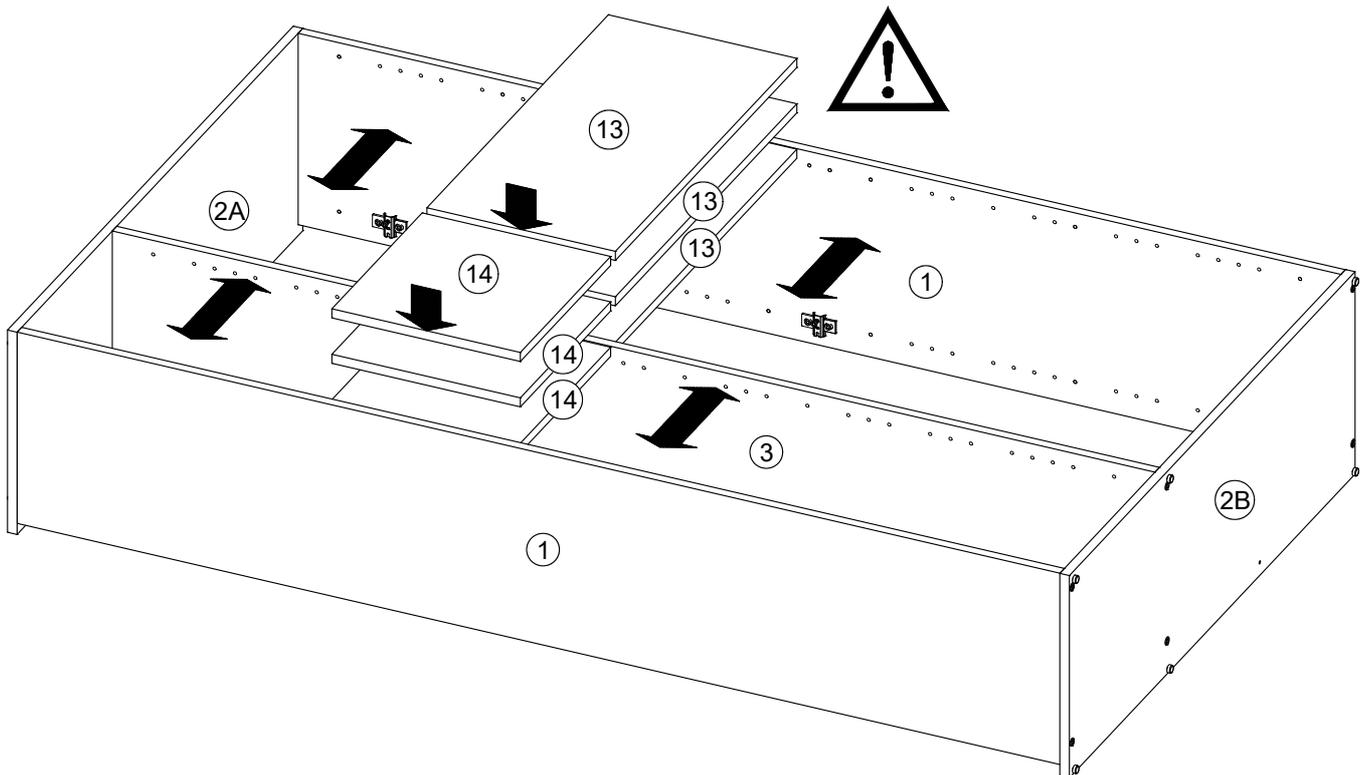




A

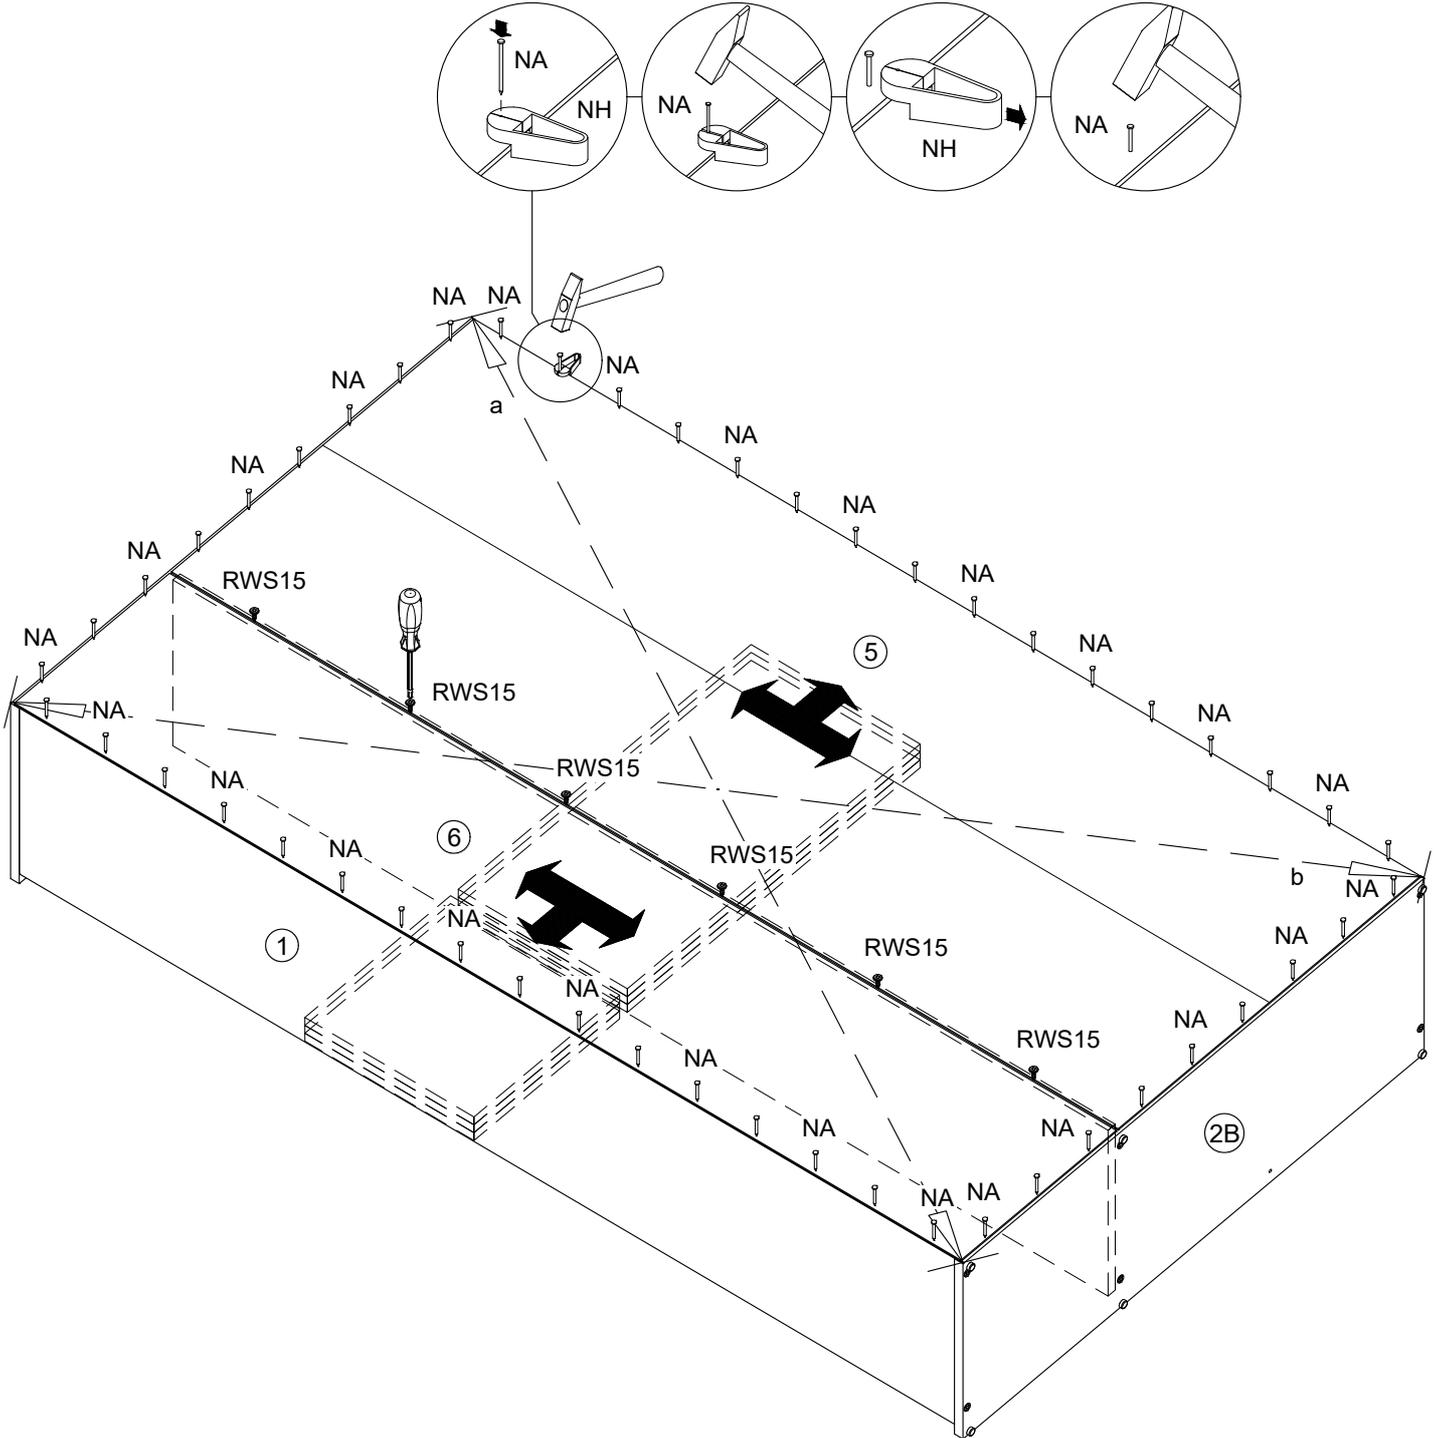
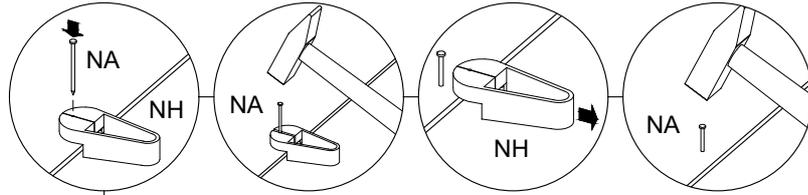

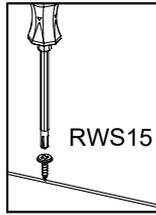
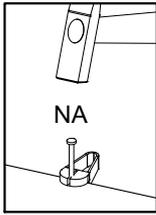


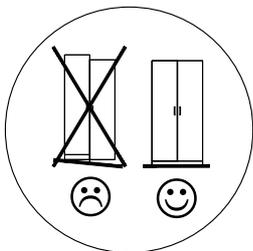
**B****C**

**D****E**

1

2



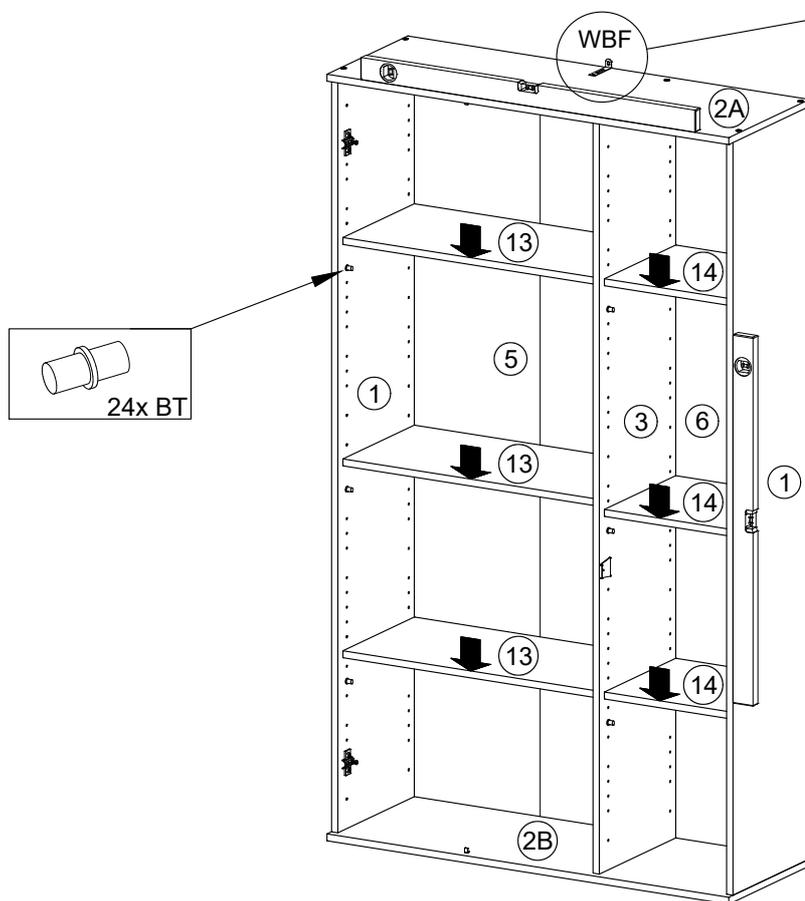
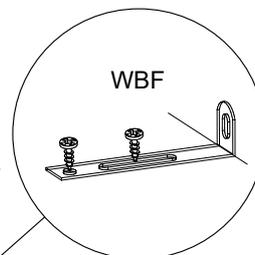
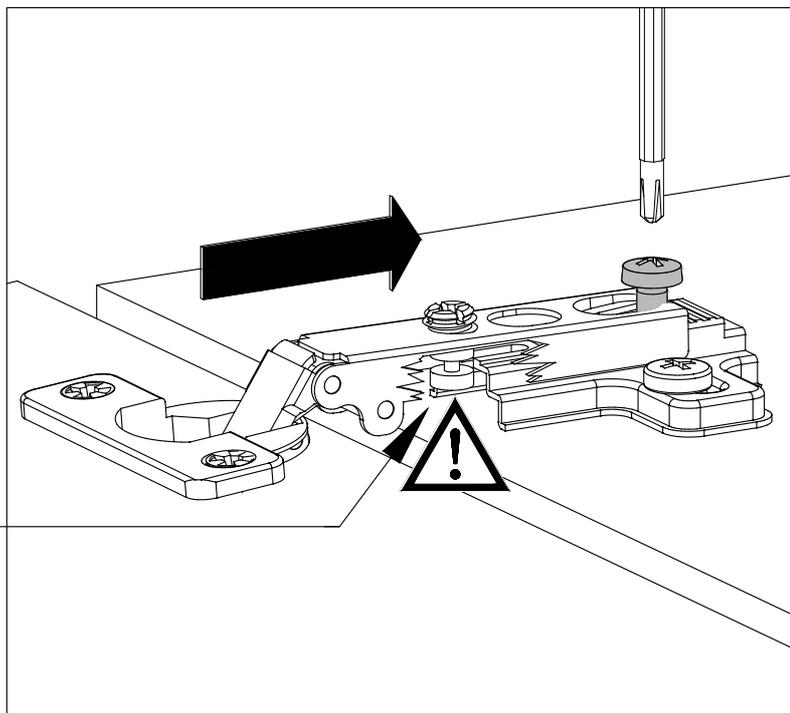
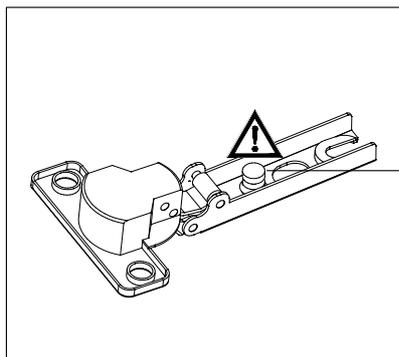

**G**

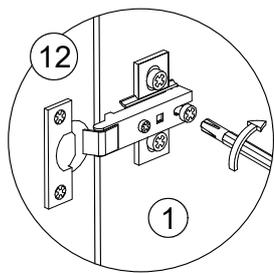
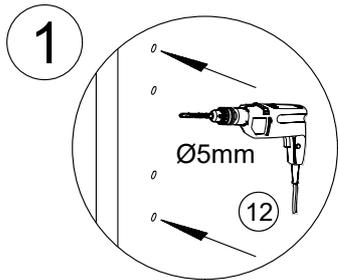

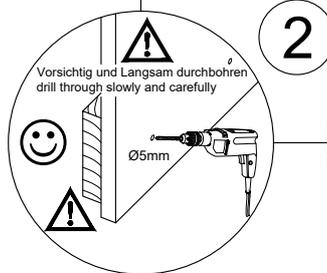
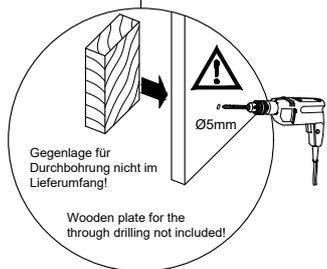
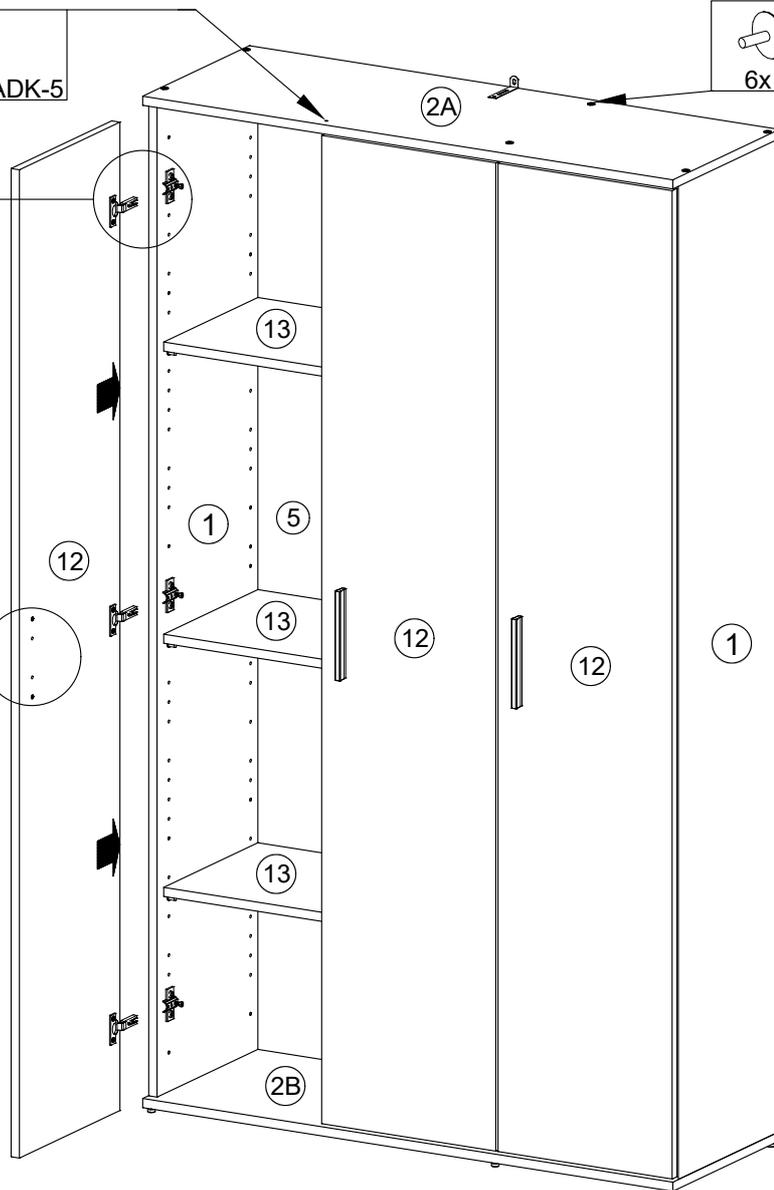
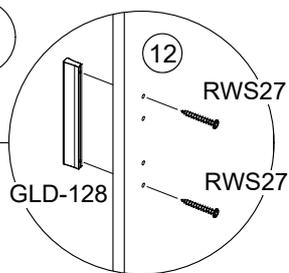
Befestigungsmaterial für die Kippsicherung ist der Wand eigenschaft anzupassen!

Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.

matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur

Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!

**H**

**I****9x****3x****2****J**