



(D) Videounterstützte Montageanleitung

(TR) Video destekli kurulum talimatları

(RU) инструкция по монтажу с помощью видеосигнала

(RO) Instrucțiuni de instalare acceptate video

(GB) Video-assisted assembly instructions

(IT) Istruzioni di montaggio video-assistite

(CZ) Instalační pokyny podporované videem



(PL) Instrukcje montażu wspomagane sygnałem wizyjnym

(FR) Instructions de montage assistées par vidéo

(NL) Video-ondersteunde montage-instructies

(HU) Video-támogatott telepítési utasítások







(SK) Inštalčné pokyny podporované videom

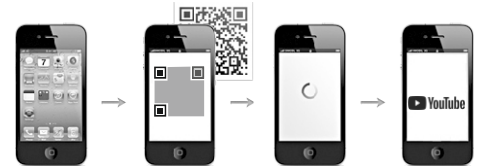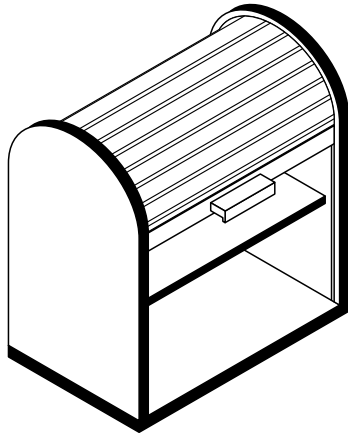

Art.-Nr.: **780-RL_69-86**
Jalousieschrank

REPC-Nr.:





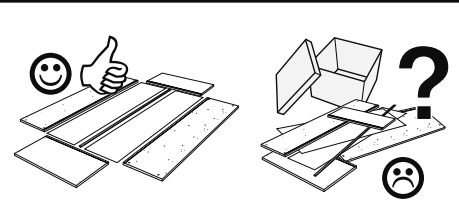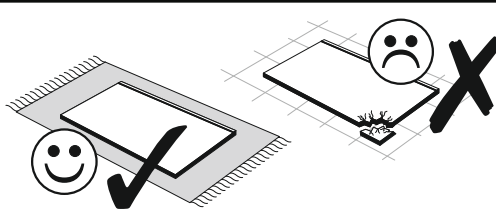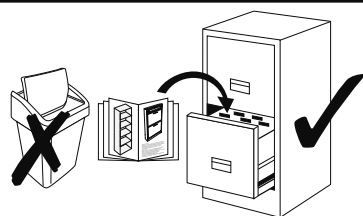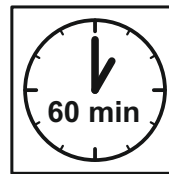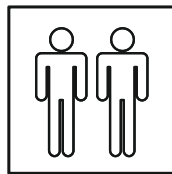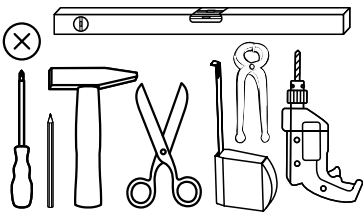



Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба



SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>




BT1-00159 Colli 2/2


B01-30 12x  3x16	B01-37 1x  4.5x25	B01-90 4x  3.5x20	B01-122 4x  4x13	B01-190 2x  M4x20
B02-10 12x 	B02-20 12x 	B02-160 2x 		




▶ SCAN ME

BT1-00160 Colli 2/2


B02-170 4x 	B06-401 1x 	B06-490 1x 
--	--	--




Colli 1/2

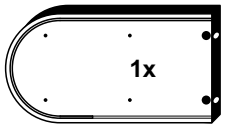


818 x 432
(FTx-000238) +
(Z17-70-1206_K1008)




654 x 320
(FTx-000241)




648 x 60
(FTx-000242)

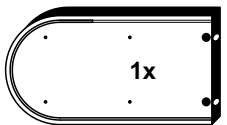


818 x 432
(FTx-000238) +
(Z17-60-1206_K1008)




654 x 320
(FTx-000241)



675 x 327
(HTR-00411)




500 x 50
(Z02-500)






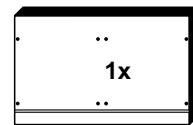


693 x 432
(FTx-000240)


Colli 2/2

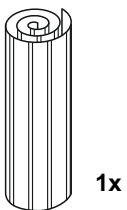


1140 x 668
(Z18-15-1140)

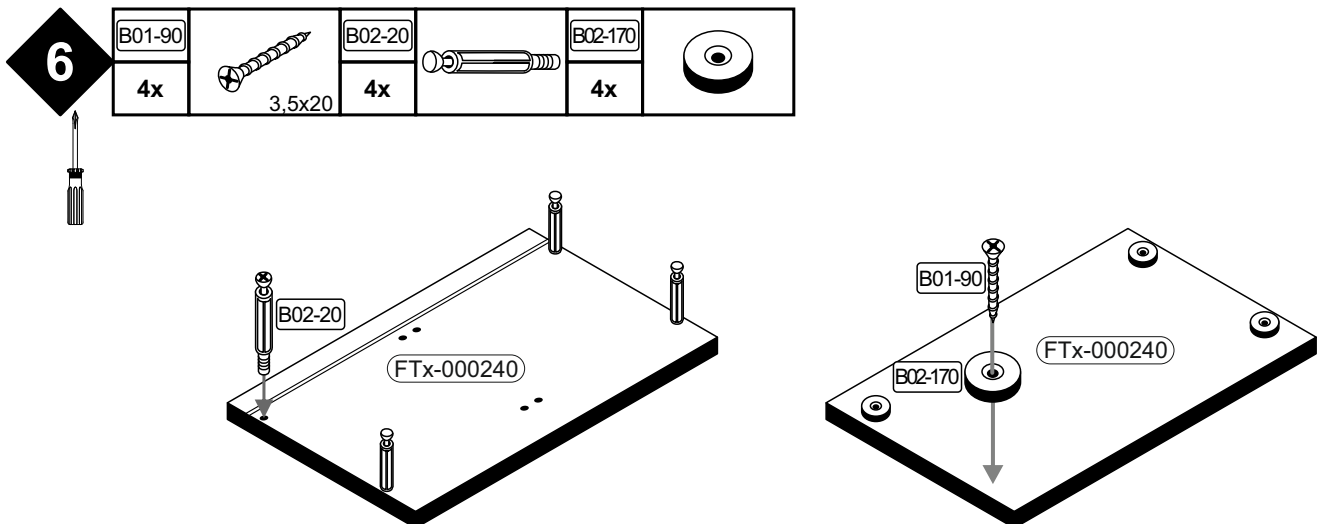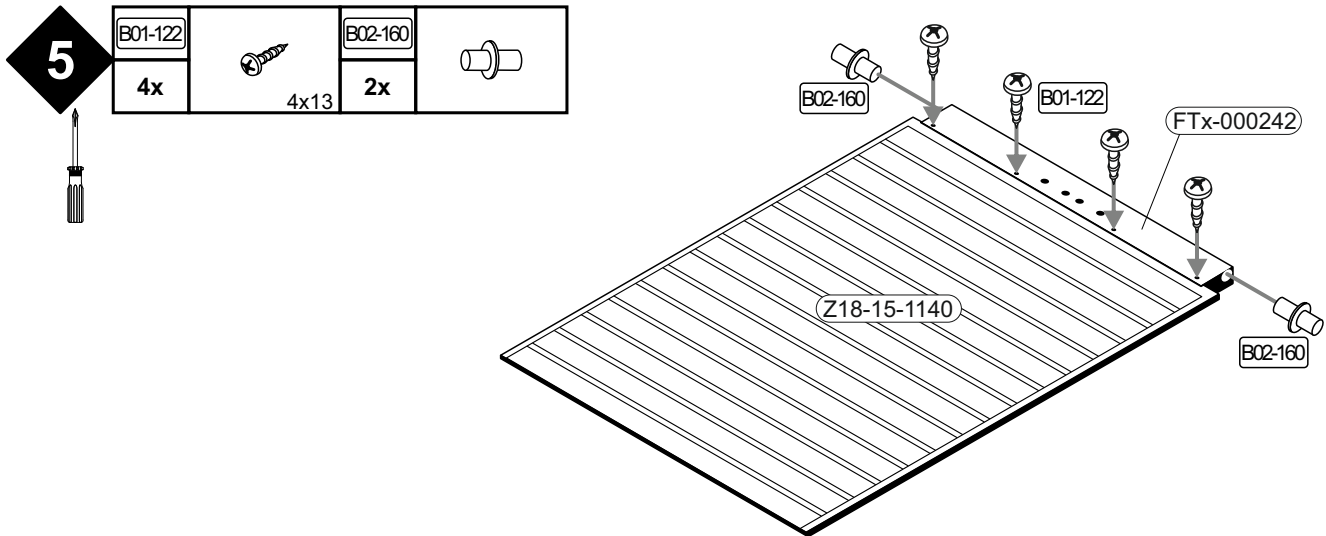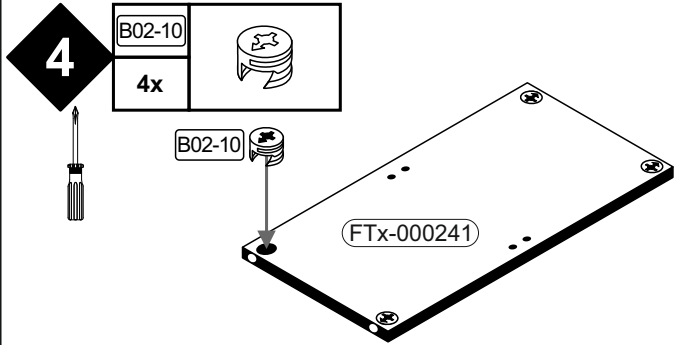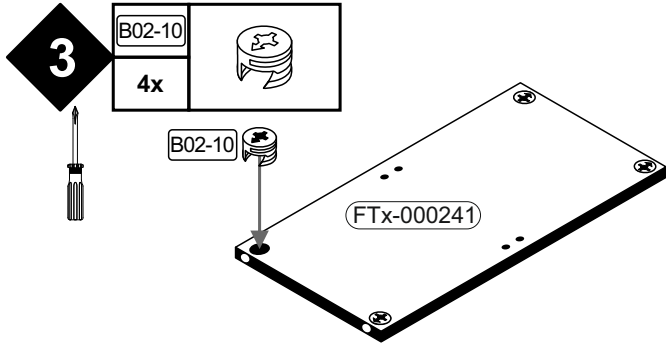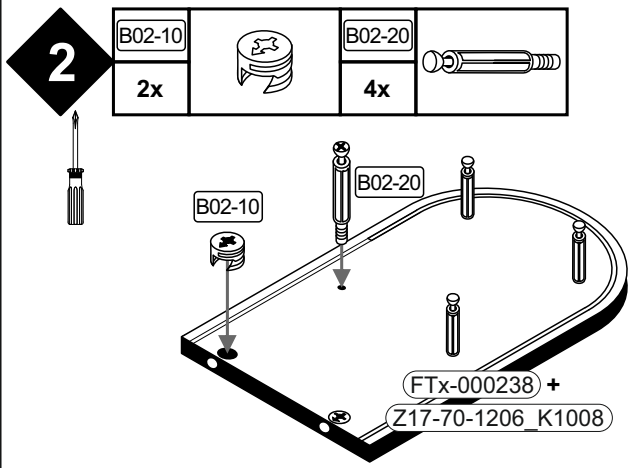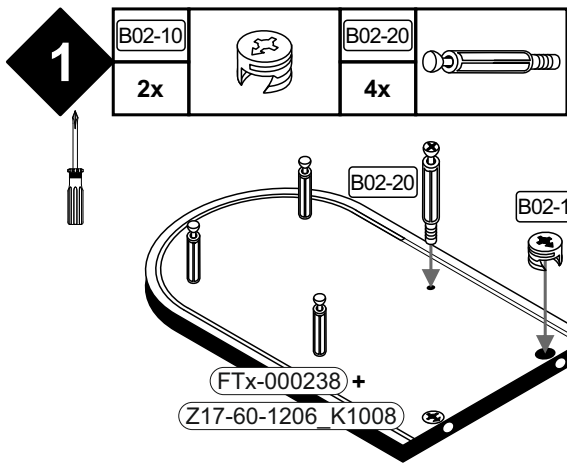



7

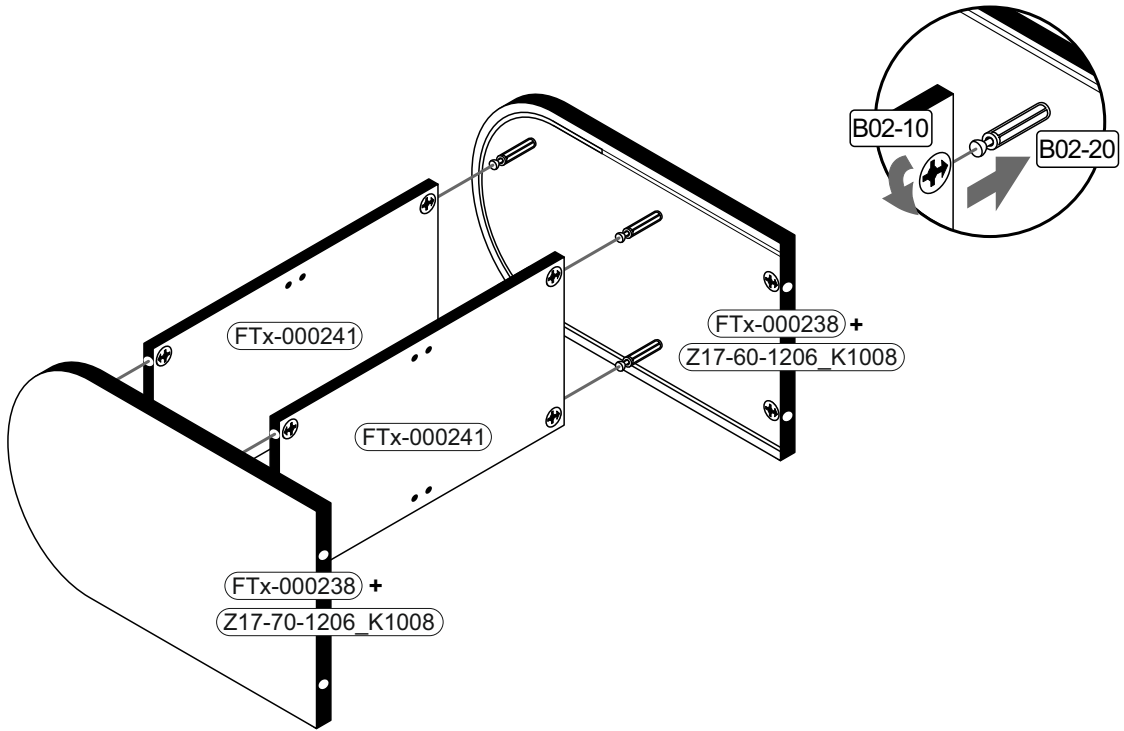


8




B01-30	
12x	3x16

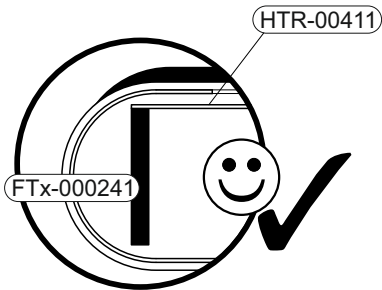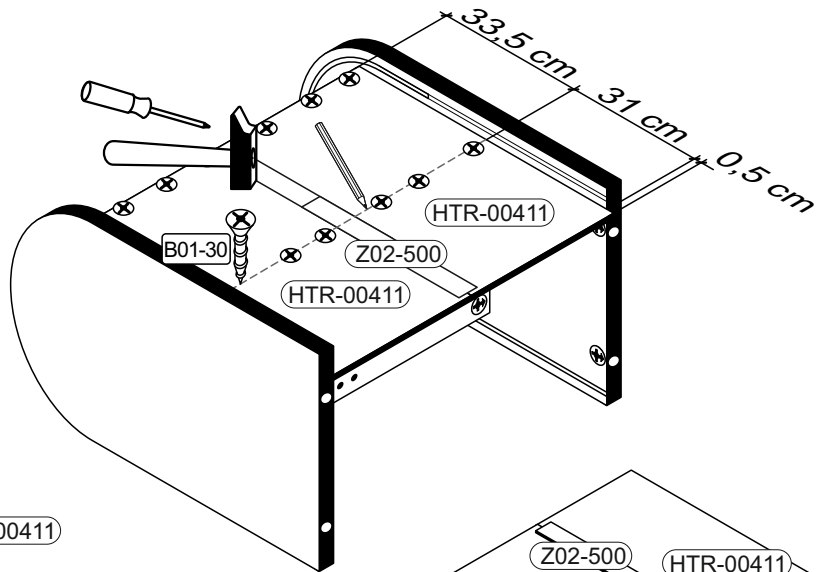


Die Rückwand (HTR-00411) muss oben bündig am Bauteil (FTx-000241) montiert werden.

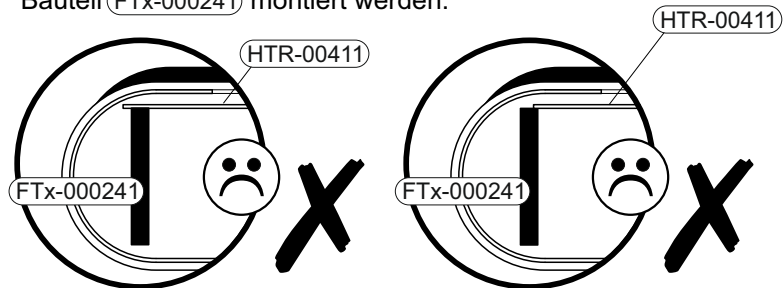

9

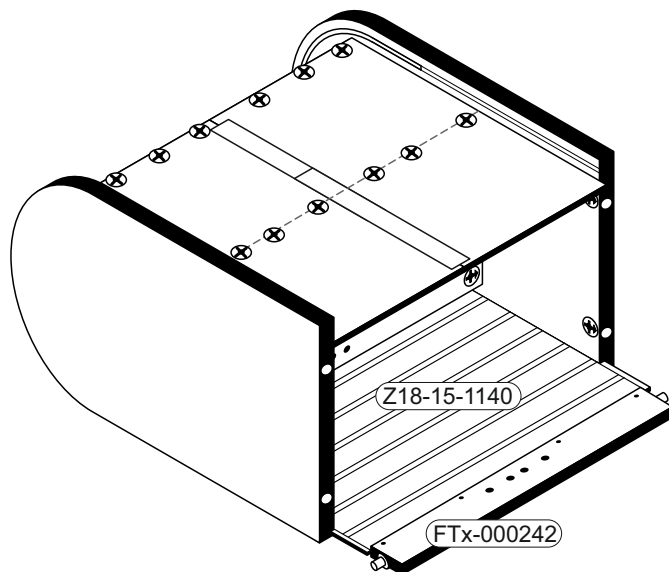


10

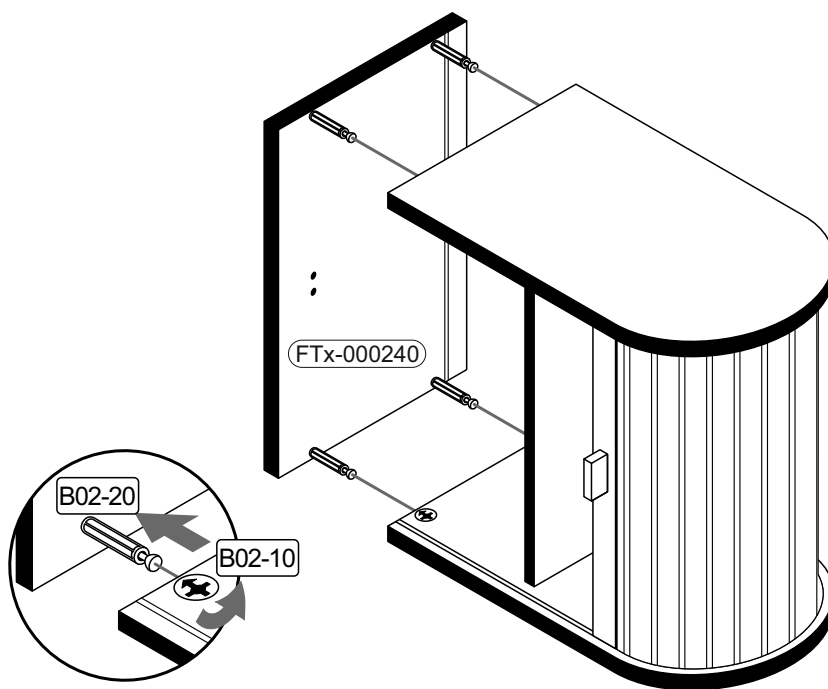



11




B01-37		B01-190		B06-401		B06-490	
1x	4,5x25	2x	M4x20	1x		1x	

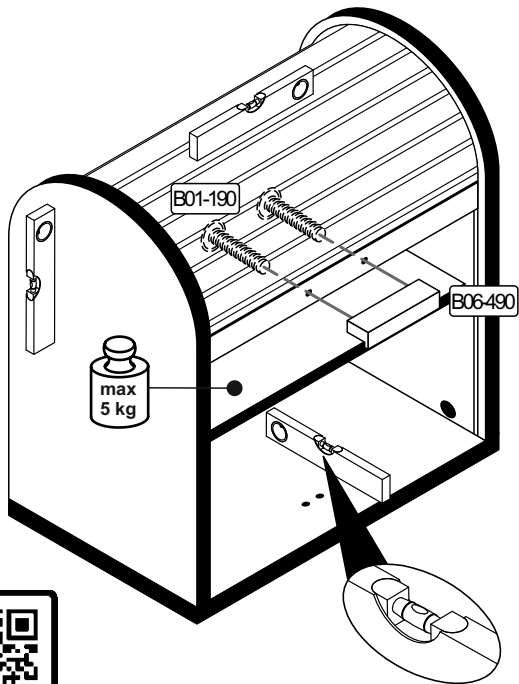



▶ SCAN ME

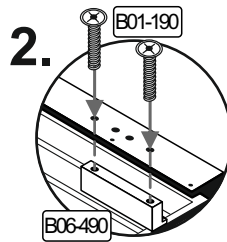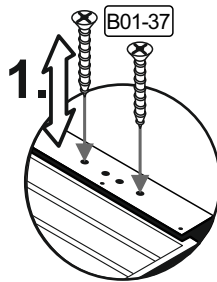

▶ SCAN ME

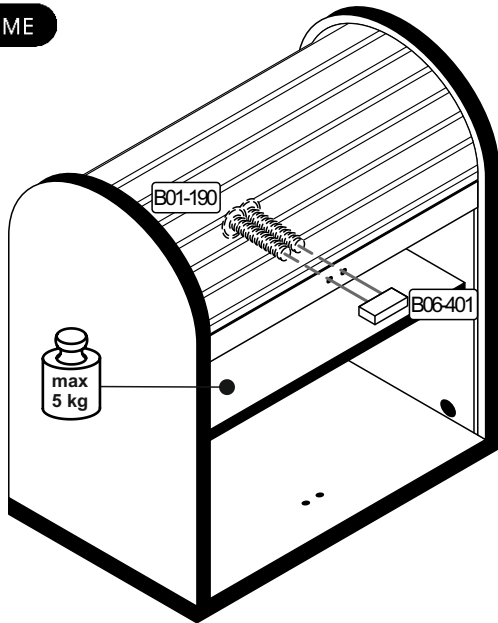

▶ SCAN ME

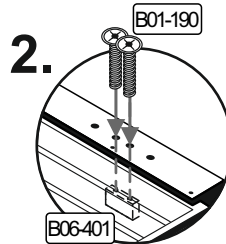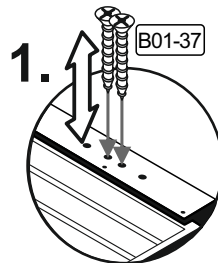

▶ SCAN ME

**Sicherheitshinweise • Safety instructions •
 Consignes de sécurité • Güvenlik uyarıları •
 Norme di sicurezza • Veiligheidsinstructies •
 Правила техники безопасности •
 Bezpečnostní pokyny • Biztonságtechnikai
 tudnivalók • Instrucțiuni referitoare la siguranță •
 Wskazówki bezpieczeństwa • Bezpečnostné
 pokyny**

