



CHAMBORD

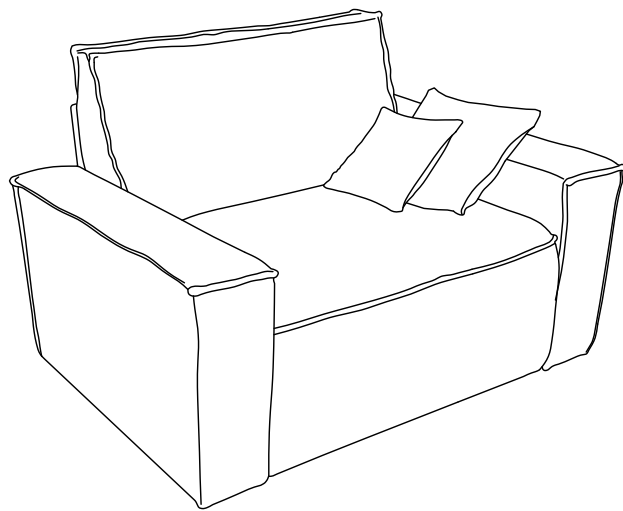

07.04.2025

80

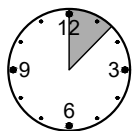

ca.0,5H

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimati

(GB) Assembly Instructions

(IT) Istruzioni di montaggio

(PL) Instrukcja montażu






(SK) Návod na montáž

(RO) Instrucțiuni de montaj

(RU) Инструкции по монтажу



Internationale Möbel Vertriebsgesellschaft
mbH & Co.KG
Pyrmonter Str. 132839 Steinheim
service@int-moebel-vertrieb.de

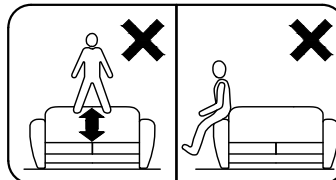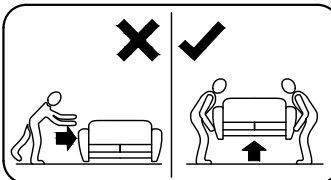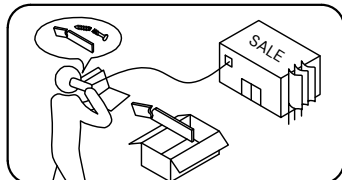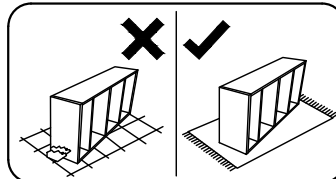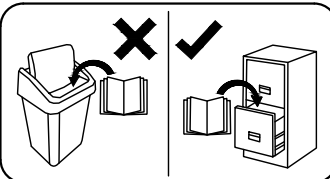

Coli:




10 1/1

2 1/1


3 1/1

4 1/1


5 1/1

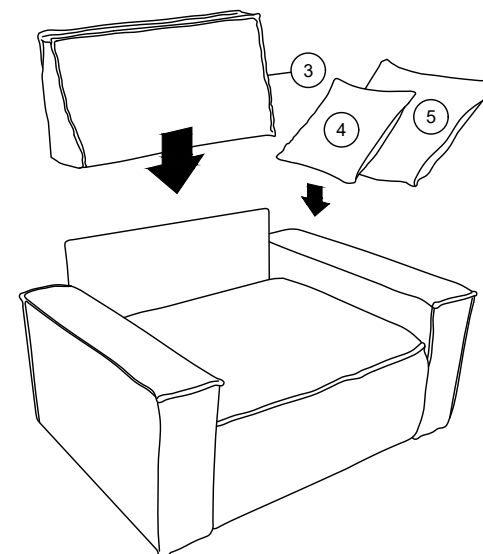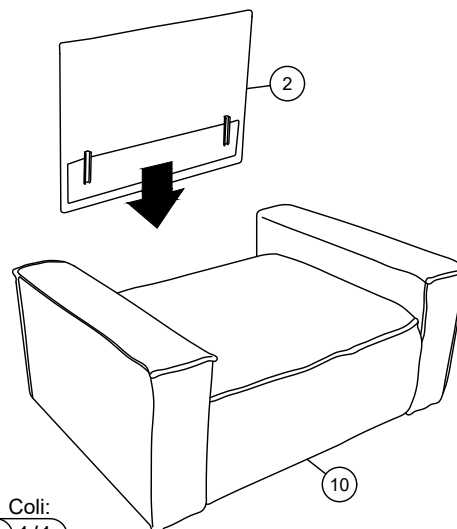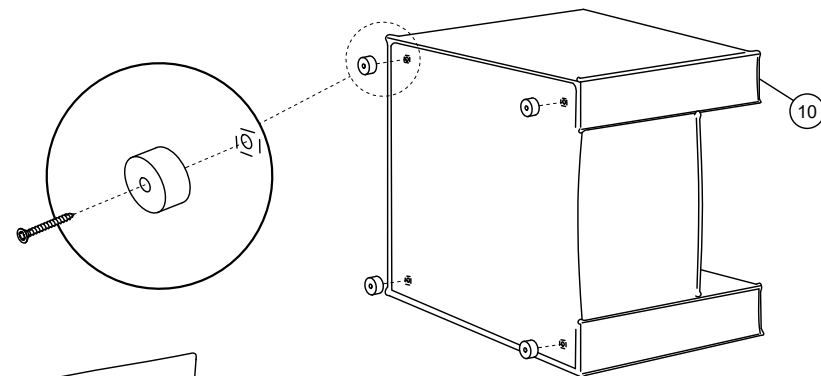


h=25 mm

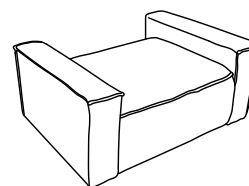

10



2




3




4



5

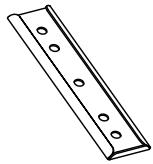


A X...

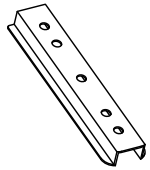


B X...




C X...

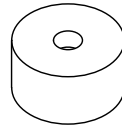







D X...

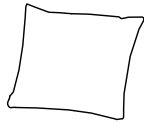


4 X...

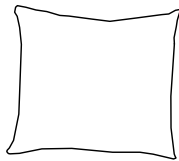

5 X...

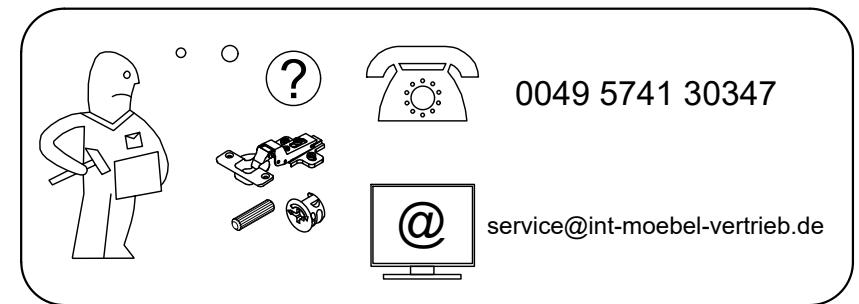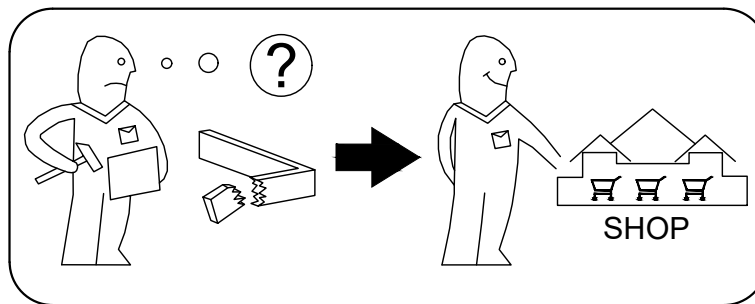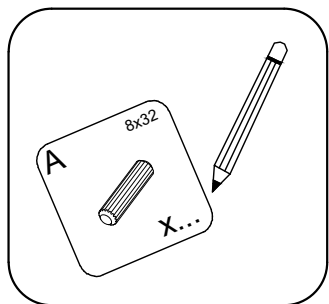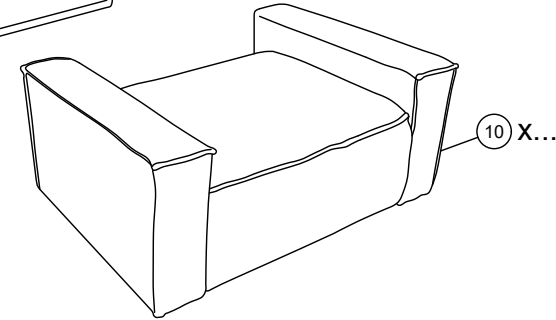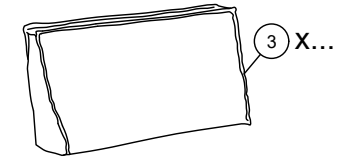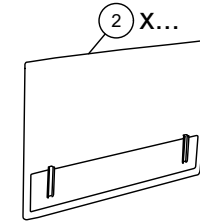


SHERWOOD / CHAMBORD

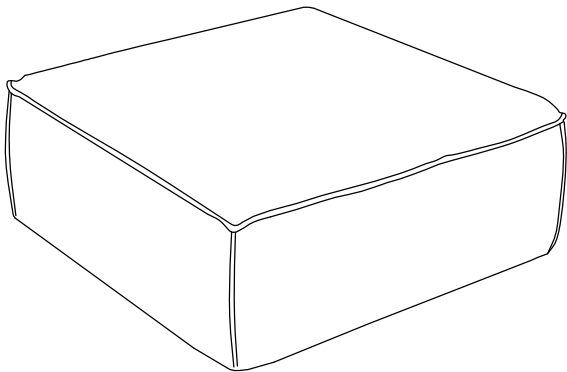

80

22.04.2025

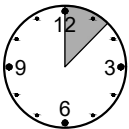

ca.0,5H

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly Instructions

(IT) Istruzioni di montaggio

(PL) Instrukcja montaży






(SK) Návod na montáž

(RO) Instrucțiuni de montaj


(RU) Инструкции по монтажу



Internationale Möbel Vertriebsgesellschaft
mbH & Co.KG
Pyrmonter Str. 132839 Steinheim
service@int-moebel-vertrieb.de

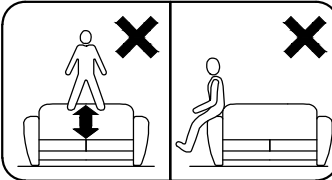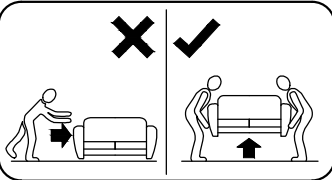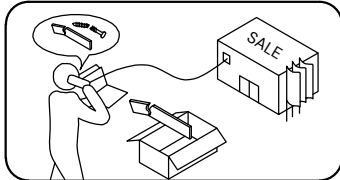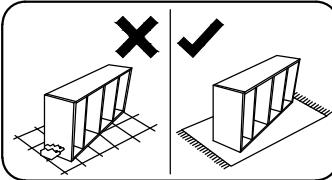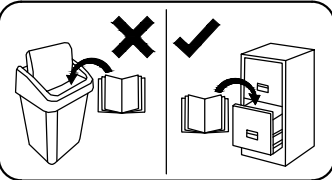

Coli:
10 1/1

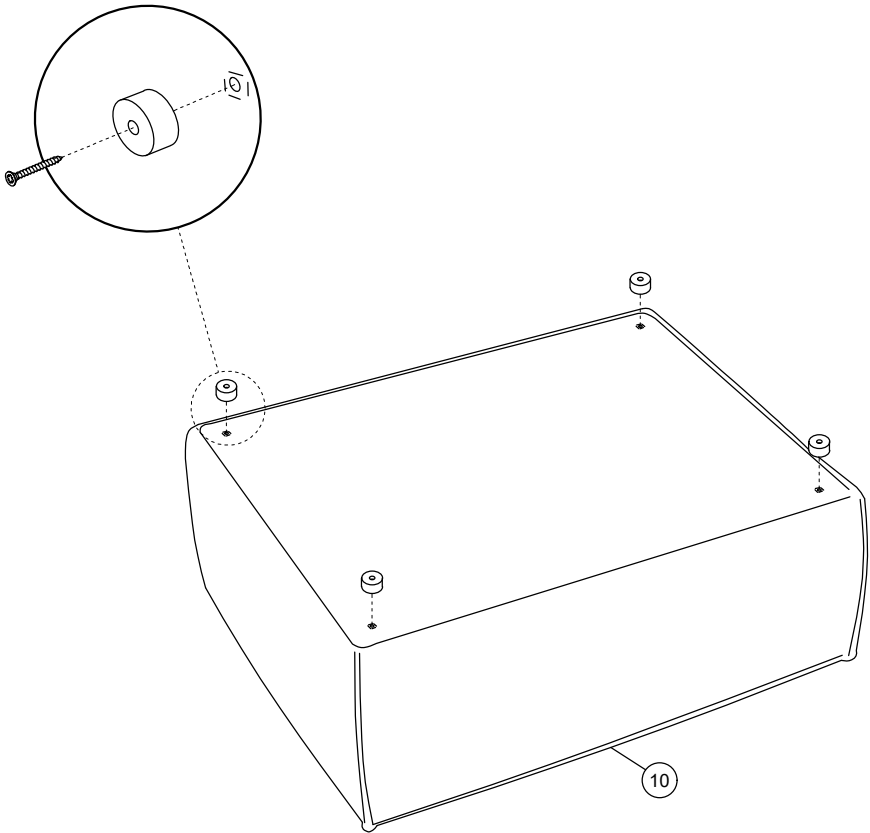

h=25 mm



x4



x4

